



Manuals.plus /

› **Outsunny /**

› Outsunny Single Person Camping Tent Cot Instruction Manual (Model USA20-0860131)

Outsunny USA20-0860131

Outsunny Single Person Camping Tent Cot Instruction Manual

MODEL: USA20-0860131

Brand: Outsunny

Introduction

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Outsunny Single Person Camping Tent Cot, Model USA20-0860131. This product combines a comfortable elevated cot with a protective tent, designed for single-person use in fair weather conditions. Please read this manual thoroughly before use to ensure proper setup and safe operation.

Safety Information

- The tent is intended for use in fair weather only.
- Use a ground cover and rainfly (not included) for rain protection, as the tent is not waterproof.
- Do not use this tent in strong wind, hail, or snow.
- Ensure all components are securely assembled before use.
- Do not exceed the maximum weight capacity of 225 lbs.
- Keep away from open flames and heat sources.

Package Contents

Your Outsunny Single Person Camping Tent Cot package includes the following components:

- Folding Cot
- Tent Fabric
- Tent Poles (Fiberglass)
- Carry Bag

Setup Instructions

Follow these steps to set up your camping tent cot:

Step 1: Unpack and Prepare

Remove all components from the carry bag. Lay the folded cot on a flat, clear surface.

Your browser does not support the video tag.

Video: Outsunny Camping Bed Setup Guide. This video demonstrates the assembly of the camping bed and tent.



Image: The Outsunny Camping Tent Cot packed in its portable carry bag.

Step 2: Unfold the Cot

Carefully unfold the cot until it is fully extended and the legs are locked into place. Ensure all cot legs are stable on the ground.



2 IN 1 DESIGN



Tent



Camping Cot

Image: The camping cot unfolded, ready for tent attachment.

Step 3: Assemble the Tent

Assemble the fiberglass tent poles according to the diagram. Insert the poles into the designated sleeves on the tent fabric. Secure the tent to the cot using the integrated straps and buckles. Ensure the tent is centered and taut over the cot.



Image: Detailed view of tent features, including securing straps and sturdy metal base.

Step 4: Final Adjustments

Check all zippers, windows, and securing points. Adjust as needed for optimal ventilation and stability. The tent features two two-layer windows for airflow and a large zippered door for easy access.



Image: The fully assembled Outsunny Camping Tent Cot in an outdoor setting.

Operating Instructions

- **Entry and Exit:** Use the large zippered door for convenient entry and exit.
- **Ventilation:** The tent is equipped with two two-layer windows. Open the outer layer for mesh ventilation to allow airflow and keep insects out. Close both layers for privacy and warmth.
- **Comfort:** The elevated cot design keeps you off the cold, damp ground, providing a more comfortable sleeping experience.
- **Storage:** Utilize the space underneath the cot for storing personal belongings, keeping them dry and organized.

Maintenance

- **Cleaning:** Hand wash the tent fabric with mild soap and water. Do not machine wash or use harsh detergents.
- **Drying:** Ensure the tent and cot are completely dry before folding and storing to prevent mold and mildew.

- **Storage:** Store the tent cot in its original carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect the fabric for tears, the zippers for smooth operation, and the cot frame for any damage or loose connections.

Troubleshooting

Problem	Possible Cause	Solution
Tent fabric tearing during setup.	Excessive force applied to fabric or poles.	Handle with care. Ensure poles are inserted smoothly without forcing. Check for sharp edges on poles or cot frame.
Tent is not stable.	Improper cot setup or tent not securely attached.	Ensure cot legs are fully extended and locked. Verify all tent straps and buckles are fastened tightly to the cot frame.
Water leakage during rain.	Tent is not waterproof; used without additional protection.	The tent is designed for fair weather. For rain, use a separate ground cover and rainfly (not included) for added protection.
Difficulty zipping/unzipping.	Fabric caught in zipper or zipper misalignment.	Gently pull fabric away from the zipper path. Ensure the zipper is aligned before pulling. Avoid forcing the zipper.

Specifications

Feature	Detail
Brand	Outsunny
Model Number	USA20-0860131
Tent Dimensions (L x W x H)	76" x 30.25" x 46.5" (193 cm x 77 cm x 118 cm)
Cot Dimensions (L x W x H)	76" x 30.75" x 17" (193 cm x 78 cm x 43 cm)
Item Weight	19.36 lbs (8.78 kg)
Occupancy	1 Person
Weight Capacity	225 lbs (102 kg)
Material Type	190T Polyester Taffeta, Oxford Fabric, Fiberglass Poles, Steel Frame
Color	Dark Green
Seasons	3 Season (Spring, Summer)
Water Resistance Level	Water Resistant (not waterproof)
Number of Doors	1
Number of Windows	2



Image: Detailed dimensions of the tent cot.

Warranty and Support

This Outsunny Camping Tent Cot comes with a **1 Year Warranty Against Manufacturer Defects**. For warranty claims, product support, or inquiries, please contact Aosom LLC, the manufacturer, directly. Please retain your proof of purchase for warranty validation.

Manufacturer: Aosom LLC

