

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [ZdalaMit RC282 Replacement Remote Control User Manual for TCL Roku TVs](#)

ZdalaMit RC282

ZdalaMit RC282 Replacement Remote Control User Manual

For TCL Roku TVs

INTRODUCTION

This manual provides instructions for the ZdalaMit RC282 Replacement Remote Control, designed for use with various TCL Roku TV models. This remote control offers a straightforward solution for replacing your original remote without the need for complex programming.



Image: Front view of the ZdalaMit RC282 Replacement Remote Control, showing all buttons including power, navigation, and dedicated app buttons.

SETUP

The ZdalaMit RC282 remote control is pre-programmed and does not require any additional setup or pairing with your TCL Roku TV. Simply install the batteries, and it will be ready for use.

- 1. Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide or press the latch to open it.
- 2. Insert Batteries:** Insert two (2) 1.5V AAA alkaline batteries into the compartment. Ensure the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
- 3. Close the Battery Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.
- 4. Test the Remote:** Point the remote control towards your TCL Roku TV and press the Power button. The TV should respond.

Note: Batteries are not included with the remote control.



Image: Angled view of the ZdalaMit RC282 Remote Control, highlighting its ergonomic design.

OPERATING INSTRUCTIONS

The ZdalaMit RC282 remote control provides standard functions for navigating your TCL Roku TV. Familiarize

yourself with the button layout for optimal use.

- **Power Button ()**: Turns the TV on or off.
- **Back Button (←)**: Returns to the previous screen or menu.
- **Home Button (△)**: Navigates to the Roku Home screen.
- **Directional Pad (Up, Down, Left, Right)**: Used to navigate through menus and content.
- **OK Button**: Selects highlighted items or confirms actions.
- **Rewind (◀◀), Play/Pause (▶), Fast Forward (▶▶)**: Control media playback.
- **Replay Button (⌚)**: Jumps back a few seconds in video playback.
- **Star Button (*)**: Accesses options or settings within certain apps or menus.
- **Volume Up/Down Buttons**: Located on the side of the remote, control the TV's volume.
- **Mute Button**: Located on the side of the remote, mutes or unmutes the TV audio.
- **Dedicated App Buttons (Netflix, Sling, Hulu, Amazon)**: Provide quick access to these streaming services.



Image: A hand holding the ZdalaMit RC282 Remote Control, pointing towards a TCL Roku TV, demonstrating typical usage.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning**: Use a soft, dry cloth to clean the surface of the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using harsh chemicals or abrasive cleaners.

- Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your ZdalaMit RC282 remote control, refer to the following common solutions:

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> Ensure batteries are inserted correctly with the correct polarity. Replace old batteries with new 1.5V AAA alkaline batteries. Check for any obstructions between the remote and the TV's infrared sensor. Ensure you are within the operating range of the TV.
Some buttons are not working.	<ul style="list-style-type: none"> Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. Replace batteries, as low power can sometimes affect specific functions.
Remote does not control Roku player/box/stick.	This ZdalaMit replacement remote is designed specifically for TCL Roku TVs and is not compatible with standalone Roku players, Roku boxes, or Roku sticks. Please ensure your device is a TCL Roku TV.

SPECIFICATIONS

Feature	Detail
Product Dimensions	6 x 1.5 x 0.5 inches (approximately 15.24 x 3.81 x 1.27 cm)
Item Weight	1.25 ounces (approximately 35.4 grams)
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Compatibility	TCL Roku TV models, including: 32S301, 40FS3700, 55S401, 65S401, 43S403, 49S403, 55S403, 65S403, 43S515, 49S515, 55S515, 65S515, 49S405, 32S305, 40FS4610R, 43S405, 32S3750, 40S305, 43S305, 55S405, 32FS4610R, 32S800, 32S3850B, 55R615, 65R615, 55P605, 55C803, 65C803, 75C803, 40S303, 43S303, 49S303, 40S3750, 48S3750, 55S3750, 40S3800, 55US57, 50UP120, 28S3750, 49S305, 65S405, 50FS3800, 40FS3750, 32S3850P, 40FS3850, 50FS3850, 50S3800, 50FS3750, 55FS3800, 50FS3700, 50FS3750, 32FS3700, 43FP110, 49FP110, 55FS3850, 40FS3800, 48FS3750, 55FS4610R, 55UP120, 32S4610R, 55US5800, 65US5800, 55FS3750, 32S3700, 32S3800, 48FS3700, 48FS4610R, 55FS3700, 32S850, 32S3850, 32S3850A, 28S305.
Special Feature	Pre-Programmed (No pairing required)



Image: ZdalaMit RC282 Remote Control shown with its approximate dimensions (length, width, thickness).

WARRANTY AND SUPPORT

While specific warranty details are not provided, for any questions or concerns regarding your ZdalaMit RC282 Replacement Remote Control, please contact the seller or manufacturer directly. They can provide assistance with product inquiries, troubleshooting, or potential replacements.

For support, refer to the contact information provided at the point of purchase or on the product packaging.

