

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› **ZdalaMit Replacement Remote Control User Manual for Polaroid UHD LED TVs (Models: 43GSR4100KL, 49GSR4100KL, 50GSR4100KL, 55GSR4100KL, 65GSR4100KL, 75GSR4100KL, 49GSR4100XL)**

ZdalaMit 43GSR4100KL, 49GSR4100KL, 50GSR4100KL, 55GSR4100KL, 65GSR4100KL, 75GSR4100KL, 49GSR4100XL

ZdalaMit Replacement Remote Control User Manual for Polaroid UHD LED TVs

Models: 43GSR4100KL, 49GSR4100KL, 50GSR4100KL, 55GSR4100KL, 65GSR4100KL, 75GSR4100KL, 49GSR4100XL

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ZdalaMit replacement remote control. This remote is designed to be compatible with various Polaroid UHD LED TV models, ensuring seamless control without the need for complex programming.

Please read this manual carefully to ensure proper use and to maximize the lifespan of your remote control.

SETUP

Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Simply point the remote control towards your Polaroid UHD LED TV and begin operating it.

OPERATING INSTRUCTIONS

This section details the functions of the various buttons on your ZdalaMit replacement remote control.



Image: Front view of the ZdalaMit remote control, displaying the layout of all control buttons.

Power (Red Button): Turns the TV on or off.

MTS: Multi-channel Television Sound. Cycles through available audio modes (e.g., Stereo, SAP).

CC: Closed Captioning. Toggles closed captions on or off.

EPG: Electronic Program Guide. Displays the TV program guide.

RECALL: Switches between the current and previously viewed channel.

Number Pad (0-9): Used to directly enter channel numbers or other numerical inputs.

-: Used for entering sub-channels (e.g., 7-1).

Input/Source Icon: Changes the input source (e.g., HDMI 1, AV, Component).

VOL < / >: Adjusts the volume level down or up.

Mute (Speaker with X): Mutes or unmutes the TV audio.

Play/Pause (Play/Pause Icon): Controls playback of media (if supported by TV).

CH < / >: Changes the TV channel down or up.

DISPLAY: Displays current channel information or other on-screen data.

MENU: Opens the TV's main menu for settings and options.

Navigation Buttons (Up, Down, Left, Right Arrows): Navigates through menus and options.

ENTER: Confirms selections within menus.

SOURCE: Cycles through available input sources.

EXIT: Exits the current menu or on-screen display.

ASPECT: Changes the screen aspect ratio (e.g., 16:9, 4:3).

SLEEP: Sets a timer for the TV to automatically turn off.

P.MODE (Picture Mode): Cycles through preset picture modes (e.g., Standard, Movie, Dynamic).

S.MODE (Sound Mode): Cycles through preset sound modes (e.g., Standard, Music, Speech).

Color Buttons (Red, Green, Yellow, Blue): These buttons typically correspond to specific functions within TV menus or interactive applications, as indicated on the TV screen.

ADD: Function varies by TV model, often used for adding channels or favorites.

FAV+ / FAV-: Navigates through favorite channels.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA alkaline).
- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal components or the casing.
- **Liquid Exposure:** Do not expose the remote control to liquids. Liquid damage can cause malfunctions and is not covered by any potential warranty.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA alkaline batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Confirm you are within the effective range of the TV's IR receiver.

- **Specific Buttons Not Working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing proper contact.
- If only a few buttons are unresponsive after checking batteries, the remote might be damaged.

- **TV Not Turning On/Off:**

- Verify that the TV is plugged into a working power outlet.
- Try using the power button directly on the TV to confirm the TV itself is functional.

If these steps do not resolve the issue, please refer to the "Support" section for further assistance.

SPECIFICATIONS

Brand	ZdalaMit
Special Feature	Ergonomic
Color	Black
Max Number of Supported Devices	1 (Television)
Compatible Devices	Television (Specifically Polaroid UHD LED TV models: 43GSR4100KL, 49GSR4100KL, 50GSR4100KL, 55GSR4100KL, 65GSR4100KL, 75GSR4100KL, 49GSR4100XL)
Power Supply	2 x 1.5V AAA Alkaline Batteries

SUPPORT

For any questions, concerns, or issues not covered in this manual, please do not hesitate to contact our customer support team. We are here to assist you.

Contact information is typically available through your purchase platform or the ZdalaMit official website.