

[Manuals.plus](#) /

> [SoBuy](#) /

> SoBuy FST16-DG Rocking Chair User Manual

SoBuy FST16-DG

SoBuy FST16-DG Rocking Chair User Manual

Model: FST16-DG | Brand: SoBuy

INTRODUCTION

Thank you for choosing the SoBuy FST16-DG Rocking Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new rocking chair. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- **Maximum Weight Capacity:** Do not use the chair if the user's weight exceeds 150 kg (330 lbs). Exceeding this limit may cause damage to the chair and lead to injury.
- **Stable Surface:** Always place the rocking chair on a stable, flat, and non-slip surface to prevent accidental tipping or sliding.
- **Assembly:** Follow all assembly instructions carefully and ensure all components are securely fastened before use. Improper assembly can lead to instability and potential hazards.
- **Children and Pets:** Keep children and pets away from the chair during assembly. Supervise children when they are near or using the chair.
- **Moving Parts:** Be aware of moving parts, especially the rocking mechanism and adjustable footrest, to avoid pinching fingers or other body parts.
- **Maintenance:** Regularly inspect the chair for loose screws, damaged parts, or wear and tear. Do not use the chair if any part is damaged. Contact customer support for replacement parts.
- **Cleaning:** Use only recommended cleaning methods to avoid damaging the materials. Refer to the Maintenance section for details.

PRODUCT FEATURES

The SoBuy FST16-DG rocking chair is designed for comfort and versatility, suitable for various relaxation needs.

- **Ergonomic Design:** Features a padded headrest and a comfortable polycotton seat for optimal support.

- **Adjustable Footrest:** Offers 5 different positions for personalized comfort, ideal for reading or napping.
- **Gentle Rocking Motion:** Provides a smooth and relaxing rocking experience.
- **Durable Construction:** Built with a robust birch wood and metal frame, designed to support up to 120 kg. Includes self-adhesive pads to protect flooring.
- **Modern Aesthetic:** Simple and elegant design that complements various interior decor styles.
- **Removable Chair Cover:** For easy cleaning and maintenance.




Image: Detailed view highlighting the soft pillow, polycotton seat, birch wood frame, and removable chair cover.



Oreiller Doux



Siège en Coton Polyester

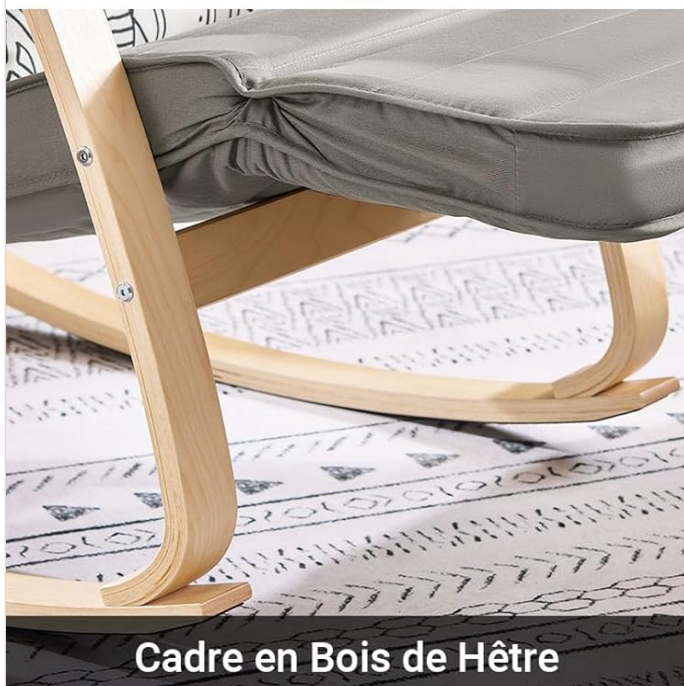

Cadre en Bois de Hêtre



Housse de Chaise Amovible

Image: Icons illustrating the chair's benefits for ultimate relaxation.

SETUP AND ASSEMBLY

The SoBuy FST16-DG rocking chair requires assembly. An illustrated assembly instruction manual is included with your purchase. Please follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Check against the parts list in the included manual to ensure all components are present and undamaged.
2. **Prepare Workspace:** Assemble the chair on a clean, soft surface (e.g., a carpet or blanket) to prevent scratching the floor or chair parts.
3. **Follow Illustrated Instructions:** Refer to the detailed, step-by-step illustrated instructions provided in the separate assembly manual.
4. **Secure All Fasteners:** Ensure all screws, bolts, and other fasteners are tightened securely. Do not overtighten, as this may strip threads or damage components.
5. **Attach Floor Protectors:** Apply the self-adhesive pads to the bottom of the rocking chair runners to protect your

floors from scratches.

6. **Final Check:** Before first use, gently rock the chair and check for any wobbling or instability. Re-tighten any loose fasteners if necessary.

If any parts are missing or damaged, do not proceed with assembly. Contact SoBuy customer support immediately.

OPERATING INSTRUCTIONS

Using the Rocking Function

The chair is designed for a gentle, smooth rocking motion. Sit centrally in the chair and use your feet to initiate and control the rocking. Avoid excessive force or sudden movements that could cause the chair to tip.

Adjusting the Footrest

The footrest can be adjusted to 5 different positions to suit your comfort needs. To adjust:

1. While seated, gently lift the footrest to disengage it from its current position.
2. Move the footrest to your desired angle.
3. Ensure it clicks securely into one of the 5 available positions before applying full weight.

Vivez une expérience de relaxation ultime



Image: Illustration of the footrest adjustment mechanism and its five positions.

MAINTENANCE

Cleaning the Chair Cover

The polycotton chair cover is removable for easy cleaning.

- **Removal:** Unzip the cover carefully and remove it from the frame.
- **Washing:** Hand wash or machine wash on a gentle cycle with cold water and mild detergent. Do not bleach.
- **Drying:** Air dry flat. Do not tumble dry. Avoid direct sunlight to prevent fading.
- **Re-attachment:** Ensure the cover is completely dry before re-attaching it to the chair frame.

Frame Care

- **Cleaning:** Wipe the birch wood and metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws and bolts for tightness. Re-tighten if necessary to maintain stability.

- **Floor Protectors:** Ensure the self-adhesive pads on the runners are intact. Replace if worn to continue protecting your floors.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair feels unstable or wobbly.	Loose fasteners; uneven surface.	Check and tighten all screws and bolts. Ensure the chair is on a flat, stable surface.
Footrest does not stay in position.	Not properly engaged; mechanism issue.	Ensure the footrest clicks securely into one of the 5 positions. If the issue persists, contact customer support.
Squeaking noise during rocking.	Friction between parts; loose joints.	Check and tighten all connections. A small amount of silicone lubricant can be applied to contact points if necessary (avoiding fabric).
Missing parts during assembly.	Packaging error.	Do not proceed with assembly. Contact SoBuy customer support immediately for replacement parts.

SPECIFICATIONS

Feature	Detail
Model Number	FST16-DG
Brand	SoBuy
Color	Grey
Frame Material	Birch Wood, Metal
Seat/Filling Material	Polycotton
Product Dimensions (D x W x H)	80 cm x 56 cm x 90 cm
Item Weight	10 Kilograms
Recommended Maximum Load	150 Kilograms
Footrest Positions	5 adjustable positions
Assembly Required	Yes (Illustrated instructions included)
Recommended Use	Relaxation, Reading, Napping (Indoor/Outdoor)
Age Range	Adult
Country of Origin	China

5 Positions Réglables



Image: Dimensional diagram of the rocking chair.

WARRANTY AND SUPPORT

SoBuy products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official SoBuy website.

If you encounter any issues with your SoBuy FST16-DG Rocking Chair, require replacement parts, or have questions not covered in this manual, please contact SoBuy customer support:

- **Online Support:** Visit the [SoBuy Brand Store on Amazon](#) for FAQs and contact options.
- **Email/Phone:** Refer to your product packaging or the SoBuy website for specific contact details.

Please have your model number (FST16-DG) and proof of purchase ready when contacting support.

