

TIMEX TW2T10700

Timex Chronograph Quartz Watch TW2T10700 User Manual

Model: TW2T10700

INTRODUCTION

This manual provides instructions for the Timex Chronograph Quartz Watch, Model TW2T10700. It covers essential information for setting up, operating, maintaining, and troubleshooting your watch. Please read this manual carefully to ensure proper use and longevity of your timepiece.

SETUP

1. Setting the Time

1. Pull the crown (B) out to the furthest position.
2. Turn the crown (B) clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Push the crown (B) back in to the normal position to start the watch.

2. Setting the Date

1. Pull the crown (B) out to the middle position.
2. Turn the crown (B) counter-clockwise to set the date.
3. Once the date is set, push the crown (B) back in to the normal position.

3. Adjusting the Nylon Strap

The watch features a durable nylon strap with a buckle closure. To adjust the fit, simply thread the strap through the buckle and secure it at a comfortable length on your wrist. Ensure the watch is snug but not overly tight to allow for proper circulation.



Image: The Timex TW2T10700 watch displayed on a wrist, illustrating how the watch appears when worn and how the strap fits.

OPERATING INSTRUCTIONS

1. Using the Chronograph (Stopwatch)

The chronograph function allows you to measure elapsed time. The watch features two pushers (A and C) and a crown (B) for operation.

1. **Start:** Press pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press pusher (A) again to stop the chronograph. The elapsed time will be displayed.
3. **Reset:** After stopping, press pusher (C) to reset all chronograph hands to their zero positions.

2. Using INDIGLO Night-Light

The INDIGLO night-light illuminates the watch dial for easy reading in low-light conditions.

- Press and hold the crown (B) to activate the INDIGLO night-light. The light will remain on as long as the crown is

pressed.



Image: Side view of the Timex TW2T10700 watch, highlighting the crown (B) and the two pushers (A and C) used for time setting and chronograph operation.

MAINTENANCE

1. Water Resistance

This watch is water resistant to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Avoid operating the crown

or pushers when the watch is wet to prevent water intrusion.

2. Strap Care

The nylon strap is durable but can accumulate dirt. To clean, gently wipe the strap with a damp cloth and mild soap. Allow it to air dry completely before wearing. Avoid harsh chemicals or excessive scrubbing.



Image: A close-up view of the Timex TW2T10700's nylon strap and buckle, showing the texture and construction of the band.

3. Battery Replacement

The watch is powered by a quartz movement. When the watch stops running, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

4. Cleaning the Watch Case

Wipe the watch case with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used. Avoid abrasive materials that could scratch the mineral crystal or case finish.

TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Chronograph Hands Not Resetting to Zero:** If the chronograph hands do not return to their zero position after pressing pusher (C), they may need calibration. Consult a watch technician for adjustment.
- **Date Not Changing:** Ensure the time is set correctly, passing midnight will advance the date. If the date is stuck, try resetting it manually as per the 'Setting the Date' instructions.
- **INDIGLO Light Not Working:** If the INDIGLO light does not activate when the crown is pressed, the battery may be low or depleted.

SPECIFICATIONS

Feature	Specification
Model Number	TW2T10700
Movement Type	Quartz
Display Type	Analog
Case Diameter	40 mm
Case Thickness	15 mm
Band Material	Fabric (Nylon)
Band Width	20 mm
Crystal Material	Mineral
Water Resistance Depth	30 Meters (3 ATM)
Special Features	INDIGLO Light, Chronograph (Stopwatch), Date Display
Item Weight	40 g

WARRANTY INFORMATION

This Timex watch comes with a **2-year manufacturer's warranty** from the date of purchase. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear of the strap or battery.

Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the official Timex warranty documentation provided with your watch or visit the official Timex website.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries regarding your Timex TW2T10700 watch, please contact Timex customer service or visit their official website.

Manufacturer: Timex

You can find more information and contact details on the [Official Timex Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question