

IKEA 202.676.06

IKEA Brusali Shoe Cabinet - Instruction Manual

Model: 202.676.06 | Brand: IKEA

PRODUCT OVERVIEW

The IKEA Brusali Shoe Cabinet is a functional and stylish storage solution designed to organize your footwear efficiently. Featuring three compartments, this white cabinet is constructed from particleboard, foil, and ABS plastic, with fiberboard and particleboard used for drawer fronts and sides. Its compact design makes it suitable for various indoor spaces, including bathrooms.

Key Features:

- Three spacious compartments for shoe storage.
- Smooth-gliding drawers with pull-out stops for secure operation.
- Durable construction with particleboard, foil, and ABS plastic components.
- Integrated top shelf for additional storage or display.
- Suitable for use in damp indoor areas like bathrooms.





Figure 1: Front view of the IKEA Brusali Shoe Cabinet.

SAFETY INFORMATION

For safety reasons, it is crucial to properly secure the IKEA Brusali Shoe Cabinet to the wall. When assembling the cabinet, especially if it includes the Algot frame with a height of 27½ inches, you must attach the two accompanying anti-topple protectors to the front casters. This prevents the unit from tipping over, ensuring stability and user safety.



Figure 2: Detail of the cabinet's base, highlighting the need for wall attachment for stability.

SETUP AND ASSEMBLY

Assembly of the IKEA Brusali Shoe Cabinet is required. Please follow the detailed instructions provided in the packaging. Ensure all components are present before beginning assembly. A Phillips head screwdriver and a hammer are typically needed. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

1. Unpack all components and verify against the parts list.
2. Assemble the main frame according to the diagrams.
3. Attach the drawer runners and assemble the three drawer compartments.
4. Install the drawer fronts and handles.
5. Secure the back panel.
6. Attach the anti-topple protectors and secure the unit to a wall stud using appropriate hardware (not always included, check packaging).

OPERATING INSTRUCTIONS

The Brusali Shoe Cabinet features three pull-down compartments designed for easy access and efficient shoe storage.

1. **Opening a Compartment:** Gently pull the black knob on the front of each compartment. The compartment will tilt forward, revealing two internal shelves.
2. **Storing Shoes:** Place shoes on the internal shelves. Each compartment can typically hold 3-4 pairs of adult shoes, depending on shoe size and style. For optimal space utilization, place shoes vertically or with one shoe facing forward and the other backward.
3. **Closing a Compartment:** Push the compartment back into the cabinet until it clicks securely into place. The drawers are designed with a pull-out stop to prevent them from coming out completely and a soft-close mechanism for smooth operation.
4. **Top Shelf Use:** The top surface of the cabinet and the open cubby above the top drawer can be used for additional storage of small items like keys, mail, or decorative objects.



Figure 3: Cabinet with compartments open, showing internal shoe storage.



Figure 4: Detail of the top cubby and drawer for small item storage.

MAINTENANCE

To keep your IKEA Brusali Shoe Cabinet in optimal condition, regular maintenance is recommended:

- **Cleaning:** Wipe clean with a damp cloth and a mild cleaner. Dry with a clean cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Hardware Check:** Periodically check all assembly fittings and tighten them if necessary to ensure the unit remains stable and secure.
- **Moisture:** While suitable for damp indoor areas, avoid prolonged exposure to excessive moisture. Wipe up any spills immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers not closing smoothly or coming off hinges.	Loose or damaged hardware; excessive weight; misalignment during assembly.	Check and tighten all screws and fittings. Ensure shoes are not overfilling the compartments. Re-align drawers if necessary. If hardware is broken, contact customer support for replacement parts.

Problem	Possible Cause	Solution
Cabinet feels unstable or wobbly.	Not properly secured to the wall; uneven floor; loose assembly.	Ensure the anti-topple protectors are correctly installed and the unit is securely anchored to a wall stud. Adjust the feet if the floor is uneven. Tighten all assembly screws.
Difficulty opening or closing drawers.	Obstruction inside the drawer; mechanism stiffness; misaligned drawer.	Remove all items and check for obstructions. Apply a small amount of silicone spray to the runners if stiff. Verify drawer alignment and adjust if needed.

SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model Number	202.676.06
Color	White
Mounting Type	Floor Mount (requires wall attachment)
Room Type	Bathroom, Entryway, Hallway
Door Style	Drawer (tilt-out)
Included Components	3 Compartments, Shelves
Finish Type	Wood grain
Number of Shelves	3 (internal to drawers)
Number of Pieces	1
Base Type	Legs
Installation Type	Freestanding (requires wall anchoring)
Top Material Type	Particle Board
Handle Material	Aluminum
Back Material Type	Engineered Wood
Assembly Required	Yes
Number of Compartments	3
Item Weight	62 pounds
Package Dimensions	30.75 x 23.63 x 16.13 inches

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or to purchase replacement parts, please refer to the official IKEA website or contact IKEA customer support directly. You can find customer support information via the link below:

[Customer Support](#)

© 2023 IKEA. All rights reserved.