

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [IKEA](#) /
- › [IKEA Brusali Shoe Cabinet User Manual](#)

**IKEA 702.676.04**

# IKEA Brusali Shoe Cabinet With 3 Compartments

Model: 702.676.04

Brand: IKEA

## INTRODUCTION

---

The IKEA Brusali Shoe Cabinet is a functional and stylish storage solution designed to organize your footwear efficiently. Featuring three compartments, this brown cabinet helps keep your entryway or living space tidy while offering a compact footprint. Its design allows for easy access to shoes and integrates well into various home decors.





Image: Front view of the IKEA Brusali Shoe Cabinet in brown, with all three compartments closed.

## SAFETY INFORMATION

---

Please read and understand all safety instructions before assembly and use of the product. Failure to follow these instructions may result in injury or damage to the product.

- **Anti-Topple Protectors:** For safety reasons, it is crucial to attach the two accompanying anti-topple protectors to the front casters during assembly. This prevents the cabinet from tipping over, especially when drawers are opened or if the cabinet is placed on an uneven surface.
- **Wall Fastening:** If the product is intended to be fastened to a wall, ensure appropriate wall fasteners are used for your specific wall material. Consult a professional if unsure.
- **Weight Distribution:** Distribute the weight evenly within the compartments to maintain stability. Avoid placing excessively heavy items in a single compartment.
- **Children Safety:** Keep children away from the product during assembly. Do not allow children to climb on or play

with the cabinet.

## COMPONENTS AND MATERIALS

---

The IKEA Brusali Shoe Cabinet is constructed from the following materials:

- **Main parts:** Particleboard, Foil, ABS plastic
- **Drawer front:** Fiberboard, Particleboard, Foil
- **Drawer side:** Polystyrene
- **Drawer bottom/Drawer back:** Particleboard, Foil
- **Back panel:** Fiberboard, Printed and embossed acrylic paint
- **Back rail:** Particleboard, Laminate (melamine), Foil



Image: Close-up view of the base of the shoe cabinet, showing the casters and material finish.

## ASSEMBLY INSTRUCTIONS

---

Assembly of the IKEA Brusali Shoe Cabinet requires basic tools and adherence to the included graphical instructions. It is recommended to assemble the cabinet on a soft, clean surface to prevent scratches.

### Required Tools (Not Included):

- Screwdriver (Phillips head)
- Hammer

- Measuring tape

## Assembly Steps:

1. **Unpack and Verify:** Carefully unpack all components and verify against the parts list provided in the packaging. Report any missing or damaged parts immediately.
2. **Assemble Frame:** Begin by assembling the main frame of the cabinet according to the graphical instructions. Ensure all connections are secure.
3. **Install Casters and Anti-Topple Protectors:** Attach the casters to the base of the cabinet. **Crucially, attach the two anti-topple protectors to the front casters as per the safety instructions.**
4. **Assemble Drawers:** Construct the three drawer units. Note that the drawers are designed to glide smoothly and include a pull-out stop to keep them in place.
5. **Insert Drawers:** Carefully insert the assembled drawers into their respective compartments within the main frame.
6. **Attach Back Panel:** Secure the back panel to the cabinet frame.
7. **Final Checks:** Ensure all screws are tightened and the cabinet is stable.

For detailed step-by-step visual instructions, refer to the assembly manual included in the product packaging.

## OPERATING INSTRUCTIONS

---

The Brusali Shoe Cabinet is designed for simple and effective shoe storage.

### Using the Compartments:

- Each of the three compartments is designed to hold multiple pairs of shoes. Gently pull the drawer front outwards to open a compartment.
- Place shoes inside the compartment, typically with the toes pointing inwards, to maximize space.
- Push the drawer front back until it is fully closed and flush with the cabinet frame. The pull-out stop feature ensures the drawer remains securely in place when closed.



Image: The shoe cabinet with two of its three compartments open, revealing shoes stored inside.

### **Top Surface Usage:**

The top surface of the cabinet can be used as an additional display or storage area for small items such as keys, mail, or decorative objects. It can also function as a practical extra work surface, especially when combined with compatible

ALGOT top shelves (sold separately).



Image: Close-up view of the top section of the shoe cabinet, showing items placed on its surface and the top drawer.

## MAINTENANCE AND CARE

---

To ensure the longevity and appearance of your Brusali Shoe Cabinet, follow these care guidelines:

- **Cleaning:** Wipe clean with a damp cloth and a mild cleaner. Dry with a clean cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Dusting:** Regularly dust the surfaces with a soft, dry cloth.
- **Moisture:** While the cabinet can be used in damp indoor areas like bathrooms, avoid prolonged exposure to excessive moisture. Wipe up spills immediately.
- **Inspection:** Periodically check all fittings and tighten them if necessary to ensure stability.

## TROUBLESHOOTING

---

Here are solutions to common issues you might encounter with your Brusali Shoe Cabinet:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cabinet feels wobbly or unstable.	Loose fittings; uneven floor; anti-topple protectors not installed.	Tighten all screws and fittings. Ensure the cabinet is on a level surface. Verify that the anti-topple protectors are correctly attached to the front casters.
Drawers do not open or close smoothly.	Obstruction in the drawer mechanism; misaligned drawer.	Check for any objects blocking the drawer's path. Remove the drawer and re-insert it, ensuring it is properly aligned with the runners.
Cabinet tipping forward when drawers are open.	Anti-topple protectors not installed or improperly installed.	Immediately secure the cabinet. Ensure the anti-topple protectors are correctly attached to the front casters as per assembly instructions. If necessary, consider wall-fastening the unit.

## SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model Number	702.676.04
Color	Brown
Mounting Type	Floor Mount
Room Type	Bathroom (also suitable for entryways, hallways, etc.)
Door Style	Drawer
Included Components	Shoe Cabinet (assembly required)
Finish Type	Painted
Number of Shelves	3 (compartments)
Base Type	Casters
Installation Type	Freestanding
Top Material Type	Particleboard, Laminate (melamine)
Back Material Type	Engineered Wood (Fiberboard)
Assembly Required	Yes
Frame Material	Plastic (for some parts like drawer side)
Number of Compartments	3
Item Weight	62 pounds (approx. 28.1 kg)
Package Dimensions	30.75 x 23.63 x 16.13 inches (approx. 78.1 x 60 x 41 cm)

## WARRANTY AND SUPPORT

---

For specific warranty information regarding your IKEA Brusali Shoe Cabinet, please refer to the documentation provided with your purchase or visit the official IKEA website. IKEA typically offers a limited warranty on its furniture products, covering defects in materials and workmanship.

For customer support, missing parts, or further assistance, please contact IKEA customer service through their official channels. You may need your proof of purchase and the product model number (702.676.04) when contacting support. You can find more information and contact details on the official IKEA website: [www.ikea.com](http://www.ikea.com)