

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA Hemnes Shoe Cabinet Instruction Manual

IKEA 201.695.59

IKEA Hemnes Shoe Cabinet With 2 Compartments, White

INSTRUCTION MANUAL - MODEL 201.695.59

1. Product Overview

The IKEA Hemnes Shoe Cabinet is a functional and stylish storage solution designed to organize your footwear efficiently. It features two main compartments for shoes and an additional top drawer for smaller items. Its compact design makes it suitable for entryways and other narrow spaces.



Figure 1: Front view of the IKEA Hemnes Shoe Cabinet with two closed compartments and a top drawer.

2. Setup and Assembly

Assembly is required for the IKEA Hemnes Shoe Cabinet. Please follow the detailed instructions provided in the packaging to ensure correct and safe setup. It is crucial to fasten this cabinet to the wall for safety to prevent tipping. Self-adhesive floor protectors can be added to protect the underlying surface from wear.



Figure 2: Dimensions of the IKEA Hemnes Shoe Cabinet, showing its height, width, and depth.

Important Safety Note: This cabinet **must** be fastened to the wall using the provided hardware to prevent it from tipping over. Always ensure the cabinet is securely anchored before use.

3. Operating Instructions

The Hemnes Shoe Cabinet is designed for easy access and efficient storage. It features two main shoe compartments and one top drawer.

- **Shoe Compartments:** The two large compartments are designed to hold shoes. They open outwards, allowing for easy placement and retrieval of footwear. Each compartment can typically accommodate up to 3 pairs of shoes, totaling 6 pairs for the entire cabinet.
- **Top Drawer:** A smaller drawer is located at the top of the cabinet, ideal for storing small items such as keys, gloves, or other accessories.



Figure 3: The shoe cabinet with both main compartments open, displaying stored shoes.



Figure 4: The top drawer of the cabinet open, showing space for small storage items.

4. Maintenance and Care

To maintain the appearance and longevity of your IKEA Hemnes Shoe Cabinet, follow these simple care instructions:

- Wipe clean with a soft cloth dampened with water and a mild dish detergent or soap, if necessary.
- Avoid using abrasive cleaners or harsh chemicals, as these can damage the finish.
- Ensure the cabinet is dry after cleaning to prevent moisture damage.

5. Troubleshooting

This section addresses common issues you might encounter with your shoe cabinet. If you experience problems not listed here, please refer to the support information.

Problem	Possible Cause	Solution
Drawers/Compartments not closing smoothly	Obstruction, misaligned runners, or overloaded compartments.	Check for items blocking the mechanism. Ensure runners are clean and aligned. Reduce load if overloaded.
Cabinet feels unstable	Not properly fastened to the wall or uneven floor.	Verify wall fastening is secure. Adjust feet or place shims under legs to level the cabinet.

6. Specifications

Feature	Detail
Brand	IKEA
Model Number	201.695.59
Color	White
Product Dimensions (D x W x H)	11.81"D x 35.04"W x 50"H
Item Weight	29.8 pounds (13.54 Kilograms)
Recommended Uses	Shoes
Number of Compartments	2 (for shoes) + 1 (top drawer)
Material	Top panel: particleboard, acrylic paint, foil; Top rail/Bottom Rail/Leg/Side rail/Drawer bottom: fiberboard, acrylic paint; Side panel: particleboard, foil; Drawer side/Drawer back: solid pine; Insert: polypropylene
Mounting Type	Floor Mount (requires wall fastening)
Assembly Required	Yes
Special Feature	Foldable (referring to the shoe compartments)

7. Warranty and Support

For information regarding warranty coverage, replacement parts, or additional support for your IKEA Hemnes Shoe Cabinet, please refer to the official IKEA website or contact IKEA customer service directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question