

NOMAD NM3W240K00

Nomad Wireless Charging Dock Base Station NM3W240K00 User Manual

Model: NM3W240K00

[Introduction](#) [What's in the Box](#) [Setup](#) [Operation](#) [Specifications](#) [Troubleshooting](#) [Warranty & Support](#)

1. INTRODUCTION

The Nomad Wireless Charging Dock Base Station is designed to provide a premium charging experience for Apple Watch and iPhone users. This device integrates a sleek, modern design with a functional wireless charging hub. Featuring three high-power charging coils and a built-in Apple Watch charger, it aims to create a seamless charging experience for multiple devices simultaneously.



Figure 1: Top view of the Nomad Wireless Charging Dock Base Station, showing the charging surface and Apple Watch stand.

2. WHAT'S IN THE BOX

Upon unboxing your Nomad Wireless Charging Dock Base Station, please ensure all the following components are present:

- Nomad Wireless Charging Pad for iPhone and Apple Watch
- Power Adapter with interchangeable plugs for various regions
- USB Cable (may be included depending on package variant)

3. SETUP INSTRUCTIONS

1. **Unpack the Device:** Carefully remove the Nomad Wireless Charging Dock Base Station and its accessories from the packaging.
2. **Select the Correct Power Plug:** The power adapter comes with interchangeable plugs. Identify the appropriate plug for your region.
 - To remove a plug: Press the button next to the plug on the adapter and twist the plug counter-clockwise to release it.
 - To attach a plug: Align the new plug with the adapter, press it down, and twist clockwise until it locks into place.



Figure 2: Side view of the charging dock, illustrating the power input port.

3. **Connect Power:** Insert the power cable into the designated port on the back of the charging dock. Plug the power adapter into a wall outlet.
4. **Placement:** Place the charging dock on a flat, stable surface, such as a nightstand or desk. Ensure there is adequate space around the device for optimal use.

4. OPERATING INSTRUCTIONS

The Nomad Wireless Charging Dock Base Station is designed to charge up to three compatible devices simultaneously: an Apple Watch, AirPods, and an iPhone or other Qi-compatible smartphone.

4.1 Charging an Apple Watch

- Place your Apple Watch onto the upright charging puck on the left side of the dock. The magnetic connection will secure the watch in place.
- Ensure the watch is properly aligned for charging to begin.

4.2 Charging an iPhone or Qi-Compatible Smartphone

- Place your iPhone or other Qi-compatible smartphone flat on the main charging surface. The dock features three charging coils, allowing for flexible placement.
- For optimal charging, ensure the phone is centered on one of the charging coils. The charging indicator on your phone will confirm that charging has started.
- *Tip:* If charging only a phone, placing it horizontally across the main pad can utilize the middle charging coil effectively.

4.3 Charging AirPods (with Wireless Charging Case)

- Place your AirPods (in their wireless charging case) on the remaining available charging area on the main pad.
- Confirm that the charging indicator light on your AirPods case illuminates, signifying active charging.

The Nomad Wireless Charging Dock Base Station allows for simultaneous charging of one Apple Watch, one pair of AirPods, and one iPhone/smartphone. The device is designed to simplify your charging routine by consolidating multiple chargers into one sleek unit.

5. SPECIFICATIONS

Feature	Detail
Brand	NOMAD
Model	NM3W240K00
Connector Type	Wireless
Compatible Devices	Smartphones, Smartwatches (Apple Watch, iPhone, AirPods with wireless charging case)
Special Feature	Wireless Charging
Input Voltage	240 Volts
Amperage	0.08 Amps
Wattage	18 Watts
Connectivity Technology	Wireless
Mounting Type	Tabletop Mount
Power Source	Corded Electric
Item Weight	0.64 Kilograms
Enclosure Material	Plastic

6. TROUBLESHOOTING

- **Device Not Charging:**

- Ensure the power adapter is securely plugged into both the charging dock and a working wall outlet.
- Verify that your device (phone, AirPods, Apple Watch) is properly aligned on its respective charging area. Wireless charging requires precise placement. Wait a few seconds for the charging icon to appear on your device's screen before leaving it.
- Remove any thick cases from your phone or AirPods that might interfere with wireless charging.
- Confirm your device is Qi-compatible.

- **Slow Charging:**

- Ensure you are using the original power adapter and cable provided with the Nomad charging dock.
- Avoid placing metallic objects or foreign materials between your device and the charging surface, as this can impede charging efficiency.

- **Overheating:**

- It is normal for the charging dock and your device to become slightly warm during wireless charging. However, if either becomes excessively hot, discontinue use and contact customer support.
- Ensure the charging dock is placed in a well-ventilated area.

7. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries regarding your Nomad Wireless Charging Dock Base Station, please refer to the official Nomad website or contact their customer support directly. Keep your proof of purchase for warranty claims.