

## TP-Link

# TP-Link Archer C5400X Tri Band WiFi Gaming Router User Manual

Model: Archer C5400X

## 1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your TP-Link Archer C5400X Tri Band WiFi Gaming Router. The Archer C5400X is designed to deliver high-performance wireless connectivity, especially optimized for gaming, with its tri-band Wi-Fi, powerful CPU, and advanced features like MU-MIMO and Link Aggregation.

Please read this manual thoroughly before using the device to ensure proper installation and optimal performance.

## 2. PRODUCT OVERVIEW

### 2.1 Package Contents

- TP-Link Archer C5400X MU-MIMO Wireless Tri-Band Gigabit Gaming Router
- Power Adapter
- Ethernet Cable
- Quick Installation Guide (this manual serves as the detailed user manual)

### 2.2 Hardware Components

The Archer C5400X features a robust design with multiple antennas and various ports for connectivity.



**Figure 2.2.1: Front View of Archer C5400X Router.** This image displays the top and front of the TP-Link Archer C5400X router, highlighting its distinctive black and red design with eight large, adjustable external antennas. The top surface features a perforated design for ventilation and a central TP-Link logo.



**Figure 2.2.2: Rear View of Archer C5400X Router.** This image shows the rear panel of the Archer C5400X, detailing its connectivity options. From left to right, it includes two USB 3.0 ports, a Reset button, the Internet (WAN) port, eight Gigabit LAN ports (LAN1-LAN8), a Wi-Fi On/Off button, and the Power On/Off button. The Link Aggregation feature is indicated above LAN ports

1 and 2, and 7 and 8.

## 2.2.1 Ports and Buttons

Component	Description
<b>Power Port</b>	Connects to the provided power adapter.
<b>Power On/Off Button</b>	Turns the router on or off.
<b>Internet (WAN) Port</b>	Connects to your modem or main internet line.
<b>LAN Ports (1-8)</b>	Connects to wired devices such as computers, gaming consoles, or network storage. Supports Gigabit Ethernet.
<b>USB 3.0 Ports</b>	Connects USB storage devices for file sharing or media server functionality.
<b>Reset Button</b>	Press and hold for 5-10 seconds to restore factory default settings.
<b>Wi-Fi On/Off Button</b>	Enables or disables the wireless signal.

## 3. SETUP GUIDE

Follow these steps to set up your Archer C5400X router.

### 3.1 Hardware Connection

1. **Power Off:** Disconnect the power from your modem and router (if applicable).
2. **Connect Modem:** Connect one end of the Ethernet cable to your modem's Ethernet port and the other end to the **Internet (WAN)** port on your Archer C5400X router.
3. **Connect Power:** Connect the power adapter to the router's Power port and plug it into a power outlet. Press the **Power On/Off** button if the router does not power on automatically.
4. **Power On Modem:** Power on your modem and wait for it to fully boot up (usually indicated by stable indicator lights).
5. **Power On Router:** Wait for the router's indicator lights to stabilize, indicating it is ready for configuration.

### 3.2 Network Configuration

You can configure your router via a web browser or the TP-Link Tether app.

#### 3.2.1 Via Web Browser

1. **Connect to Router:**
  - **Wired Connection:** Connect your computer to one of the router's LAN ports using an Ethernet cable.
  - **Wireless Connection:** Connect your wireless device to the router's default Wi-Fi network (SSID and password are printed on the label on the bottom of the router).
2. **Access Web Interface:** Open a web browser and type `http://tplinkwifi.net` or `http://192.168.0.1` into the address bar.
3. **Login:** Create a new password for future logins. If you are logging in for the first time, the default username

and password might be *admin* (all lowercase).

4. **Run Quick Setup:** Follow the on-screen instructions of the Quick Setup wizard to configure your internet connection and wireless settings.

### 3.2.2 Via TP-Link Tether App

1. **Download App:** Download the TP-Link Tether app from the Apple App Store or Google Play Store.
2. **Connect to Router:** Connect your mobile device to the router's default Wi-Fi network.
3. **Launch App:** Open the Tether app and follow the instructions to add your router and complete the setup.

## 4. OPERATING INSTRUCTIONS

---

The Archer C5400X offers various features to optimize your network.

### 4.1 Wireless Settings

- **Tri-Band Wi-Fi:** The router operates on one 2.4 GHz band and two 5 GHz bands. You can manage each band's SSID and password independently or enable Smart Connect to combine them into a single SSID.
- **Guest Network:** Create separate Wi-Fi networks for guests to ensure the security of your main network.
- **WPS (Wi-Fi Protected Setup):** Use the WPS button on the router or the web interface to quickly connect WPS-compatible devices without entering a password.

### 4.2 Advanced Features

- **MU-MIMO:** Multi-User, Multiple-Input, Multiple-Output technology allows the router to communicate with multiple devices simultaneously, improving network efficiency.
- **Airtime Fairness:** Ensures that older, slower devices do not monopolize Wi-Fi bandwidth, allowing faster devices to transmit data more efficiently.
- **RangeBoost:** Enhances the router's ability to detect and receive Wi-Fi signals from distant devices, improving overall range and reliability.
- **Beamforming:** Focuses the Wi-Fi signal directly towards connected devices, providing stronger and more reliable connections.
- **Link Aggregation:** Combine two Gigabit LAN ports or one LAN with the WAN port to double the connection speed for compatible devices like NAS (Network Attached Storage) or high-performance PCs.
- **Quality of Service (QoS):** Prioritize network traffic for specific applications or devices (e.g., gaming, streaming) to reduce lag and ensure smooth performance.
- **HomeCare™ Security:** Integrated antivirus and parental controls to protect all connected devices from cyber threats and manage internet access for family members.

## 5. MAINTENANCE

---

Regular maintenance helps ensure the longevity and optimal performance of your router.

- **Firmware Updates:** Periodically check for and install the latest firmware updates from the TP-Link website or through the router's web interface. Firmware updates often include performance improvements, bug fixes, and security enhancements.
- **Physical Cleaning:** Keep the router in a clean, dust-free environment. Gently wipe the exterior with a soft, dry cloth. Ensure ventilation holes are not obstructed.
- **Optimal Placement:** Place the router in a central location, away from obstructions and sources of interference (e.g., microwaves, cordless phones, large metal objects) to maximize Wi-Fi coverage.

- **Rebooting:** Occasionally rebooting the router (power cycling) can resolve minor network issues and improve performance.

## 6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Archer C5400X router.

### 6.1 No Internet Access

- **Check Connections:** Ensure all cables are securely connected to the router and modem. Verify the Ethernet cable from the modem is plugged into the router's **Internet (WAN)** port.
- **Reboot Devices:** Power cycle your modem first, then your router. Wait for each device to fully boot up.
- **ISP Status:** Contact your Internet Service Provider (ISP) to confirm there are no service outages in your area.

### 6.2 Weak Wi-Fi Signal or Dead Zones

- **Router Placement:** Move the router to a more central location in your home, away from walls, large metal objects, and other electronic devices that may cause interference.
- **Antenna Adjustment:** Adjust the router's antennas for optimal signal dispersion.
- **Interference:** Identify and minimize sources of wireless interference (e.g., cordless phones, microwaves, Bluetooth devices).
- **Channel Optimization:** In the router's web interface, try changing the wireless channel for your 2.4 GHz and 5 GHz bands to a less congested one.

### 6.3 Cannot Access Router's Web Management Page

- **Verify IP Address:** Ensure your computer is set to obtain an IP address automatically (DHCP).
- **Correct Address:** Double-check that you are typing the correct address: `http://tplinkwifi.net` or `http://192.168.0.1`.
- **Clear Browser Cache:** Clear your web browser's cache and cookies, or try a different browser.
- **Firewall/Antivirus:** Temporarily disable any firewall or antivirus software on your computer that might be blocking access.

### 6.4 Forgotten Wi-Fi Password or Login Password

- **Default Password:** The default Wi-Fi SSID and password are printed on the label on the bottom of the router.
- **Reset Router:** If you have changed the passwords and forgotten them, you will need to perform a factory reset. Press and hold the **Reset** button on the back of the router for approximately 5-10 seconds until the lights flash. This will revert all settings to factory defaults, including Wi-Fi and login passwords. You will then need to reconfigure the router.

## 7. SPECIFICATIONS

Feature	Detail
Model	Archer C5400X
Brand	TP-Link
Dimensions (L x W x H)	17.2 x 13.2 x 7.7 inches
Item Weight	5.56 pounds

Feature	Detail
Frequency Band Class	Tri-Band (2.4 GHz, 5 GHz, 5 GHz)
Wireless Communication Standard	802.11ac (Wi-Fi 5)
Connectivity Technology	Wireless, Ethernet
Ports	1x WAN Gigabit, 8x LAN Gigabit, 2x USB 3.0
Special Features	WPS, MU-MIMO, Airtime Fairness, RangeBoost, Beamforming, Link Aggregation, HomeCare™ Security
CPU	1.8 GHz 64-bit Quad-Core

## 8. WARRANTY AND SUPPORT

Your TP-Link Archer C5400X router comes with a Limited 90-Day Warranty. For detailed warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official TP-Link website.

### 8.1 Technical Support

For technical assistance, troubleshooting, or further inquiries, please contact TP-Link Technical Support. Support resources typically include:

- **TP-Link Official Website:** Visit [www.tp-link.com](http://www.tp-link.com) for product information, FAQs, firmware downloads, and support contact details.
- **Support Hotline:** Check the TP-Link website for regional support phone numbers.
- **Email Support:** Submit a support ticket via the TP-Link website.

*Please have your product model number (Archer C5400X) and serial number ready when contacting support.*