

[Manuals.plus](#) /

› [Deerma](#) /

› Deerma DX700 600W Wired Handheld Vacuum Cleaner Instruction Manual

Deerma DX700

Deerma DX700 Wired Handheld Vacuum Cleaner Instruction Manual

Model: DX700 | Brand: Deerma

1. PRODUCT OVERVIEW

The Deerma DX700 is a versatile 600W wired handheld vacuum cleaner designed for efficient and convenient cleaning. It features a powerful 15 kPa suction force and Blackhole Suction Technology to effectively remove dust and debris from various surfaces. Its modular design allows it to be used as an upright floor cleaner or a compact handheld unit, adapting to your specific cleaning needs.



Image: The Deerma DX700 vacuum cleaner in its upright configuration, showcasing its sleek white design.

2. PACKAGE CONTENTS

- 1 x Deerma DX700 Vacuum Cleaner Main Unit
- 1 x Floor Brush
- 1 x Crevice Nozzle (Vacuum Unit)
- 1 x Small Brush (Brush Unit)
- User Manual

3. ASSEMBLY AND SETUP

The Deerma DX700 is designed for easy assembly and conversion between its upright and handheld modes.

3.1 Upright Mode Assembly

1. **Attach Suction Unit to Motor:** Align the suction unit (dust cup and motor assembly) with the main handle and push

firmly until it clicks into place.

2. **Attach Cleaning Unit to Suction Unit:** Connect the extension tube (if using) or the floor brush directly to the bottom of the suction unit. Ensure it is securely fastened.
3. **Connect to Power:** Plug the power cord into a suitable electrical outlet.

3.2 Handheld Mode Assembly

For handheld use, detach the extension tube and floor brush. Directly attach the desired accessory (crevice nozzle or small brush) to the bottom of the suction unit.



Image: Step-by-step visual guide for assembling the vacuum cleaner and detaching the dust collection unit for cleaning.

4. OPERATING INSTRUCTIONS

The Deerma DX700 offers versatile cleaning options for various surfaces.

4.1 Power On/Off

Locate the power toggle switch on the main unit. Press it to turn the vacuum cleaner on or off.

4.2 Using Different Attachments

The vacuum cleaner comes with three interchangeable brushes to suit different cleaning tasks:

- **Vacuum Unit (Crevice Nozzle):** Ideal for narrow spaces, shelves, cupboards, window screens, and room corners.
- **Floor Unit (Floor Brush):** Designed for efficient cleaning of wood floors and tile floors.
- **Brush Unit (Small Brush):** Suitable for cleaning sofas, floor mats, and carpets.

1 Cleaner = 3 Functions



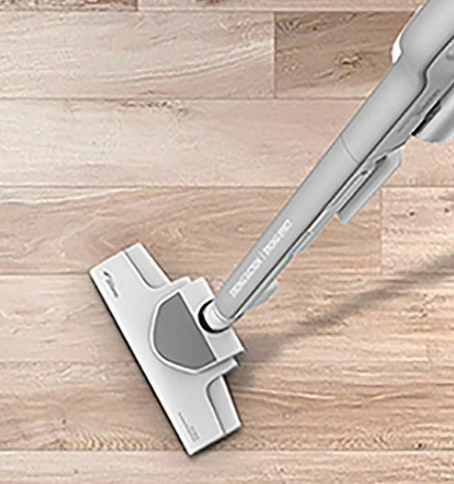
Vacuum Unit 	Floor Unit 	Brush Unit 
		
Shelves, Cupboards, Screens, Room Corners	Wood / Tile Floors	Sofa, Floor Mats, Carpets

Image: Visual representation of the three main functions: vacuum unit for crevices, floor unit for hard floors, and brush unit for soft surfaces.



Image: Collage demonstrating the vacuum cleaner's use on floor mats, tile floors, electronics, beds, kitchen slabs, and wood floors.

5. MAINTENANCE


Regular maintenance ensures optimal performance and extends the lifespan of your Deerma DX700 vacuum cleaner.

5.1 Cleaning the Dust Collecting Unit and Filter

The vacuum cleaner features a transparent dust collecting unit and a three-stage filter system, including a HEPA filter, which can be easily cleaned.

1. **Detach the Dust Collecting Unit:** Press the release button and carefully detach the dust collecting unit from the main motor assembly.
2. **Dispose of Collected Dust:** Empty the contents of the dust collecting unit into a waste bin.
3. **Water Wash the Unit and Filter:** The waste container and the mesh filter can be rinsed thoroughly under running water. Ensure all components are completely dry before reassembling them to prevent damage to the motor.

How to Use

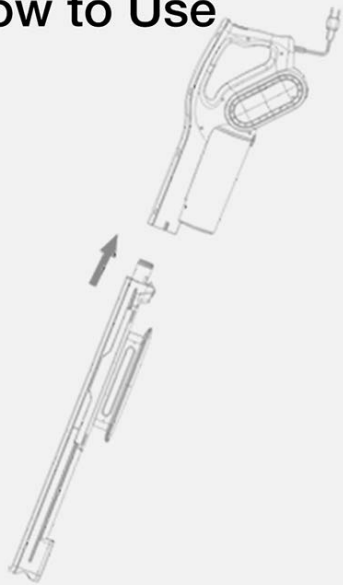

① Attach Suction unit to motor



② Attach Cleaning unit to Suction Unit



③ Connect the Cord to Power Toggle 'on' / 'off' Switch

How to Clean



① Detach the Dust Collecting Unit



② Dispose the Collected Dust in to Bin



③ Water wash the Collecting Unit and Use Again

Image: Visual guide illustrating the process of detaching the dust unit, disposing of debris, and washing the components under water.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Deerma DX700 vacuum cleaner.

6.1 Reduced Suction Power

- **Check Dust Container:** The dust container may be full. Empty it and clean the filter as described in the Maintenance section.
- **Inspect for Blockages:** Check the nozzle, extension tube, and main suction tube for any blockages. Clear any obstructions carefully.
- **Filter Condition:** Ensure the filter is clean and dry. A wet or clogged filter can significantly reduce suction.

6.2 Overheating

- **Continuous Use:** Prolonged continuous operation can cause the motor to heat up. Allow the vacuum cleaner to cool down for at least 15-20 minutes after extended use.

- **Blocked Airflow:** Ensure all air vents are clear and not obstructed. Blockages can lead to motor strain and overheating.

6.3 Unusual Noise

- **Foreign Objects:** Check for any foreign objects lodged in the brush head or suction path.
- **Component Assembly:** Ensure all parts, especially the dust container and attachments, are securely assembled. Loose parts can cause rattling noises.

7. SPECIFICATIONS

Brand	Deerma
Model Name	DX700
Wattage	600 Watts
Suction Power	15 kPa
Capacity	1 Litre
Filter Type	HEPA Filter
Noise Level	≤80 dB
Cord Length	4.5 meters
Product Dimensions	64L x 21W x 14H Centimeters
Item Weight	1.6 kg
Form Factor	Upright / Handheld
Color	White

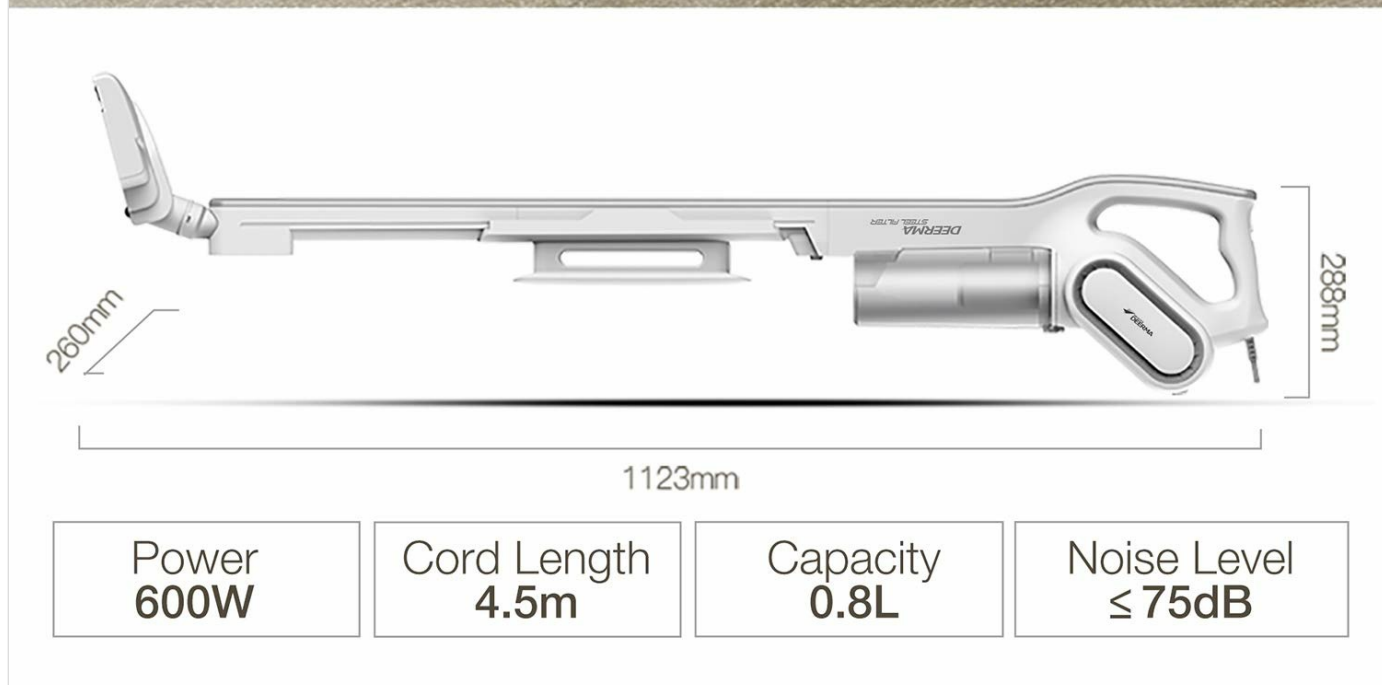 
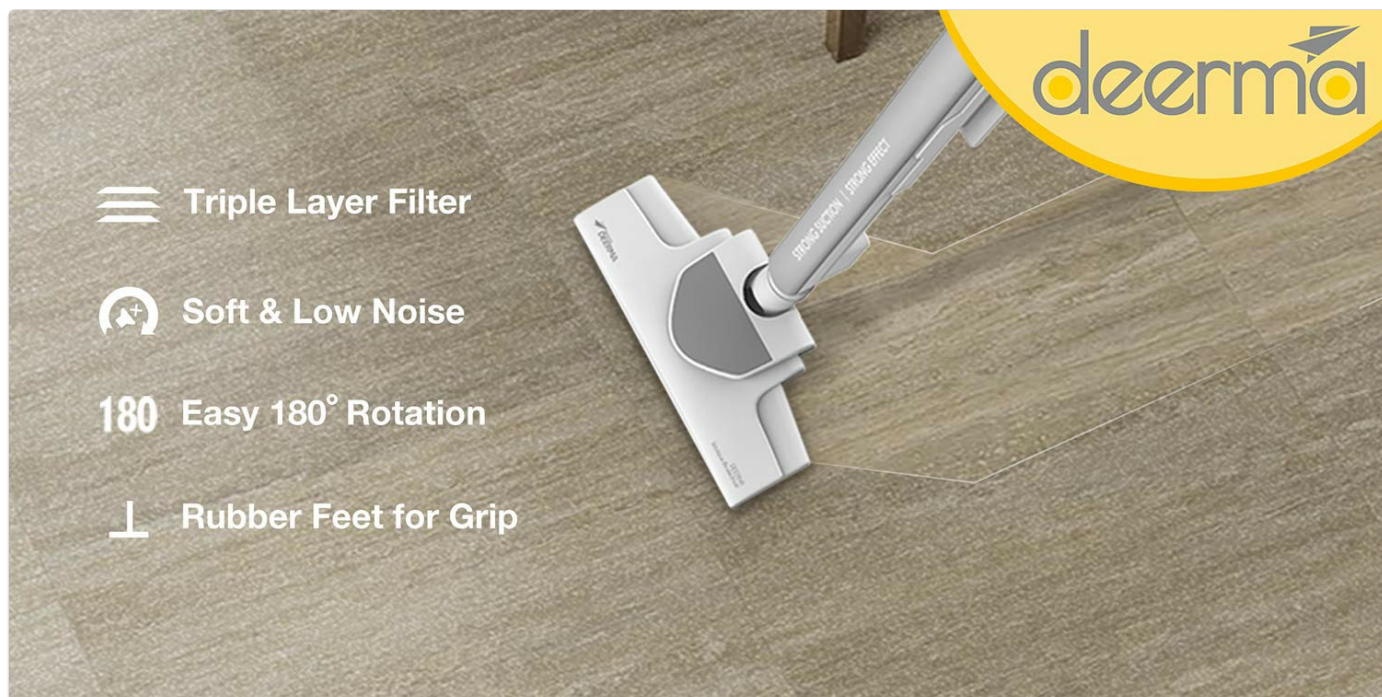 


Image: Detailed diagram showing the dimensions, power, cord length, capacity, and noise level of the vacuum cleaner.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Deerma DX700 vacuum cleaner comes with a **1 Year Warranty** from the date of purchase. Please retain your purchase receipt as proof of warranty.

8.2 Manufacturer and Importer Information

Manufacturer: Foshan Shunde Deerma Electric Appliances Co., Ltd, Guangdong Deerma Technology Co., Ltd.

Importer (India): ALLIN IMPEX SERVICES PRIVATE LIMITED

B-75, Sector-6, Noida, UP-201301

Mobile: 9313132789

Email: sales@allinexporters.com

For any product-related queries, technical assistance, or warranty claims, please contact the importer or manufacturer directly using the provided details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question