



[Manuals.plus](#) /

> [Outsunny](#) /

> Outsunny Rectangular Wooden Polyester Patio Umbrella (Model: 84D-017GN) Instruction Manual

Outsunny 84D-017GN

Outsunny Rectangular Wooden Polyester Patio Umbrella

Model: 84D-017GN

INTRODUCTION

Thank you for choosing the Outsunny Rectangular Wooden Polyester Patio Umbrella. This manual provides essential information for the safe assembly, operation, and maintenance of your new umbrella. Please read these instructions carefully before use and retain them for future reference.



Image: The Outsunny Rectangular Wooden Polyester Patio Umbrella providing shade over outdoor furniture.

SAFETY INFORMATION

- Always use a suitable umbrella base (minimum 15 kg recommended) to ensure stability. The umbrella base is not included.
- Do not use the umbrella in strong winds, heavy rain, or other severe weather conditions. Close and secure the umbrella to prevent damage or injury.
- Ensure all parts are securely fastened before and during use.
- Keep children and pets away from the umbrella during assembly and operation.
- Avoid placing the umbrella near open flames or heat sources.

PACKAGE CONTENTS

Please check that all components are present and undamaged:

- Umbrella Canopy with Ribs
- Upper Pole Section


- Lower Pole Section
- Instruction Manual

SETUP AND ASSEMBLY

1. **Connect the Pole Sections:** Carefully insert the upper pole section into the lower pole section. Ensure they are fully engaged and secured.
2. **Insert into Base:** Place the assembled pole into a sturdy umbrella base (not included). Ensure the base is heavy enough to support the umbrella (15 kg minimum recommended).
3. **Positioning:** Position the umbrella in your desired location, ensuring it is stable and not obstructing any pathways.



Image: The umbrella's inclination feature provides maximum sun protection by adjusting the canopy angle.

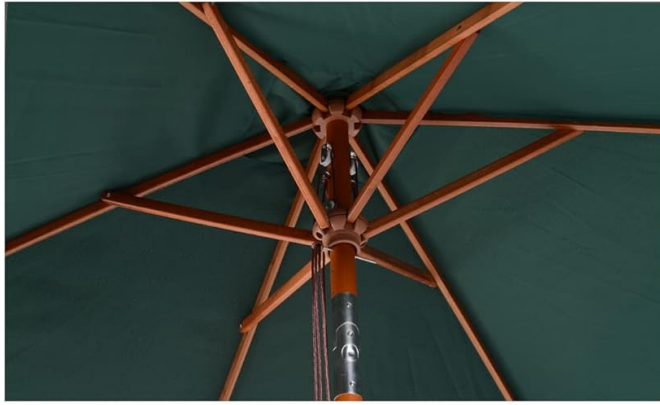

6 baleines en bois robustes assurent la stabilité et la résistance

Double toit pour une bonne circulation de l'air




Mât en bois

Image: Details of the umbrella's construction, showing robust wooden ribs for stability, a double canopy design for improved air circulation, and the 38mm diameter wooden pole.

OPERATING INSTRUCTIONS

- Opening the Umbrella:** Gently pull the rope on the manual pulley system downwards. The canopy will begin to open. Continue pulling until the canopy is fully extended.
- Securing the Umbrella:** Once fully open, engage the 3-position safety lock mechanism on the pole to secure the umbrella in the open position. Ensure it clicks firmly into place.
- Tilting the Umbrella:** This umbrella features a manual tilt mechanism. To adjust the angle of the canopy for optimal shade, locate the tilt mechanism on the pole and adjust as needed.
- Closing the Umbrella:** Disengage the safety lock. Gently release the rope on the pulley system, allowing the canopy to retract. Gather the fabric neatly and secure it with any integrated ties if available.

FACILE À OUVRIR ET FERMER

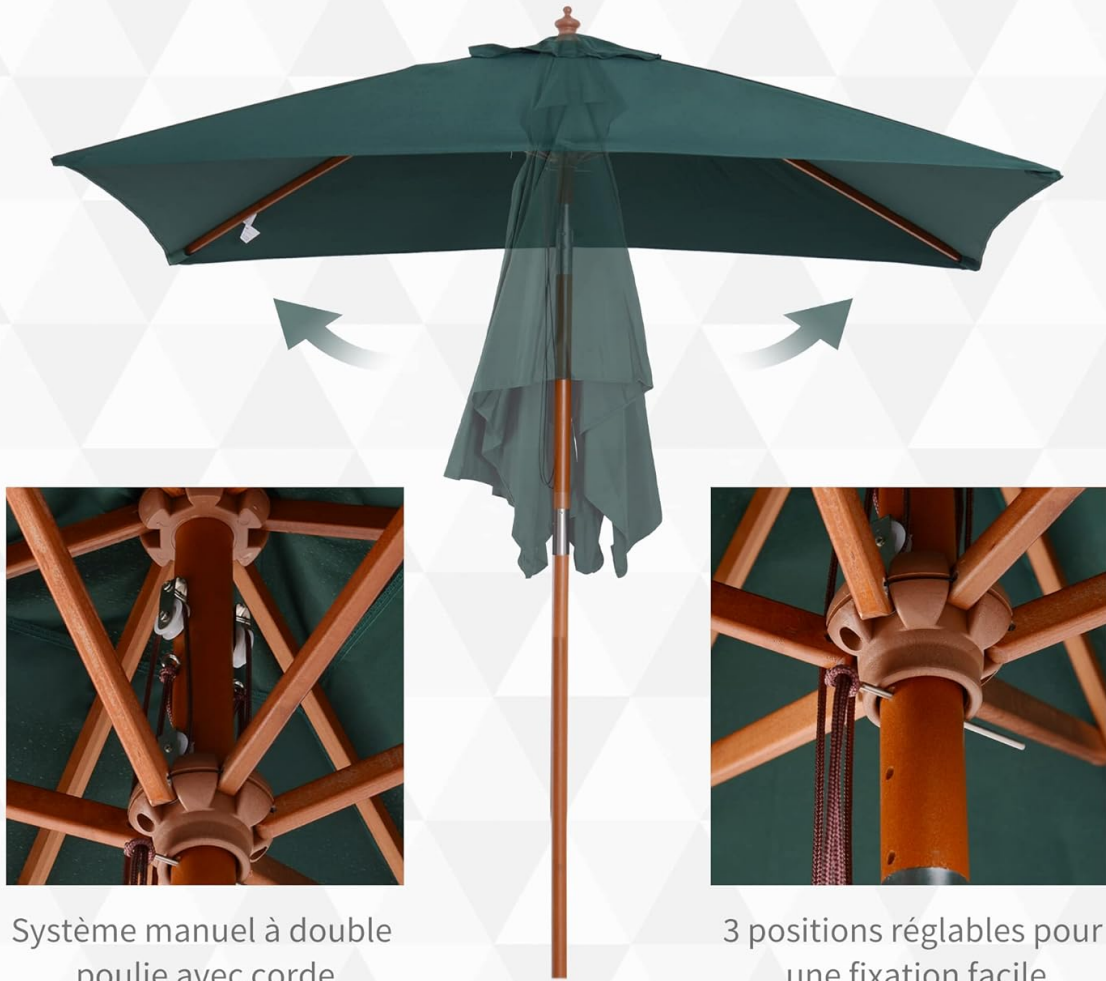

Système manuel à double poulie avec corde

3 positions réglables pour une fixation facile

Image: Visual guide to the easy manual opening and closing of the umbrella, highlighting the double pulley system with rope and the 3 adjustable positions for secure fixation.

MAINTENANCE

- **Cleaning the Canopy:** Clean the polyester canopy with a mild soap and water solution. Use a soft brush or cloth to remove dirt. Rinse thoroughly and allow to air dry completely before closing or storing.
- **Cleaning the Frame:** Wipe the wooden pole and ribs with a damp cloth. For deeper cleaning, use a wood-safe cleaner. Ensure the wood is dry after cleaning.
- **Storage:** For prolonged periods of non-use or during harsh weather, close the umbrella and store it in a dry, protected area. The 2-piece detachable pole allows for convenient storage and transport.





Image: The Outsunny umbrella shown in its compact, closed position, ready for storage.

TROUBLESHOOTING

- **Umbrella is unstable:** Ensure you are using an umbrella base of at least 15 kg. Check that the pole is fully inserted into the base and tightened if your base has a securing screw.
- **Difficulty opening/closing:** Check for any obstructions in the canopy fabric or the pulley system. Ensure the rope is not tangled. Apply a silicone-based lubricant to moving parts if necessary.
- **Canopy not providing enough shade:** Adjust the manual tilt mechanism to change the angle of the canopy relative to the sun.

SPECIFICATIONS

Model Number	84D-017GN
Overall Dimensions (L x W x H)	200 cm x 150 cm x 235 cm (2L x 1.5W x 2.35H m)
Canopy Material	180 g/m ² Polyester
Frame Material	Bamboo Wood, Fir Wood
Pole Diameter	3.8 cm
Color	Dark Green
Opening Mechanism	Manual Pulley System
Tilt Mechanism	Manual Tilt
Special Features	Waterproof, Detachable 2-part Pole
Item Weight	4.5 kg



Image: Detailed dimensions of the umbrella, including its 2m length, 1.5m width, 2.35m height, and 38mm pole diameter.

WARRANTY AND SUPPORT

For any questions regarding your Outsunny Rectangular Wooden Polyester Patio Umbrella, please refer to your purchase documentation for warranty details or contact the retailer/manufacturer directly for support. Please have your model number (84D-017GN) and purchase date available when contacting support.