

[manuals.plus](#) /› [CLEANmaxx](#) /› [CLEANmaxx 9107 Cyclonic Cordless 2-in-1 Vacuum Cleaner Instruction Manual](#)

CLEANmaxx 9107

CLEANmaxx 9107 Cyclonic Cordless 2-in-1 Vacuum Cleaner Instruction Manual

Model: 9107 | Brand: CLEANmaxx

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual carefully before using the CLEANmaxx 9107 Cyclonic Cordless 2-in-1 Vacuum Cleaner. Keep this manual for future reference.

- This appliance is intended for household use only. Do not use it for commercial or industrial purposes.
- Keep the appliance away from children and pets.
- Do not vacuum liquids, hot ashes, burning cigarettes, or sharp objects. This can damage the appliance or cause injury.
- Ensure the power adapter is compatible with your local power supply.
- Do not operate the vacuum cleaner if it is damaged or malfunctioning. Contact customer support for assistance.
- Only use original accessories and spare parts provided by CLEANmaxx.
- The battery pack must be charged using only the specified charger. Do not attempt to open or modify the battery.
- Avoid exposing the battery to extreme temperatures or direct sunlight.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your CLEANmaxx 9107 vacuum cleaner.



Image 2.1: All components of the CLEANmaxx 9107 vacuum cleaner, including the main unit, extension tube, floor brush, crevice tool, brush nozzle, wall mount, and charger.

Components List:

1. Main Vacuum Unit (with dust container and motor)
2. Removable Battery Pack
3. Extension Tube (Aluminum)
4. Power Rotation Floor Brush
5. Crevice Tool

6. Brush Nozzle
7. Wall Mount with Integrated Charging Station
8. Power Adapter

3. SETUP

3.1. Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the main unit or separately.

- Connect the power adapter to the charging port on the main unit or the separate battery.
- Plug the adapter into a power outlet.
- The battery indicator will show the charging status. A full charge typically takes approximately 5 hours.
- The vacuum cleaner can operate for up to 30 minutes on a full charge, depending on the power setting and attachments used.





Image 3.1: The CLEANmaxx 9107 vacuum cleaner being charged while docked on its wall mount.

3.2. Assembly

The CLEANmaxx 9107 can be used as a stick vacuum or a handheld vacuum.

Assembling as a Stick Vacuum:

1. Attach the extension tube to the main vacuum unit until it clicks into place.
2. Attach the Power Rotation Floor Brush to the other end of the extension tube until it clicks.





Image 3.2: The CLEANmaxx 9107 assembled as a stick vacuum, ready for floor cleaning.

Using as a Handheld Vacuum:

To use as a handheld vacuum, detach the extension tube and directly attach the desired accessory (crevice tool or brush nozzle) to the main vacuum unit.



Image 3.3: The CLEANmaxx 9107 configured as a handheld vacuum with the brush nozzle attached, suitable for upholstery or car interiors.

3.3. Wall Mount Installation

The wall mount provides convenient storage and charging. Choose a suitable location near a power outlet. Secure the wall mount to the wall using appropriate screws and anchors (not included) for your wall type. Ensure it is firmly attached before docking the vacuum cleaner.

4. OPERATING INSTRUCTIONS

4.1. Powering On/Off

Press the power button located on the main unit to turn the vacuum cleaner on. Press it again to turn it off.

4.2. Using the Vacuum Cleaner

- **For Floors:** Use the assembled stick vacuum with the Power Rotation Floor Brush for carpets, hard floors, and other large surfaces. The brush helps agitate dirt and pet hair for effective cleaning.
- **For Upholstery and Small Areas:** Use the handheld configuration with the brush nozzle to clean furniture, car seats, and pet beds.



Image 4.1: The handheld CLEANmaxx 9107 vacuum cleaner effectively removing debris from upholstery.

- **For Tight Spaces and Corners:** Attach the crevice tool to the handheld unit to reach narrow gaps, corners, and edges.
- **For High Reach:** When assembled as a stick vacuum, the extension tube allows you to clean high areas like ceilings or curtain rails.



Image 4.2: The CLEANmaxx 9107 in stick mode, demonstrating its ability to clean high corners and ceilings.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1. Emptying the Dust Container

The CLEANmaxx 9107 features a bagless design. Empty the dust container regularly, especially when the 'MAX' line is reached.

1. Ensure the vacuum cleaner is turned off.
2. Press the release button to detach the dust container from the main unit.
3. Open the dust container lid and empty the contents into a waste bin.
4. The dust container is washable. Rinse it with water if necessary and ensure it is completely dry before reattaching.

5.2. Cleaning the Filters

The cyclonic filter system requires periodic cleaning to maintain suction power.

1. With the dust container detached, carefully remove the filter components.
2. Tap the filters gently to remove loose dust.
3. If heavily soiled, rinse the filters under running water. Do not use detergents.
4. Allow all filter components to air dry completely for at least 24 hours before reassembling. Using wet filters can damage the motor.

5.3. Cleaning the Power Rotation Floor Brush

Hair and debris can get tangled in the brush roll, affecting performance.



Image 5.1: Close-up view of the Power Rotation Floor Brush, highlighting its rotating mechanism.

1. Ensure the vacuum cleaner is off and disconnected from power.
2. Detach the floor brush from the extension tube.
3. Locate the brush roll release mechanism (if applicable) and remove the brush roll.
4. Use scissors or a brush to carefully remove any tangled hair or fibers from the brush roll.
5. Reinsert the brush roll and ensure it is securely locked in place.

6. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery fully.

Problem	Possible Cause	Solution
	Battery is not properly inserted.	Ensure the battery pack is securely clicked into place.
Reduced suction power.	Dust container is full.	Empty the dust container.
	Filters are clogged.	Clean or replace the filters. Ensure they are completely dry before reinserting.
	Nozzle or tube is blocked.	Check for and remove any blockages in the floor brush, extension tube, or main unit inlet.
Floor brush not rotating.	Hair or debris tangled in brush roll.	Clean the brush roll as described in Section 5.3.
	Brush roll is not properly installed.	Ensure the brush roll is correctly inserted and locked.

7. SPECIFICATIONS

Technical details of the CLEANmaxx 9107 Cyclonic Cordless 2-in-1 Vacuum Cleaner.

Feature	Detail
Brand	CLEANmaxx
Model Number	9107
Power	150 Watts
Voltage	100 Volts (Input)
Battery Type	12V (2 batteries required)
Battery Runtime	Up to 15-30 minutes (depending on usage)
Charging Time	Approximately 5 hours
Weight	2.65 Kilograms
Dimensions (L x W x H)	26 x 14 x 72.5 cm
Filter Type	Cyclonic
Special Features	Cordless, Bagless, 2-in-1 (Handheld & Stick), Wall Mount Charging Station
Surface Recommendation	Carpet, Hard Floor, Upholstery

8. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, spare parts, or warranty claims, please contact your retailer or the CLEANmaxx

customer service department. Keep your proof of purchase for warranty validation.

Related Documents - 9107

	<p>CLEANMAXX 12572/15098 Cordless Handheld Vacuum Cleaner - Operating Instructions Official operating instructions for the CLEANMAXX 12572/15098 cordless handheld vacuum cleaner, including important notices and product information from DS Produkte GmbH.</p>
	<p>CLEANmaxx Akku-Handstaubsauger Bedienungsanleitung & Informationen Entdecken Sie den CLEANmaxx Akku-Handstaubsauger: leistungsstark, kabellos und einfach zu reinigen. Ideal für Haushalt, Auto und mehr. Inkl. Zubehör und technischer Daten.</p>
	<p>CLEANmaxx 15439 2-in-1 Cordless Vacuum Cleaner: Operating Instructions Operating instructions for the CLEANmaxx 15439 2-in-1 cordless vacuum cleaner, covering setup, usage, safety precautions, maintenance, and disposal.</p>
	<p>CLEANmaxx Upholstery & Rug Cleaner: User Manual and Operating Instructions Comprehensive user manual for the CLEANmaxx upholstery and rug cleaner, covering setup, operation, cleaning, maintenance, troubleshooting, and technical specifications. Learn how to effectively clean carpets and upholstery with this appliance.</p>
	<p>CleanMaxx Dust Mite Vacuum Cleaner Operating Instructions This document provides operating instructions for the CleanMaxx Dust Mite Vacuum Cleaner, covering intended use, safety precautions, device overview, usage, cleaning, troubleshooting, and technical data. It is available in German, English, French, and Dutch.</p>
	<p>CLEANmaxx Multi Cyclone Vacuum Cleaner 14638 - User Manual & Safety Guide Comprehensive operating instructions for the CLEANmaxx Multi Cyclone Vacuum Cleaner (Model 14638, HL-805 B). Learn about safe usage, intended use, assembly, cleaning, and disposal.</p>

