

RCA RT4038/4016A

RCA 40-Inch 1080P Full HD LED Flat Screen TV User Manual

Model: RT4038/4016A

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your RCA 40-Inch 1080P Full HD LED Flat Screen TV. Please read this manual thoroughly before using your television to ensure proper and safe operation.

The RCA 40-Inch 1080P Full HD LED Flat Screen TV delivers a stunning visual experience with its 1080P Full HD resolution and LED backlighting. Designed for versatility, it features multiple connectivity options including HDMI, USB, and VGA ports, allowing you to connect various devices such as computers, gaming consoles, and cable boxes.



Image: Front view of the RCA 40-inch 1080P Full HD LED Flat Screen TV, showcasing its sleek design.

PACKAGE CONTENTS

Before proceeding with the setup, please verify that all items are present in the package:

- RCA 40-Inch 1080P Full HD LED Flat Screen TV
- Remote Control (with batteries)
- TV Stands (2 pieces)
- Screws for TV Stands
- Power Cable
- User Manual (this document)

SETUP

1. Attaching the TV Stands

To place the TV on a flat surface, attach the included stands:

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure each stand using the provided screws. Ensure they are tightened firmly.

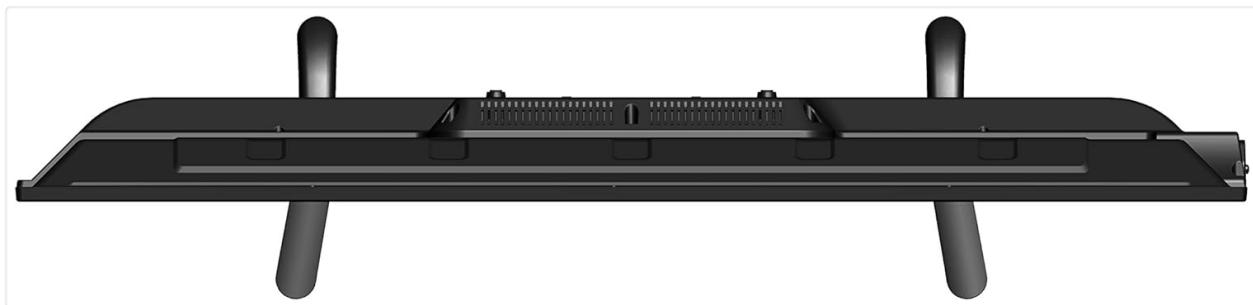


Image: Top view of the RCA 40-inch TV, illustrating the attachment points for the two included stands.

2. Wall Mounting (Optional)


The TV is VESA wall mount ready. For wall mounting, refer to the instructions provided with your VESA-compatible wall mount kit. Ensure the mount supports the TV's weight and VESA pattern.

Note: Wall mount kit is sold separately.

3. Connecting Devices

The TV offers various input ports for connecting external devices:

- **HDMI Ports:** Connect Blu-ray players, gaming consoles, cable/satellite boxes, or computers.
- **USB Port:** For media playback from USB storage devices.
- **VGA Port:** Connect a computer for use as a monitor.
- **RF Cable/Antenna Jack:** Connect an antenna for over-the-air broadcasts or a cable TV connection.

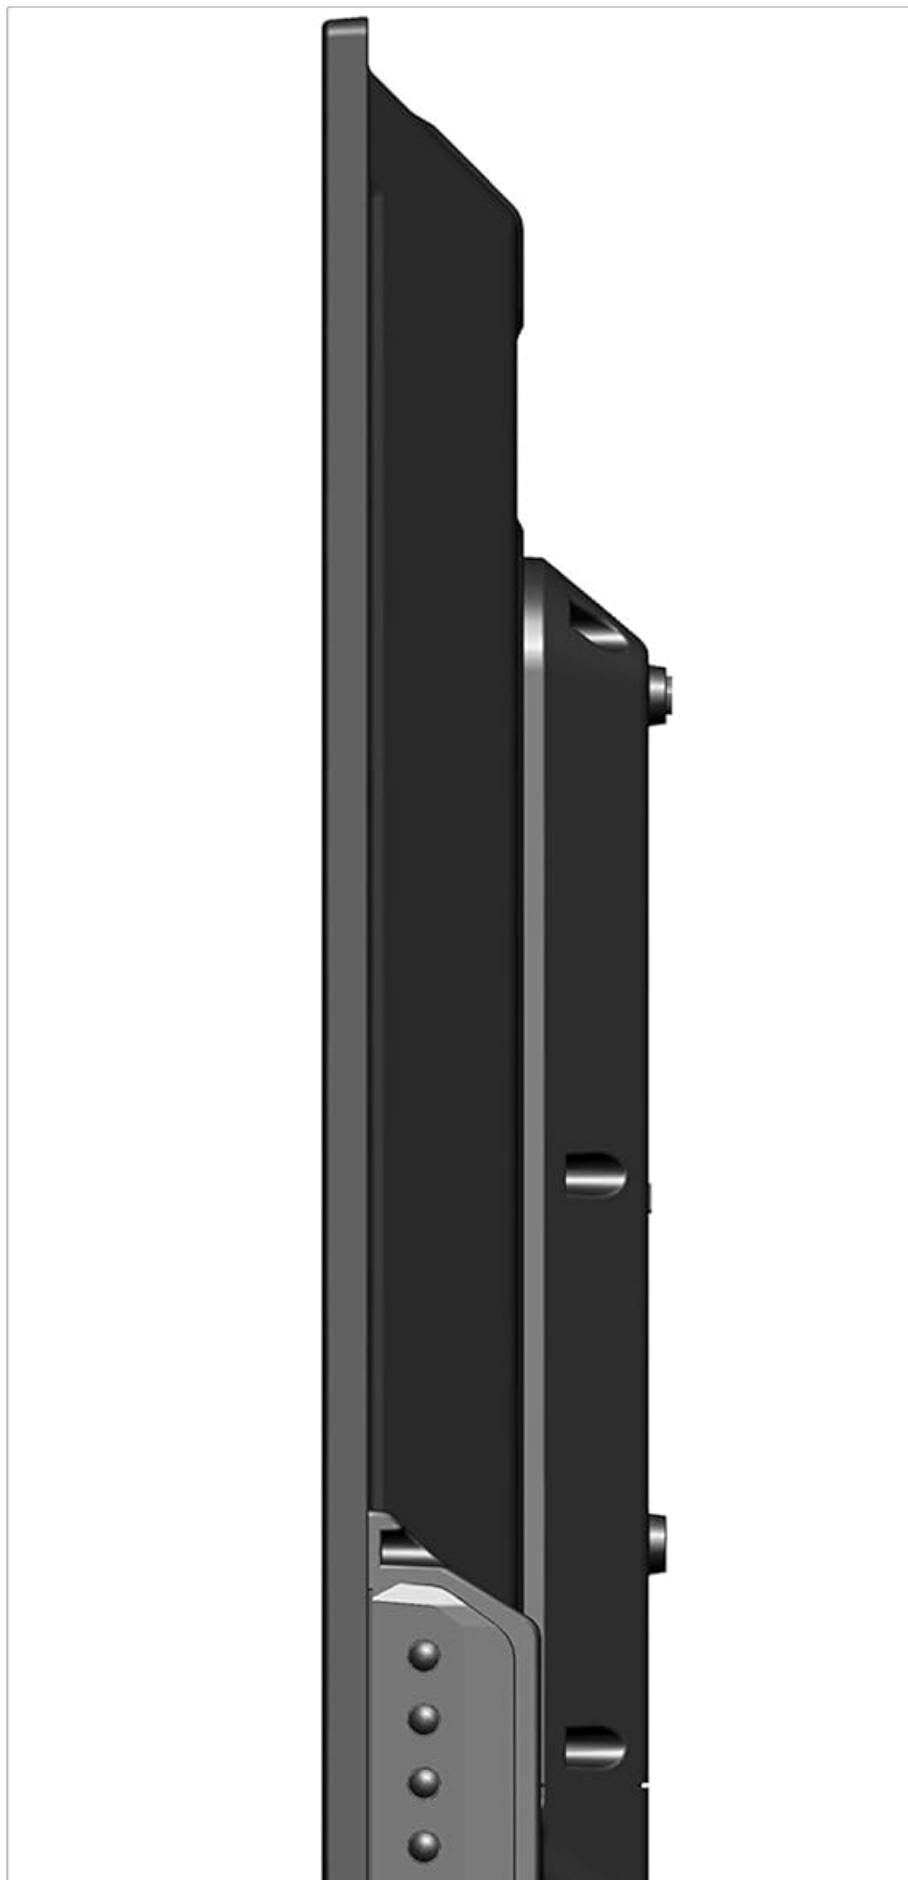

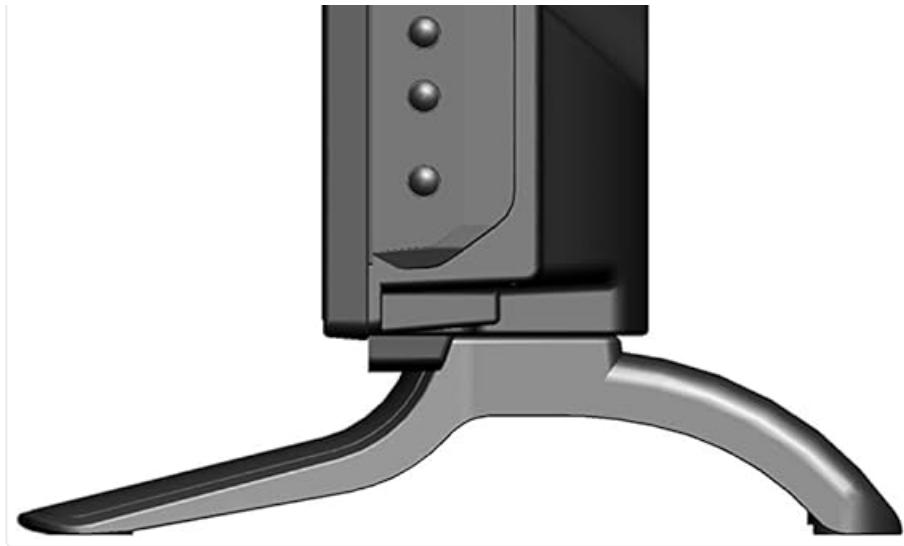


Image: Side view of the RCA 40-inch TV, highlighting the location of various input ports for external device connections.

4. Power Connection

After connecting all desired devices, plug the power cable into the TV's power input and then into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. Initial Power On and Channel Scan

1. Press the Power button on the remote control or on the TV.
2. Follow the on-screen prompts for initial setup, including language selection.
3. If using an antenna, select "Antenna" or "Air" as the input source and perform an automatic channel scan to find available channels.

2. Using the Remote Control

The included remote control provides full functionality for navigating your TV. Insert the provided batteries into the remote control before use.

- **Power:** Turns the TV on or off.
- **Input/Source:** Switches between connected devices (HDMI, USB, VGA, TV).
- **Volume +/-:** Adjusts the sound level.
- **Channel +/-:** Changes TV channels.
- **Menu:** Accesses the TV's settings menu.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate through menus and confirm selections.

3. Picture and Sound Settings

Access the TV's menu to customize picture and sound settings for an optimal viewing experience:

- **Picture Modes:** Select from preset modes like Standard, Dynamic, Movie, or customize settings such as Brightness, Contrast, Color, and Sharpness.

- **Sound Modes:** Choose from preset audio modes like Standard, Music, Movie, or adjust Bass, Treble, and Balance.
- **Aspect Ratio:** Adjust the screen display ratio (e.g., 16:9) to fit content.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your RCA TV.

- **Cleaning the Screen:** Use a soft, lint-free cloth specifically designed for electronics. For stubborn marks, lightly dampen the cloth with water or a screen cleaner. Do not spray liquid directly onto the screen.
- **Cleaning the Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked. Adequate airflow prevents overheating.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, replace it immediately.
- **Unplugging:** Unplug the TV from the power outlet during lightning storms or when it will be left unattended for long periods.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power cord not connected; Power outlet not working; TV in standby mode.	Ensure power cord is securely plugged in. Test the outlet with another device. Press the Power button on the remote or TV.
No Picture, But Sound is Present	Incorrect input source selected; Loose video cable connection.	Press the "Input" or "Source" button on the remote to select the correct input. Check and secure all video cable connections (HDMI, VGA).
No Sound, But Picture is Present	Volume is muted or too low; Incorrect audio output settings; Loose audio cable connection.	Press the "Volume +" button or unmute the TV. Check audio settings in the TV menu. Ensure audio cables are securely connected.
Remote Control Not Working	Batteries are dead or incorrectly inserted; Obstruction between remote and TV; Remote sensor on TV is blocked.	Replace batteries, ensuring correct polarity. Remove any obstructions. Ensure the remote sensor on the TV is clear.

Problem	Possible Cause	Solution
Poor Picture Quality (e.g., "washed out" effect)	Picture settings are not optimized; Weak antenna signal.	Adjust picture settings (Brightness, Contrast, Color) in the TV menu. Reposition or upgrade your antenna for better signal reception.

If the problem persists after trying these solutions, please contact RCA customer support.

SPECIFICATIONS

Feature	Detail
Brand	RCA
Model Number	RT4038/4016A
Screen Size	40 Inches (102 cm diagonal)
Display Technology	LED
Resolution	1080p Full HD
Refresh Rate	60 Hz
Aspect Ratio	16:9
Color	Black
Item Weight	19.36 pounds
Product Dimensions (D x W x H)	8"D x 47"W x 27"H (47 x 8 x 27 inches)
Speaker Type	Built-In
Connectivity Technology	HDMI, USB, VGA, RF Cable/Antenna Jack
Voltage	120 Volts (AC)



Image: Energy Guide label for the RCA 40-inch TV, indicating an estimated yearly energy cost of \$14.

WARRANTY AND SUPPORT

RCA provides customer support for your television. For technical assistance, warranty claims, or general inquiries, please refer to the contact information provided with your product documentation or visit the official RCA website.

As per the product features, RCA offers "UNMATCHED CUSTOMER SERVICE - If you have any issues at all, our friendly technical support team are always here to help you."

Please retain your proof of purchase for warranty purposes.

© 2024 RCA. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.