

Member's Mark 980059747

Member's Mark Portable Stainless Steel 2-Burner Gas Grill User Manual

Model: 980059747

1. INTRODUCTION

Thank you for choosing the Member's Mark Portable Stainless Steel 2-Burner Gas Grill. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new grill. Please read all instructions carefully before using the appliance to ensure proper function and safety.

This portable gas grill is designed for outdoor use only and features two main burners, offering versatile cooking options for various outdoor settings.

2. SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in fire, explosion, or burn hazard which could cause property damage, personal injury, or death.

- **FOR OUTDOOR USE ONLY.** Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **PROPANE GAS ONLY.** Do not connect the grill to an unregulated high-pressure gas supply.
- Always ensure adequate ventilation. Never operate the grill in an enclosed space.
- Keep children and pets away from the grill at all times.
- Maintain a minimum clearance of 10 inches from the back and sides of the grill to any combustible materials.
- Always check for gas leaks before each use. Use a soapy water solution to check connections. Bubbles indicate a leak.
- Do not attempt to repair or alter the grill. Contact qualified service personnel for repairs.
- Always turn off the gas supply at the propane tank after each use.
- Allow the grill to cool completely before moving or cleaning.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, do not attempt to

assemble or operate the grill. Contact customer support for assistance.

- Grill Unit (with 2 burners, control knobs, ignitor)
- Lid
- Cooking Grates
- Heat Tents/Flame Tamers
- Grease Tray
- Propane Regulator and Hose Assembly
- Folding Legs (pre-attached)

4. SETUP AND ASSEMBLY

Assembly is required for this product. Ensure you have adequate space and follow these steps carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Position the Grill:** Place the grill on a flat, stable, non-combustible surface. Unfold the legs to ensure the grill is stable.
3. **Install Cooking Grates and Heat Tents:** Place the heat tents over the burners, then position the cooking grates on top.
4. **Connect Propane Tank:**
 - Ensure the grill control knobs are in the 'OFF' position.
 - Connect the regulator hose to the propane tank valve. Hand-tighten firmly. Do not use tools to tighten.
 - Perform a leak test (see Safety Information).



Figure 4.1: The Member's Mark Portable Gas Grill connected to a standard propane tank via its regulator and hose assembly. Ensure all connections are secure and leak-free before operation.

5. OPERATING INSTRUCTIONS

Always read and understand the lighting instructions before attempting to ignite the grill.

5.1. Lighting the Grill



Figure 5.1: Close-up view of the ignitor button and control knobs. The ignitor button is red and labeled 'IGNITOR'.

1. **Read all instructions before lighting.**
2. **Open lid during lighting.**
3. **Turn control knob to 'OFF' position.**
4. **Slowly turn and push control knob to 'HI'.**
5. **Push and hold ignitor button.**
6. If ignition does not occur in 5 seconds, turn the control knob off, wait 5 minutes and repeat the lighting procedure.

5.2. Adjusting Heat

Once lit, you can adjust the flame intensity using the control knobs. Turn the knob towards 'HI' for higher heat and towards 'LOW' for lower heat. Each burner can be adjusted independently.

5.3. Cooking



Figure 5.2: The Member's Mark Portable Gas Grill in operation, with the lid open and food cooking on the grates. The grill is positioned on an outdoor patio surface.

Place food directly on the cooking grates. Close the lid to retain heat and cook food more evenly. Monitor food regularly to prevent overcooking or burning.

5.4. Shutting Down the Grill

1. Turn all burner control knobs to the 'OFF' position.
2. Turn off the gas supply at the propane tank valve.
3. Allow the grill to cool completely before covering or storing.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and safe operation of your grill.

- **Cleaning the Cooking Grates:** After each use, once the grill has cooled, brush off any food residue from the grates. For stubborn residue, wash with warm soapy water and a non-abrasive brush.

- **Cleaning the Grease Tray:** Regularly remove and clean the grease tray to prevent grease fires.
- **Exterior Cleaning:** Wipe down stainless steel surfaces with a damp cloth and mild detergent. For best results, use a stainless steel cleaner.
- **Burner Maintenance:** Periodically check burner ports for blockages (e.g., spider webs, food debris). Clean with a wire brush or pipe cleaner if necessary.
- **Storage:** Store the grill in a dry, protected area when not in use. If storing outdoors, use a grill cover to protect it from the elements. Disconnect the propane tank if storing for extended periods.

7. TROUBLESHOOTING

If you encounter issues with your grill, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Burner fails to light	◦ No gas flow ◦ Ignitor not sparking ◦ Blocked burner ports	◦ Check propane tank level and connections. ◦ Ensure ignitor button is pushed and held. ◦ Clean burner ports.
Low flame or uneven heat	◦ Low gas pressure ◦ Blocked burner ports ◦ Regulator issue	◦ Check propane tank level. ◦ Clean burner ports. ◦ Reset regulator by disconnecting and reconnecting the tank.
Gas odor	◦ Gas leak	◦ Immediately turn off gas at the tank. Perform a leak test with soapy water. Do not operate if a leak is detected.

8. SPECIFICATIONS

Key specifications for the Member's Mark Portable Stainless Steel 2-Burner Gas Grill:

- **Model Number:** 980059747
- **Fuel Type:** Propane Gas
- **Main Burner Count:** 2
- **Material:** Stainless Steel (Frame, Handle, Material Type)
- **Product Dimensions (D x W x H):** 20.1" x 23.4" x 13"
- **Item Weight:** 26.4 Pounds
- **Installation Type:** Free Standing
- **Required Assembly:** Yes
- **Recommended Use:** Outdoor
- **Included Components:** Lid
- **UPC:** 078742264158



Figure 8.1: The Member's Mark Portable Stainless Steel 2-Burner Gas Grill in its closed, portable configuration, showcasing its stainless steel finish and compact design.

9. WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your purchase or contact Member's Mark customer service. Keep your proof of purchase for warranty claims.

If you require technical assistance or have questions not covered in this manual, please contact Member's Mark customer support through their official website or the contact information provided at the point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question