

[Manuals.plus](#) /

› [Nespresso](#) /

› Nespresso Lattissima Touch Espresso Machine User Manual

Nespresso F511-EU-BK-NE

Nespresso Lattissima Touch Espresso Machine User Manual

Model: F511-EU-BK-NE

INTRODUCTION

Welcome to the user manual for your Nespresso Lattissima Touch Espresso Machine. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your machine to ensure you enjoy delicious coffee beverages for years to come. Your machine, model F511-EU-BK-NE, is designed for ease of use and versatility, allowing you to prepare a variety of coffee and milk-based drinks with a single touch.



Image: The Nespresso Lattissima Touch Espresso Machine, black in color, featuring a sleek design. A glass filled with a layered latte macchiato sits on the drip tray, next to the integrated milk frother and coffee dispenser.

SETUP AND FIRST USE

Before using your Nespresso Lattissima Touch machine for the first time, please follow these steps:

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.

- 2. **Placement:** Place the machine on a stable, flat, heat-resistant surface, away from water sources and direct sunlight.
- 3. **Water Tank:** Fill the water tank with fresh drinking water.
- 4. **Power Connection:** Plug the machine into a grounded power outlet.
- 5. **Initial Rinse:** Perform an initial rinse cycle as per the quick start guide to clean the internal system.
- 6. **Pre-heating:** The machine has a rapid pre-heating time of approximately 25 seconds for coffee and 15 seconds for milk. Wait for the indicator lights to stabilize before brewing.

OPERATING INSTRUCTIONS

Your Lattissima Touch machine offers simple one-touch operation for various coffee and milk recipes.

Brewing Coffee (Espresso/Lungo)

- 1. Ensure the water tank is filled.
- 2. Open the capsule lever and insert a Nespresso capsule. Close the lever.
- 3. Place a cup under the coffee outlet.
- 4. Press the desired coffee button (Espresso or Lungo). The machine will automatically brew and stop.

Preparing Milk-Based Beverages (Cappuccino, Latte Macchiato, Milk Foam)

- 1. Fill the milk container with fresh cold milk.
- 2. Attach the milk container to the machine.
- 3. Adjust the milk foam regulator to your desired setting (e.g., minimum for hot milk, maximum for dense foam).
- 4. Insert a Nespresso capsule if preparing a coffee-milk recipe.
- 5. Place a suitable cup under the milk spout.
- 6. Press the button for your desired recipe (Cappuccino, Latte Macchiato, or Milk Foam). The machine will automatically prepare the drink.

The machine features an automatic shut-off function, turning off after 9 minutes of inactivity to conserve energy.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your machine.

- **Daily Cleaning:**
 - Empty and rinse the drip tray and used capsule container daily.
 - Clean the milk container and its components thoroughly after each use. Most parts are dishwasher safe.
 - Wipe the machine exterior with a soft, damp cloth.
- **Water Tank:** Rinse the water tank regularly and refill with fresh water.
- **Descaling:** The machine will indicate when descaling is required. Follow the descaling instructions provided in the full manual or on the Nespresso website to remove mineral buildup and maintain coffee quality.

TROUBLESHOOTING

If you encounter issues with your machine, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No coffee flow	Water tank empty; machine needs descaling; capsule blocked.	Fill water tank; perform descaling; check capsule insertion.
Milk not frothing properly	Milk container not clean; milk type unsuitable; milk too warm.	Clean milk system thoroughly; use fresh, cold, semi-skimmed milk; ensure milk is chilled.
Machine not turning on	Not plugged in; power outage; automatic shut-off activated.	Check power connection; verify power supply; press any button to reactivate.

For more detailed troubleshooting, please refer to the complete user manual or contact Nespresso customer support.

SPECIFICATIONS

Brand	Nespresso
Model Number	F511-EU-BK-NE
Color	Black
Shipping Dimensions	39.4 x 32.4 x 27.8 cm
Item Weight	5.9 Kilograms (13.01 Pounds)
Power / Wattage	1260 Watts
Special Features	Programmable
Coffee Machine Type	Espresso Machine
Filter Type	Reusable
Style	Modern
Specific Uses	Cappuccino, Latte Macchiato, Iced Coffee
Included Components	Milk Frother
Operation Mode	Fully Automatic
First Available Date	February 7, 2019

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Nespresso website. You can also find contact details for Nespresso customer service in your region on their website.
Nespresso Official Website: www.nespresso.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is the descaling light continuously blinking on my Nespresso Lattissima Touch F511?

On the Nespresso Lattissima Touch (F511), a blinking or steady orange descaling light indicates that the machine has reached a specific threshold of usage and requires maintenance to remove mineral buildup. Common reasons for the...

[Read full answer](#)