

- Manuals.plus /
- > **CANDY** /
 - > Candy 90 X 60 cm, 5 Gas Burners Free Standing Gas Cooker, Grey - CGG95HXLPG User Manual

CANDY CGG95HXLPG

Candy 90 X 60 cm, 5 Gas Burners Free Standing Gas Cooker
User Manual

MODEL: CGG95HXLPG

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Candy Gas Cooker.

1. Product Overview

The Candy CGG95HXLPG is a 90 x 60 cm free-standing gas cooker designed for home use. It features 5 gas burners and a gas oven with grill functionality. The appliance is constructed with a stainless steel finish and black glass panels, ensuring durability and ease of cleaning. This cooker is designed to provide reliable performance for various cooking needs.



Figure 1: Front view of the Candy CGG95HXLPG Gas Cooker, showing the hob with five burners, control knobs, and oven door.

2. Setup and Installation

Proper installation is crucial for the safe and efficient operation of your gas cooker. It is recommended that installation be performed by a qualified technician.

2.1. Site Preparation

- Ensure the installation area is well-ventilated.
- Verify that the floor is level and capable of supporting the cooker's weight (approximately 61 kg).
- Allow adequate clearance around the appliance for ventilation and access. The product dimensions are 90 cm (Length) x 60 cm (Width) x 85 cm (Height).

2.2. Gas Connection

- This appliance is designed for Natural Gas fuel type. Ensure your gas supply matches this requirement.
- All gas connections must comply with local regulations and be performed by a certified gas fitter.
- Check for gas leaks using a soapy water solution after connection. Do not use an open flame.

2.3. Electrical Connection

- The cooker requires an electrical connection for the automatic ignition system and oven light.
- Ensure the electrical supply matches the voltage and frequency specified on the appliance rating plate.
- The appliance must be properly earthed.

3. Operating Instructions

3.1. Using the Gas Hob Burners

The cooker is equipped with 5 cast iron gas burners of varying sizes, controlled by front-mounted knobs.

1. Place your cookware centrally on the burner grate.
2. Push in the corresponding control knob and turn it counter-clockwise to the maximum flame setting.
3. The automatic ignition system will spark, lighting the burner. Hold the knob in for a few seconds to allow the thermocouple to heat up and activate the flame safety device.
4. Once lit, release the knob and adjust the flame size by turning the knob between the maximum and minimum settings.
5. To turn off the burner, turn the knob clockwise to the 'off' position.

3.2. Using the Gas Oven and Grill

The oven has a capacity of approximately 108 liters and includes a grill function. It comes with a wired shelf and an oven tray.



BIGGEST
CAPACITY, MORE FOOD!

CANDY
ITALY



MAXIMUM OVEN CAPACITY – BIG IDEAS!

Candy has the biggest inner cavity in the market with extra space to enlarge your creativity in the kitchen. Fit more meals without compromising on the quality or performance of your cooker!

Figure 2: Illustration of the oven's internal capacity and shelf positions, highlighting its spacious design.

3.2.1. Oven Operation

1. Open the oven door.
2. Push in the oven control knob and turn it to the desired temperature setting.
3. The oven will ignite automatically. Hold the knob in for a few seconds to ensure the flame is established.
4. Close the oven door. The oven light will illuminate when the door is open.
5. Monitor cooking progress through the glass door.
6. To turn off the oven, turn the knob to the 'off' position.

3.2.2. Grill Operation

The grill function allows for closed-door grilling.

1. Place food on the oven tray or a suitable grill rack.
2. Push in the oven control knob and turn it to the grill symbol.
3. The grill element will ignite. Hold the knob in for a few seconds.
4. Close the oven door.
5. Monitor food closely to prevent burning.
6. To turn off the grill, turn the knob to the 'off' position.

3.3. Storage and Broiler Drawers

The cooker includes both storage and broiler drawers. The broiler drawer is located beneath the main oven cavity and is used for grilling or slow cooking at lower temperatures. The storage drawer can be used for keeping cooking accessories.

4. Maintenance and Cleaning

Regular cleaning and maintenance will prolong the life of your appliance and ensure safe operation.

- **Before Cleaning:** Always ensure the cooker is cool and disconnected from the power supply.
- **Hob Surface:** Wipe the stainless steel surface with a soft cloth and mild detergent. Avoid abrasive cleaners that can scratch the finish.
- **Cast Iron Grids:** The cast iron grids can be removed for cleaning. Wash them with warm soapy water and dry thoroughly to prevent rust.
- **Burner Caps and Crowns:** Remove and clean these components regularly to ensure proper flame distribution. Ensure they are completely dry before reassembling.
- **Oven Interior:** For light spills, wipe with a damp cloth. For stubborn stains, use a specialized oven cleaner, following the product instructions carefully. Ensure adequate ventilation.
- **Glass Door:** Clean the oven door glass with a glass cleaner or warm soapy water.
- **Control Knobs:** The knobs can be pulled off for easier cleaning. Wipe them with a damp cloth.

5. Troubleshooting

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply; Power outage; Burner cap/crown misaligned or dirty.	Check gas valve; Check power supply; Clean and correctly position burner components.
Oven not heating.	Gas supply issue; Oven control knob not set correctly; Pilot light (if applicable) extinguished.	Verify gas supply; Ensure knob is pushed in and turned to a temperature setting; Refer to manual for pilot light re-ignition (if applicable).
Uneven flame on burner.	Burner ports clogged with food debris.	Clean burner ports with a non-metallic brush or toothpick.
Odor of gas.	Gas leak.	IMMEDIATELY turn off gas supply, open windows, and contact a qualified gas technician. Do not operate electrical switches or appliances.

6. Specifications

Feature	Detail
Brand	CANDY
Model Name	CGG95HXLPG
Product Dimensions (L x W x H)	90 x 60 x 85 cm
Item Weight	61 Kilograms
Oven Capacity	108 Liters
Installation Type	Freestanding

Feature	Detail
Number of Burners	5
Burner Type	Cast Iron
Oven Cooking Mode	Grill
Control Console	Knob
Fuel Type	Natural Gas
Material Type	Cast Iron (for grates), Stainless Steel (body)
Color	Grey
Included Components	Gas Cooker, Wired Shelf, Oven Tray, Rotisserie

7. Warranty Information

This Candy Gas Cooker (Model CGG95HXLPG) comes with a **1-Year Full Warranty** from the date of purchase. This warranty covers manufacturing defects and faulty workmanship under normal domestic use. For extended coverage, 1-Year and 2-Year Extended Warranty plans are available for purchase separately. Please refer to your retailer or the warranty provider for details on these extended plans. *Please retain your proof of purchase for warranty claims.*

8. Support

If you encounter any issues not covered in the troubleshooting section or require technical assistance, please contact Candy customer support or your authorized service center. Have your model number (CGG95HXLPG) and serial number ready when contacting support. For the most up-to-date contact information, please visit the official Candy website or refer to the documentation provided with your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07NDWBRWV>

More documents and user manuals: <https://manuals.plus/>