

Hape E3159

Hape Pop-Up Shop Wooden Play Set Instruction Manual

Model: E3159

1. PRODUCT OVERVIEW

The Hape Pop-Up Shop is a wooden play set designed for children aged 3 years and up. It encourages imaginative role-play as a vendor or customer, teaching about shopping and money. The set includes a swing-out display shelf, a 5-layer shelf, a handheld scanner, a realistic calculator, and a card reader.



Love play, learn.

Hape offers innovative,
eco-friendly,
and educational toys,
designed to inspire creativity
and learning in children
while committing to quality,
sustainability and safety.

Image 1.1: Fully assembled Hape Pop-Up Shop, showcasing its design and features.

2. SAFETY INFORMATION

- This product is intended for children aged 3 years and older.
- Adult assembly is required.

- Regularly inspect all parts for damage or loose connections to ensure safe play.
- Keep small parts away from children under 3 years during assembly to prevent choking hazards.
- Do not allow children to climb on the unit.

3. PACKAGE CONTENTS

Before assembly, ensure all components are present. The package includes various parts necessary for constructing the Pop-Up Shop. Refer to the included assembly diagram for a complete list of parts.

- Wooden panels and shelves
- Hardware (screws, connectors)
- Handheld Scanner
- Calculator
- Card Reader
- Chalkboard
- Instruction manual (this document)

4. SETUP AND ASSEMBLY

Assembly of the Hape Pop-Up Shop requires adult supervision and can take some time. Follow the step-by-step instructions provided in the separate assembly diagram included with your product. Ensure all screws are tightened securely, but do not overtighten.

1. **Unpack and Verify:** Carefully unpack all components and compare them against the parts list in the assembly diagram. If any parts are missing or damaged, contact Hape customer support before proceeding.
2. **Prepare Workspace:** Choose a clear, flat, and spacious area for assembly.
3. **Follow Diagram:** Assemble the wooden structure according to the numbered steps in the provided diagram. Pay close attention to the orientation of each piece.
4. **Secure Connections:** Ensure all screws and connectors are properly aligned and fully tightened. Some screw holes may require careful alignment.
5. **Attach Accessories:** Once the main structure is complete, attach the swing-out shelf, scanner, calculator, and card reader as indicated in the instructions. Note that the connecting mechanism for certain parts, such as the swing-out shelf, is designed for gentle use.
6. **Battery Installation:** Install batteries into the scanner, calculator, and card reader as per their individual instructions. Ensure correct polarity.

5. OPERATING INSTRUCTIONS

5.1 Swing-Out Display Shelf

The swing-out display shelf can be adjusted and fixed on either side of the main structure. Gently pivot the shelf to the desired position and ensure it is stable before placing items on it.



Image 5.1: Close-up of the swing-out display shelf, showing its adjustable design.

5.2 Five-Layer Shelf

The main unit features a five-layer shelf system, providing ample space for displaying play grocery items or other accessories. Arrange items to create an engaging shop environment.



Image 5.2: The five-layer shelf system, designed for organizing play items.

5.3 Handheld Scanner

To operate the handheld scanner, press the button located on its body. It will emit a beep sound and flash a light, simulating a real scanner. Ensure batteries are correctly installed for functionality.



Image 5.3: The handheld scanner with sound and light features.

5.4 Realistic Calculator

The integrated calculator is a functional device capable of basic arithmetic. Use it to tally prices for customers during play. Ensure batteries

are installed for the calculator to power on.



Image 5.4: The functional calculator for tallying purchases.

5.5 Card Reader

The card reader produces a reassuring beep when a play card is swiped through it, simulating a point-of-sale transaction. Verify battery installation for sound functionality.



Image 5.5: The card reader, providing auditory feedback for transactions.

5.6 Chalkboard

A small chalkboard is integrated into the design, allowing children to write daily specials or shop names using chalk (not included).



Image 5.6: The integrated chalkboard for custom messages.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as they may damage the wood finish or painted surfaces. Promptly clean any spills to prevent staining.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary. Inspect for any signs of wear, splintering, or damage to wooden parts.
- **Storage:** Store the play set in a dry environment, away from direct sunlight and extreme temperatures, to prevent warping or fading of the wood.
- **Battery Replacement:** Replace batteries in the scanner, calculator, and card reader when their functions diminish. Always use the recommended battery type and dispose of old batteries responsibly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Missing or damaged parts upon unboxing.	Manufacturing error or shipping damage.	Do not proceed with assembly. Contact Hape customer support immediately for assistance.
Scanner, calculator, or card reader not working.	Dead or incorrectly installed batteries.	Check battery compartment for correct polarity and replace with fresh batteries. If the issue persists, contact customer support.
Difficulty during assembly (e.g., screw holes not aligning).	Minor manufacturing variation or incorrect part orientation.	Carefully re-check the assembly diagram for correct part orientation. Apply gentle pressure to align holes. Do not force components.
Parts feel loose or unstable after assembly.	Screws not fully tightened or connecting mechanism damaged.	Retighten all screws. If a plastic connecting mechanism is damaged, contact customer support for replacement parts.
Stains on wooden surfaces.	Exposure to markers, crayons, or spills.	Clean immediately with a soft, damp cloth. Avoid using permanent markers or crayons directly on the wooden surfaces.

8. SPECIFICATIONS

Brand	Hape
Model Number	E3159
Age Range	3+ Years (36-120 Months)
Material Type	Wood
Color	Multicolor
Item Dimensions (L x W x H)	34.45 x 25.2 x 37.01 inches
Item Weight	13300 g
Educational Objective	Role Play
Included Components	Wooden parts, scanner, calculator, card reader

9. WARRANTY AND SUPPORT

Hape products are manufactured with high-quality materials and undergo strict quality control. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Hape website.

For technical support, missing parts, or any other inquiries, please contact Hape customer service. Contact details can typically be found on the Hape official website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question