

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TOSHIBA](#) /

› [Toshiba 32 Inch Smart HD LED TV - 32L5750EA User Manual](#)

## TOSHIBA 32L5750EA

# Toshiba 32 Inch Smart HD LED TV

MODEL: 32L5750EA USER MANUAL

### Important Safety Instructions

Please read all safety and operating instructions carefully before using your television. Keep these instructions for future reference.

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

### Package Contents

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact your retailer.

- Toshiba 32 Inch Smart HD LED TV (Model: 32L5750EA)
- TV Stand (2 pieces)
- Remote Control
- Power Cable
- User Manual (this document)
- Screws for Stand Assembly

### Setup

#### 1. Attaching the TV Stand

Carefully place the TV screen-down on a soft, clean surface to prevent scratches. Align the stand pieces with the designated slots on the bottom of the TV. Secure them using the provided screws.



Image: The Toshiba 32L5750EA television with its two-pronged stand attached, viewed from a slight angle. The screen is off, showing its dark, reflective surface. The lower bezel features the Toshiba logo and a textured gray finish.

## 2. Connecting Power

Plug the power cable into the TV's power input, then plug the other end into a wall outlet. Ensure the connection is secure.

## 3. Connecting External Devices

Use HDMI ports for high-definition devices like Blu-ray players, gaming consoles, or set-top boxes. USB ports can be used for media playback from storage devices.

- **HDMI:** Connect an HDMI cable from your device to any HDMI port on the TV.
- **USB:** Insert a USB storage device into a USB port for viewing photos, videos, or listening to music.

## 4. Initial Power On and First-Time Setup

Press the power button on the remote control or on the TV. The TV will guide you through the initial setup process, which typically includes:

1. Language selection.
2. Region/Country selection.
3. Channel scanning (for antenna/cable connections).
4. Network connection setup (Wi-Fi or Ethernet).

## Operating

---

## Basic Functions

- **Power On/Off:** Use the power button on the remote or TV.
- **Volume Control:** Use the VOL +/- buttons on the remote.
- **Channel Selection:** Use the CH +/- buttons or number pad on the remote.
- **Input Source:** Press the 'Source' or 'Input' button on the remote to switch between HDMI, USB, TV, etc.

## Smart TV Features

Your Toshiba Smart TV allows access to various online services and applications. Ensure your TV is connected to the internet for these features.

- **Home Screen:** Press the 'Home' button on your remote to access the Smart TV interface, where you can find installed apps and recommended content.
- **App Store:** Navigate to the app store icon to download and install additional applications.
- **Web Browser:** Use the built-in web browser to surf the internet.



Image: The Toshiba 32L5750EA Smart HD LED TV, viewed from a slight angle, displaying a colorful scene on its screen. The image shows a traditional Japanese pagoda with Mount Fuji in the distance, surrounded by autumn foliage. The TV's slim bezel and gray lower speaker grille are visible.

## Maintenance

### Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Do not spray liquid directly onto the screen.
- **Body:** Use a soft, dry cloth to wipe the TV's frame and stand. Avoid abrasive cleaners or solvents.



Image: A direct front view of the Toshiba 32L5750EA television with the screen off. The screen is a uniform dark, reflective surface. The TV features a thin black bezel and a wider gray lower bezel with the Toshiba logo on the left and a small indicator light on the right. The two stand feet are visible at the bottom.

## Software Updates

Your Smart TV may receive periodic software updates to improve performance and add new features. It is recommended to allow these updates when prompted to ensure optimal operation.

## Troubleshooting

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cable is securely plugged into the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and mute settings. Ensure audio cables are correctly connected for external devices.
Remote control not working	Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Check your router and modem. Re-enter the Wi-Fi password. Try restarting the TV and router.

## Specifications

Detailed technical specifications for the Toshiba 32L5750EA Smart HD LED TV:

Feature	Specification
Model Number	32L5750EA
Screen Size	32 Inches
Display Technology	LED
Resolution	1080p (Full HD)
Type	Smart TV
Connectivity Technology	HDMI, USB
Supported Internet Services	Browser
Color	Black
Dimensions (W x H x D)	733 x 495 x 184 mm (with stand)
Weight	4.3 kg
Manufacturer	Toshiba

## Warranty and Support

This Toshiba television comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Toshiba customer support through their official website or the contact information provided in your warranty documentation.