



Manuals.plus /

› Move2Play /

› Pass The Potato Instruction Manual

Move2Play FOOD102

Pass The Potato Instruction Manual

MOVE2PLAY INTERACTIVE GAME

Model: FOOD102

INTRODUCTION

The Move2Play Pass The Potato is a hilariously wild and fun active play game designed to get kids moving and laughing. This interactive plush potato features smart sensors and over 30 unique phrases and sound effects, making every game unpredictable and exciting. It's a modern twist on the classic hot potato game, suitable for family fun indoors or outdoors.

Recommended for ages 3 and up, with safety information indicating suitability for ages 6+ months.

WHAT'S IN THE BOX

- 1 x Pass The Potato Plush Toy
- 3 x AAA Batteries (pre-installed)

SETUP

Battery Installation

The Pass The Potato game comes with 3 AAA batteries pre-installed. If replacement is needed:

1. Locate the Velcro opening on the back of the potato.
2. Carefully open the Velcro seam to access the internal sound module.

3. Remove the sound module. Use a small screwdriver to open the battery compartment.
4. Insert 3 new AAA batteries, ensuring correct polarity (+/-).
5. Close the battery compartment, reinsert the sound module, and secure the Velcro seam.



Image: Accessing the sound module for battery replacement.

The sound module also features an indoor/outdoor volume switch. Adjust as needed for your play environment.

Your browser does not support the video tag.

Video: Official explainer video demonstrating features including battery access and volume control.

OPERATING INSTRUCTIONS

How to Play

1. **Start the Game:** Toss the potato into the air to activate it and begin the game. The potato will start playing music.
2. **Pass the Potato:** Players quickly pass the potato around to each other. The music will get faster as time runs out, increasing the excitement.

3. Interactive Sounds:

- **Tap:** Tap the potato for fun sounds and sayings.
- **Shake:** Shake the potato to create a "potato tornado" sound effect.

4. **Game End:** The game ends when the potato makes an "explosion" sound. The player holding the potato at that moment is out of the round. Continue playing until only one player remains.



Image: Visual instructions for interacting with the Pass The Potato.



Image: Children actively playing the Pass The Potato game.

MAINTENANCE

Cleaning Instructions

The plush outer casing of the Pass The Potato is machine washable. Before washing, ensure you remove the internal sound module to prevent damage. Once the casing is dry, reinsert the sound module and secure the Velcro closure.



Image: Highlighting the plush and safe materials of the potato.

TROUBLESHOOTING

- **No Sound/Intermittent Sound:** Check if the batteries are correctly installed and have sufficient charge. Replace batteries if necessary. Ensure the sound module is properly seated within the plush toy.
- **Sound Too Low:** Adjust the volume switch on the sound module to the "outdoor" setting for a louder output.
- **Potato Not Activating:** Ensure a clear toss or tap is performed to trigger the motion sensors.

SPECIFICATIONS

Feature	Detail
Product Dimensions	4 x 4 x 7 inches
Item Weight	8 ounces
Model Number	FOOD102
Recommended Age	4 - 15 years (Manufacturer Recommended)
Batteries	3 AAA batteries (included)
Country of Origin	China
Manufacturer	Move2Play

WARRANTY AND SUPPORT

Move2Play offers a Free 1 Year Extended Warranty for the Pass The Potato game. For warranty claims or product support, please visit the official Move2Play website or contact their customer service directly. Your support helps Move2Play continue its mission to get kids active. They are dedicated to creating safe, high-quality products that keep kids entertained and get them moving!