

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Princess](#) /

› [Princess Airfryer Accessory Set User Manual](#)

**Princess 01.182012.01.001 (182012 Accessory set 5.2 L Airfryer)**

# Princess Airfryer Accessory Set User Manual

Model: 01.182012.01.001 (182012 Accessory set 5.2 L Airfryer)

## INTRODUCTION

This user manual provides essential information for the safe and effective use of your Princess Airfryer Accessory Set. This 5-piece set is designed to expand the culinary capabilities of your Princess Airfryer, allowing for a wider variety of dishes beyond traditional frying.

Please read these instructions carefully before first use and retain them for future reference.

## PRODUCT OVERVIEW


The Princess Airfryer Accessory Set includes the following components:

- **Baking Tin:** A round pan suitable for cakes, casseroles, and other baked goods.
- **Pizza Pan:** A shallow round pan ideal for baking pizzas or flatbreads.
- **Grill Rack:** A metal rack for grilling, roasting, or elevating food for even cooking.
- **Silicone Muffin Cups (6 pieces):** Individual silicone molds for baking muffins, cupcakes, or other small treats.
- **Silicone Pot Holder:** A heat-resistant mat for placing hot accessories or protecting surfaces.

Baking tin



Grill rack

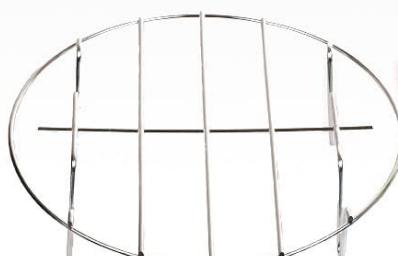

Muffin tins



Pot holder



Pizza pan



Figure 1: Overview of the 5-piece accessory set, showing the baking tin, grill rack, muffin cups, silicone pot holder, and pizza pan with labels.



*Figure 2: The complete Princess Airfryer Accessory Set.*

## COMPATIBILITY

This accessory set is specifically designed for Princess Airfryers with a capacity of 4.5L and 5.2L. It is compatible with the following Princess Airfryer models:

- 182025
- 182050
- 182051
- 182026
- 182033
- 182037
- 182055

Ensure your Airfryer model is listed above for optimal fit and performance.

## SETUP

Before first use, wash all accessories with warm soapy water and rinse thoroughly. Dry completely before placing them into the Airfryer. The accessories are designed to fit inside the Airfryer basket. Always ensure the accessory is stable and properly positioned before starting the cooking process.



Figure 3: Approximate dimensions of the baking tin for fit reference.

## OPERATING INSTRUCTIONS

---

### Using the Baking Tin

The baking tin is suitable for preparing various baked goods such as cakes, bread, or casseroles. Place your ingredients directly into the tin. Carefully insert the tin into the Airfryer basket. Adjust cooking time and temperature according to your recipe.



*Figure 4: The baking tin, ready for use.*

## **Using the Pizza Pan**

The pizza pan is designed for baking small pizzas or flatbreads. Place your pizza onto the pan. Carefully slide the pan into the Airfryer basket. Monitor cooking to achieve desired crispness. The pan can also be used for reheating leftovers.



*Figure 5: A pizza being prepared in the pizza pan.*

## **Using the Grill Rack**

The grill rack allows for grilling meat, fish, or vegetables without oil. It also elevates food, promoting better air circulation for even cooking. Place the grill rack inside the Airfryer basket, then place your food on top. It can also be used as a cooling rack for hot items after cooking.



Figure 6: The grill rack in use for pastries.

## Using the Silicone Muffin Cups

The silicone muffin cups are perfect for baking individual muffins, cupcakes, or other small desserts. Fill the cups with batter and place them directly into the Airfryer basket or on the pizza pan/baking tin if space allows. The flexible silicone makes for easy removal of baked goods.



Figure 7: Muffins baked using the silicone muffin cups.

## Using the Silicone Pot Holder

The silicone pot holder is a versatile heat-resistant mat. Use it to safely place hot accessories from the Airfryer onto your countertop or table, protecting surfaces from heat damage. It can also be used as a general trivet.

## CARE AND MAINTENANCE

Proper care ensures the longevity of your accessory set:

- **Cleaning:** All accessories are dishwasher safe for convenient cleaning after use. For stubborn residue, soak in warm soapy water before washing.
- **Material Safety:** All components are BPA-free, ensuring food safety.
- **Storage:** Store accessories in a clean, dry place when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Accessories do not fit in Airfryer.	Incorrect Airfryer model or capacity.	Verify your Airfryer model against the compatibility list in this manual. This set is designed for 4.5L and 5.2L Princess Airfryers.
Food sticks to pans.	Insufficient greasing or seasoning of pans.	Lightly grease the baking tin and pizza pan before adding food, especially for first use. Ensure proper cooking temperatures are used.
Silicone muffin cups deform.	Overfilling or improper placement.	Do not overfill muffin cups. Ensure they are placed on a flat surface (like the pizza pan or directly in the Airfryer basket) to maintain shape during baking.

## SPECIFICATIONS

Feature	Detail
Brand	Princess
Model Number	01.182012.01.001 (182012)
Color	Multicolor (for silicone parts), Black (for pans)
Product Dimensions (L x W x H)	22 x 22 x 16.5 cm (approx. 8.7 x 8.7 x 6.5 inches)
Capacity (compatible Airfryer)	5.2 Liters (also 4.5L compatible)
Material	Silicone (mat, muffin cups), Metal (pans, grill rack)
Item Weight	600 g (approx. 1.32 lbs)
Special Feature	Easy to clean, Dishwasher safe, BPA-free
Country of Origin	China

## WARRANTY AND SUPPORT

**Parts Availability:** Spare parts for this product are available for 1 year from the date of purchase.

For further assistance, product information, or to explore other Princess products, please visit the official Princess brand store or contact customer support through your retailer.

*Note: Warranty terms may vary by region and retailer. Please refer to your purchase documentation for specific warranty details.*

	<p><a href="#"><u>Princess Digital Family Aerofryer Instruction Manual</u></a></p> <p>User manual for the Princess Digital Family Aerofryer (Model 01.182050.01.001). Contains safety instructions, operating guidelines, program details, and maintenance tips for this household air fryer.</p>
	<p><a href="#"><u>Princess Airfryer Grill User Manual - Model 01.182092.01.001</u></a></p> <p>Comprehensive user manual for the Princess Airfryer Grill (Model 01.182092.01.001), detailing operation, safety, features, and troubleshooting for this versatile kitchen appliance.</p>
	<p><a href="#"><u>Princess Aerofryer XXL Instruction Manual</u></a></p> <p>User manual for the Princess Aerofryer XXL (Model 01.182055.01.001), detailing safety instructions, parts description, operational use, cooking programs, tips, and maintenance. Learn how to use your air fryer safely and effectively.</p>
	<p><a href="#"><u>Princess Airfryer Grill User Manual</u></a></p> <p>Comprehensive user manual for the Princess Airfryer Grill, detailing setup, operation, safety precautions, and troubleshooting for grilling, baking, and roasting with hot air.</p>
	<p><a href="#"><u>Princess Aerofryer XXL Instruction Manual</u></a></p> <p>This document provides comprehensive instructions for the Princess Aerofryer XXL, including safety precautions, parts description, usage guidelines, cleaning and maintenance, and environmental information. It covers operation, preheating, quick cooking functions, and troubleshooting tips.</p>
	<p><a href="#"><u>Princess Digital Family Aerofryer Instruction Manual</u></a></p> <p>Comprehensive user guide for the Princess Digital Family Aerofryer (Model 01.182050.01.001), covering safety, operation, cooking programs, and maintenance.</p>