



Manuals.plus /

› [Yamaha](#) /

› [Yamaha 4C Alto Saxophone Mouthpiece Standard Series Instruction Manual](#)

Yamaha YAC AS4C

Yamaha 4C Alto Saxophone Mouthpiece Standard Series Instruction Manual

Model: YAC AS4C

INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Yamaha 4C Alto Saxophone Mouthpiece, Standard Series. Designed for optimal performance and durability, this mouthpiece is suitable for a wide range of players, from beginners to advanced musicians.



Figure 1: Front view of the Yamaha 4C Alto Saxophone Mouthpiece, showcasing its black finish and gold Yamaha logo.

PRODUCT OVERVIEW

The Yamaha 4C Alto Saxophone Mouthpiece is a standard series model, identical to those included with new Yamaha standard, intermediate, and professional alto saxophones. It is crafted from durable phenol resin plastic, ensuring both longevity and consistent performance.

Key Features:

- **Optimal Design:** The 4C size is specifically designed to facilitate sound production, making it ideal for beginners while offering a rich, clear tone.
- **Durable Construction:** Made from safe and robust phenol resin plastic.
- **Consistent Quality:** State-of-the-art manufacturing processes ensure high quality and consistency across all units.
- **Versatile Compatibility:** Fits any brand of standard alto saxophone.

SETUP

Proper assembly of the mouthpiece, reed, and ligature is crucial for optimal sound production and instrument longevity.

1. **Prepare the Reed:** If using a cane reed, moisten it thoroughly with water or saliva. This helps the reed vibrate properly. Synthetic reeds do not require moistening.
2. **Attach the Reed:** Place the flat side of the reed against the flat surface of the mouthpiece (the table). Ensure the tip of the reed is aligned with the tip of the mouthpiece, or slightly below it.

3. **Secure with Ligature:** Slide the ligature over the reed and mouthpiece. Position it so that it holds the reed firmly against the mouthpiece table without restricting the reed's vibration. The screws of the ligature should typically be on the underside (facing the floor when playing) for most standard ligatures. Tighten the screws just enough to secure the reed; over-tightening can damage the reed or mouthpiece.
4. **Attach to Saxophone Neck:** Gently twist the assembled mouthpiece onto the cork of the saxophone neck. Apply a small amount of cork grease to the neck cork if it is too tight, or if it has not been greased recently. Do not force the mouthpiece on, as this can damage the cork or the mouthpiece.

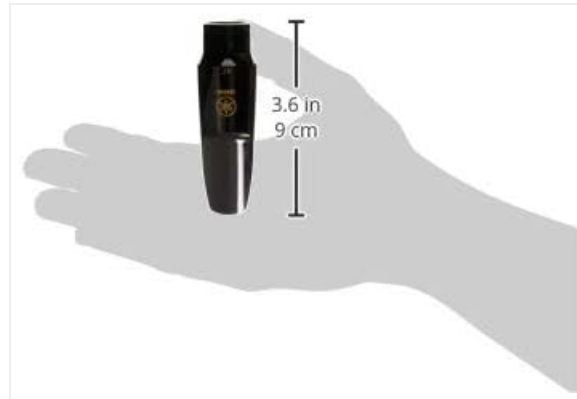


Figure 2: The Yamaha 4C Alto Saxophone Mouthpiece shown with approximate dimensions, illustrating its compact and ergonomic design.

OPERATING INSTRUCTIONS

Achieving a good sound on the saxophone involves proper embouchure, breath support, and articulation. The Yamaha 4C mouthpiece is designed to assist in developing these fundamental techniques.

Playing Fundamentals:

- **Embouchure:** Form a firm but relaxed embouchure. Your lower lip should rest slightly over your bottom teeth, cushioning the reed. The corners of your mouth should be firm, like a drawstring bag.
- **Breath Support:** Use diaphragmatic breathing. Take a deep breath, expanding your abdomen, and exhale with steady, consistent air pressure. This provides the necessary airflow for a full, resonant tone.
- **Articulation:** Use your tongue to start and stop notes. Lightly touch the tip of your tongue to the tip of the reed to articulate clearly.
- **Pitch Adjustment:** Adjust the mouthpiece position on the cork to fine-tune the instrument's pitch. Pushing the mouthpiece further onto the cork raises the pitch, while pulling it out lowers the pitch.

MAINTENANCE

Regular cleaning and proper storage will extend the life of your mouthpiece and ensure consistent performance.

Cleaning:

- **After Each Use:** Remove the reed and ligature from the mouthpiece. Wipe the mouthpiece clean with a soft cloth to remove moisture and saliva.
- **Periodic Deep Cleaning:** Wash the mouthpiece with lukewarm water and mild soap (e.g., dish soap). Use a mouthpiece brush to gently clean the inside and outside surfaces. Rinse thoroughly with clean water.
- **Drying:** Allow the mouthpiece to air dry completely before storing it. Do not use hot water or harsh chemicals, as these can damage the material.

Storage:

- Store the mouthpiece in its protective cap or case when not in use.
- Keep the mouthpiece away from extreme temperatures and direct sunlight to prevent warping or discoloration.

TROUBLESHOOTING

If you encounter issues with your mouthpiece, consider the following common solutions:

- **Difficulty Producing Sound:**
 - Check reed placement and ensure it is centered and not too high or low.
 - Verify ligature tightness; it should be snug but not overly tight.
 - Ensure the reed is properly moistened (if cane).
 - Review embouchure technique for proper lip and jaw position.
- **Poor Tone Quality (e.g., airy, thin, harsh):**
 - Experiment with different reed strengths.
 - Adjust embouchure and breath support for a more consistent airflow.
 - Check for any damage to the reed or mouthpiece tip.
- **Mouthpiece Too Loose/Tight on Neck:**
 - Apply cork grease to the saxophone neck cork if too tight.
 - If too loose, the cork may need to be replaced or thickened by a qualified instrument technician.

SPECIFICATIONS

Feature	Detail
Brand	Yamaha
Model Number	YAC AS4C
Size	4C
Instrument Key	E Flat (for Alto Saxophone)
Material Type	Phenol Resin Plastic
Item Weight	1.12 ounces
Product Dimensions	3.5 x 1 x 1 inches
ASIN	B07NFPR6LT
Date First Available	February 6, 2019

WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your purchase or visit the official Yamaha website. Yamaha provides customer support for product inquiries and assistance.

Official Yamaha Website: www.yamaha.com

For further assistance, please contact Yamaha customer service through their official channels.

