



Manuals.plus /

› Spin Master /

› Perplexus Revolution Runner Motorized Motion 3D Gravity Maze Game Instruction Manual

Spin Master 6053770

Perplexus Revolution Runner Motorized Motion 3D Gravity Maze Game

Model: 6053770 | Brand: Spin Master

1. INTRODUCTION

The Perplexus Revolution Runner is a motorized 3D gravity maze game designed to challenge your timing and skills. This innovative puzzle features a perpetually moving track that requires players to navigate a small ball through various obstacles without letting it fall. It offers multiple speed settings to increase the challenge as your proficiency grows.



Image 1.1: Top-down view of the Perplexus Revolution Runner, highlighting its intricate, multi-colored maze tracks and the small metal ball.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 Perplexus Revolution Runner unit
- 3 AA batteries (included)
- 1 Instruction Sheet



Image 2.1: The Perplexus Revolution Runner as packaged, indicating the included components.

3. SETUP

3.1 Battery Installation

The Perplexus Revolution Runner requires 3 AA batteries, which are included. Follow these steps to install them:

1. Locate the battery compartment on the back or side of the Perplexus Revolution Runner.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Note: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Off

To power on the Perplexus Revolution Runner, locate the power switch (usually a button or slider) on the side of the unit. Press or slide it to the 'ON' position. The internal track will begin to move. To power off, press or slide the switch to the 'OFF' position.

4.2 Game Play

The objective is to guide the small metal ball through the entire maze without it falling off the track. The motorized track will continuously move, adding a dynamic challenge.

1. **Start:** Place the metal ball at the designated starting point on the track.
2. **Navigate:** Hold the Perplexus Revolution Runner in your hands. Twist, spin, and turn the unit to maneuver the ball along the multi-path maze. You must anticipate the movement of the motorized track and adjust your movements accordingly.
3. **Obstacles:** The maze contains various obstacles and pathways. Guide the ball through these challenges, maintaining its momentum and position on the track.
4. **Falling Off:** If the ball falls off the track, retrieve it and return it to the last successful checkpoint or the starting point to continue.
5. **Completion:** Successfully guide the ball from the start to the designated end point to complete the maze.



Image 4.1: A close-up view demonstrating the metal ball in motion on the Perplexus Revolution Runner's track.

4.3 Adjusting Speed Settings

The Perplexus Revolution Runner features 4 different speed settings for the motorized track. This allows you to increase the difficulty as you become more proficient.

- Locate the speed selection button or switch on the unit.
- Press or slide the control to cycle through the available speed settings (e.g., Slow, Medium, Fast, Expert).
- Start with the slowest speed and gradually increase it as you master the maze.

5. SAFETY INFORMATION

- **Choking Hazard:** Contains small parts (metal ball). Not suitable for children under 3 years. Recommended for ages 9 and up.
- **Battery Safety:**
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Do not mix old and new batteries.

- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of batteries safely and responsibly according to local regulations.
- **Adult Supervision:** Adult supervision is recommended during play, especially for younger users.
 - **Intended Use:** This product is intended for recreational use as a puzzle game. Do not modify or use for purposes other than its intended design.

6. MAINTENANCE

6.1 Cleaning

To clean the Perplexus Revolution Runner, wipe the exterior surfaces with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Do not use abrasive cleaners, solvents, or immerse the unit in water.

6.2 Storage

Store the Perplexus Revolution Runner in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new AA batteries.
Motorized track moves slowly or inconsistently.	Batteries are low.	Replace with new AA batteries.
Metal ball gets stuck frequently.	Incorrect tilting angle or debris on track.	Adjust your tilting technique. Gently clean the track with a soft, dry cloth.

8. SPECIFICATIONS

Product Dimensions: 9.88 x 2.75 x 10 inches

Item Weight: 2.12 pounds

Model Number: 6053770

Manufacturer: Spin Master

Recommended Age: 9 years and up

Batteries: 3 AA batteries (included)

ASIN: B07NFRB7PL

Release Date: March 23, 2022

9. WARRANTY AND SUPPORT

This product is covered by the Spin Master Care Commitment. For detailed warranty information, product support, or to contact customer service, please visit the official Spin Master website or refer to the contact information provided on the product packaging or included instruction sheet.

You can also visit the Spin Master Store on Amazon for more information and other products.

