



Manuals.plus /

› Dreamworks Dragons /

› Dreamworks Dragons Hatching Toothless Interactive Baby Dragon Instruction Manual (Model 6046182)

Dreamworks Dragons 6046182

Dreamworks Dragons Hatching Toothless Interactive Baby Dragon Instruction Manual

Brand: Dreamworks Dragons | **Model:** 6046182

IMPORTANT SAFETY INFORMATION

Please read all instructions before operating the Hatching Toothless Interactive Baby Dragon. Keep this manual for future reference.

- **Choking Hazard:** Small parts. Not for children under 3 years.
- **Battery Safety:** Requires 2 AA batteries (included). Ensure batteries are inserted with correct polarity. Do not mix old and new batteries. Remove batteries if the toy is not used for an extended period.
- Adult supervision is recommended during play.

WHAT'S INCLUDED

Your Dreamworks Dragons Hatching Toothless Interactive Baby Dragon package includes:

- 1 Hatching Dragon Toy (in-egg)
- 1 Hatching Dragon Dinosaur Egg Base
- 1 Fish Accessory
- 1 Instruction Guide



Image: The product box for the Hatching Toothless Interactive Baby Dragon, illustrating the toy and its accessories.

SETUP

1. Battery Installation

Your Hatching Toothless requires 2 AA batteries. These batteries are included with your purchase. Locate the battery compartment on the underside of the toy, open it with a small screwdriver (not included), insert the batteries according to the polarity indicators, and securely close the compartment.

2. The Hatching Process

To begin the hatching process, interact with the egg while Toothless is still inside. The egg features light-up eyes that allow you to see Toothless's reactions.

- **Rock the Egg:** Gently rock the egg back and forth to hear Toothless growl.
- **Tap the Egg:** Tap on the egg, and Toothless will tap back.
- **Shake and Tilt:** Shake and tilt the egg to agitate Toothless.

Continue these interactions until Toothless is agitated enough to begin hatching. Once he starts, he will break free from his shell, ready for adventure!



Image: A child holding the interactive dragon egg, observing the hatching process.



Image: A child interacting with the newly hatched Toothless dragon.

OPERATING YOUR HATCHING TOOTHLESS

Once hatched, Toothless is ready for various interactive modes and activities.

1. Bonding with Toothless

Establish a bond with your baby Toothless by placing your hands on his head. He will respond with movements and sounds.

2. Flying Mode

Guide Toothless through the air as if he is flying. His ears will move and wings will flap, accompanied by dragon roars.

3. Plasma Blast

To charge his plasma blast, hold his belly. His mouth will glow as he charges. Release his belly to unleash the plasma blast.

4. Feeding

If Toothless gets hungry, feed him his fish accessory. He will make eating sounds.



Image: A child offering the fish accessory to Toothless.

5. Interactive Games

Toothless loves to play! Engage him in various games:

- **Question and Answer:** Ask him questions, and he will respond with head and wing movements, lights, and sounds.
- **Roaring Competition:** Roar at him, and he will roar back.
- **Hot Potato:** Pass him around, avoiding being the one holding him when he plasma blasts.
- **Music Play:** Play music to see him rock back and forth to the beat.



Image: A child engaging in interactive play with Toothless.

6. Nap Time

At the end of an active day, place your baby Toothless back into the egg base for a dragon nap.



Image: Toothless resting in its egg base.

Official Product Video

Video: An official product video from Spin Master demonstrating the features and interactive play of the Hatching Toothless toy.

MAINTENANCE

To keep your Hatching Toothless in optimal condition:

- Wipe the toy with a clean, damp cloth. Do not immerse in water.
- Avoid exposing the toy to extreme temperatures or direct sunlight.
- Store the toy in a clean, dry place when not in use.

TROUBLESHOOTING

If your Hatching Toothless is not functioning as expected, please refer to the following common issues:

- **Not Responding:** Ensure batteries are correctly installed and not depleted. Replace with fresh batteries if necessary.
- **Not Hatching:** Increase interaction with the egg (rocking, tapping, shaking/tilting) to encourage hatching.

- **Intermittent Functionality:** Check for any obstructions in moving parts. Ensure the toy is on a flat, stable surface during play.

If problems persist, contact customer support as detailed in the Warranty and Support section.

SPECIFICATIONS

- **Product Dimensions:** 8.2 x 6.7 x 8.9 inches
- **Item Weight:** 1.5 pounds
- **Model Number:** 6046182
- **Manufacturer Recommended Age:** 4 - 6 years
- **Batteries:** 2 AA batteries (included)
- **Manufacturer:** Spin Master

WARRANTY AND SUPPORT

This product is covered by the Spin Master Care Commitment. For full details regarding warranty, returns, and customer support, please refer to the official Spin Master website or contact their customer service directly. Contact information can typically be found on the product packaging or their corporate website.