



Manuals.plus /

› Whirlpool /

› Whirlpool WSIO 3T223 PCE X Dishwasher Fully Integrated User Manual

Whirlpool WSIO3T223PCEX

Whirlpool WSIO 3T223 PCE X Dishwasher

USER MANUAL

Important Safety Information

Read these instructions carefully before using the appliance and retain them for future reference. This manual provides essential information for the safe installation, operation, and maintenance of your Whirlpool dishwasher.

- Ensure the appliance is properly earthed.
- Do not touch the heating element during or immediately after the wash cycle.
- Keep children away from the appliance when it is operating.
- Only use detergents and rinse aids specifically designed for dishwashers.
- Do not open the door during operation, as hot water may spray out.

Product Overview

The Whirlpool WSIO 3T223 PCE X is a fully integrated compact dishwasher designed for efficient cleaning of up to 10 place settings. Its compact design (45 cm width) makes it suitable for smaller kitchen spaces.



Figure 1: Front view of the Whirlpool WSIO 3T223 PCE X Fully Integrated Dishwasher.



Figure 2: View of the dishwasher with the door slightly ajar, revealing the control panel and interior racks.

Setup and Installation

This dishwasher is designed for fully integrated installation. Professional installation is recommended to ensure proper connection to water and electrical supplies.

Unpacking

- Remove all packaging materials.
- Check for any transport damage. If damaged, do not install and contact your retailer.

Positioning and Levelling

Place the dishwasher in the desired location. Use the adjustable feet to level the appliance, ensuring it is stable and does not wobble. Proper levelling is crucial for correct door closure and wash performance.

Water and Electrical Connections

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the hose is not kinked.
- Connect the drain hose to a suitable drain pipe or sink trap, ensuring it is securely fastened and allows for proper drainage.
- Plug the appliance into a grounded electrical outlet (230 Volts). Do not use extension cords or multiple adapters.

First Use Preparation

- **Salt Dispenser:** Fill the salt dispenser with dishwasher salt. This helps to soften hard water and prevent limescale. Refer to the water hardness settings in your local area.
- **Rinse Aid Dispenser:** Fill the rinse aid dispenser. Rinse aid improves drying performance and prevents streaks.
- **Detergent Dispenser:** Add a small amount of detergent for the first empty wash cycle.
- Run an empty wash cycle (e.g., "Normal" program) to clean the interior before loading dishes.

Operating Instructions

Control Panel Overview

The control panel is located on the top edge of the dishwasher door. It features buttons for program selection, start/pause, and indicators for salt and rinse aid levels.

Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place larger items (pots, pans, plates) in the lower basket.
- Place glasses, cups, and smaller plates in the upper basket.
- Arrange cutlery in the cutlery basket, ensuring items do not nest together.
- Ensure spray arms can rotate freely and are not blocked by dishes.

Adding Detergent

Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser lid firmly until it clicks.

Selecting and Starting a Program

1. Ensure the dishwasher door is closed.
2. Press the Power button to turn on the appliance.
3. Select the desired wash program using the program selection buttons. The "Normal" cycle is suitable for daily loads.
4. Press the Start/Pause button to begin the cycle. The program indicator light will illuminate.

Interrupting a Cycle

To interrupt a cycle, carefully open the door. The program will pause. To resume, close the door firmly. If the door is opened during a hot wash, steam may escape.

End of Cycle

At the end of the cycle, an acoustic signal may sound, and the program indicator light will turn off. Open the door slightly to allow steam to escape and dishes to cool before unloading.

Maintenance and Cleaning

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

Cleaning the Filters

The filter system should be cleaned regularly to prevent blockages and ensure effective cleaning.

1. Turn off and unplug the dishwasher.
2. Remove the lower basket.
3. Twist and lift out the cylindrical filter.
4. Separate the coarse filter and the microfilter.
5. Rinse all filter components under running water to remove food particles. Use a brush if necessary.
6. Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked in place.

Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clear any debris from the holes using a toothpick or similar tool. Rinse thoroughly and reattach.

Exterior and Interior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the door seal regularly with a damp cloth to remove food residue.
- For interior cleaning, a dishwasher cleaner can be used periodically.

Troubleshooting

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	No power; Door not closed properly; Program not selected.	Check power supply; Ensure door is latched; Select a program and press Start.
Dishes are not clean	Filters clogged; Spray arms blocked; Insufficient detergent; Incorrect program.	Clean filters; Clear spray arm nozzles; Add more detergent; Select appropriate program.
Water remaining in the tub	Drain hose kinked or blocked; Filter clogged; Drain pump issue.	Check and clear drain hose; Clean filters; Contact service if problem persists.
Excessive noise	Dishes rattling; Foreign object in pump; Appliance not level.	Rearrange dishes; Check for foreign objects; Level the appliance.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

Detailed technical specifications for the Whirlpool WSIO 3T223 PCE X Dishwasher:

Parameter	Value
Model Name	WSIO3T223PCEX
Form Factor	Built-In
Dimensions (H x W x D)	82 x 45 x 55 cm
Item Weight	10 kg
Capacity	10 Place Settings
Voltage	230 Volts (DC)
Wattage	1900 watts
Noise Level	43 dB
Energy Efficiency Rating	E
Water Consumption (Eco Program)	9.0 litres/cycle
Energy Consumption (Eco Program)	0.755 kWh/cycle
Eco Program Duration	4:00 hours
Material Type	Stainless Steel



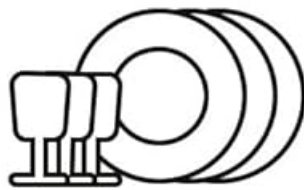 

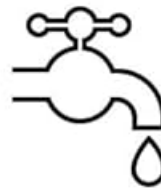 
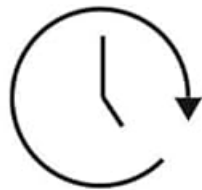 
ENERG ⚡



WHIRLPOOL

WSIO 3T223 PCE X (2)



G**76 kWh** / **10** x**9,0** L**4:00****A B C D**

2019/2017

Figure 3: Energy label for the Whirlpool WSIO 3T223 PCE X Dishwasher. For more details, visit the [EPREL database](#).

Warranty and Support

Your Whirlpool WSIO 3T223 PCE X Dishwasher comes with a manufacturer's warranty.

- **Warranty Period:** The minimum guarantee period offered by the supplier is 24 months. Note that warranty periods may vary by country (e.g., Ireland, United Kingdom: 12 months; Spain, Portugal: 36 months; Norway: 60 months).
- **Online Documentation:** For additional information and detailed regulations, refer to the official Whirlpool documentation available at docs.whirlpool.eu.

Customer Support

For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool customer support:

- **Email:** public_inquiry@europeanappliances.com
- **Phone:** +39 02 83715807
- **Supplier Address:** EMEA Compliance Team, VIA VARESINA, 204 20156 MILANO ITALY

