

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sygonix](#) /
- › [Sygonix SY-36ND Digital Safe User Manual](#)

Sygonix SY-3525976

Sygonix SY-36ND Digital Safe User Manual

Model: SY-3525976

INTRODUCTION

Thank you for choosing the Sygonix SY-36ND Digital Safe. This safe is designed to provide secure storage for your valuables, featuring a robust sheet steel housing and a reliable digital lock with an 8-digit code. For added security and convenience, it also includes a key override function. Please read this manual carefully before operating the safe to ensure proper use and to maximize its lifespan.

SAFETY INFORMATION

- Keep the override key in a secure location, separate from the safe itself. Do not store the key inside the safe.
- Ensure the safe is installed on a stable and level surface.
- Do not expose the safe to extreme temperatures or high humidity.
- Do not attempt to force the safe open if the digital lock malfunctions. Use the override key.
- Keep batteries out of reach of children.

PACKAGE CONTENTS

Please check the package for the following items:

- Sygonix SY-36ND Digital Safe (1 unit)
- Override Keys (2 units, typically)
- User Manual
- Mounting Hardware (e.g., bolts for securing)

SETUP

1. Unpacking and Placement

Carefully remove the safe from its packaging. Choose a suitable location for the safe, preferably a discreet and secure spot. Ensure the surface is flat and stable.



Image: Front view of the Sygonix SY-36ND Digital Safe, showing the digital keypad and LCD display.

2. Battery Installation

The digital lock requires batteries (not included). Locate the battery compartment, usually on the inside of the safe door. Insert the correct type and number of batteries, observing polarity (+/-). Close the compartment securely.

3. Initial Opening (First Use)

For the first opening, use the override key. Insert the key into the keyhole (often concealed behind a cover on the keypad) and turn it while simultaneously turning the handle to open the door.



Image: Interior view of the Sygonix SY-36ND Digital Safe, showing the door mechanism and internal space.

4. Securing the Safe (Optional)

For enhanced security, the safe can be bolted to a wall or floor. Locate the pre-drilled mounting holes on the back or bottom of the safe. Use the provided mounting hardware to secure the safe firmly.



Image: Back view of the Sygonix SY-36ND Digital Safe, illustrating the pre-drilled holes for secure mounting.

OPERATING INSTRUCTIONS

1. Setting Your Personal Code

With the safe door open, locate the reset button (usually a small button on the inside of the door or near the battery compartment). Press the reset button. The LCD display will indicate that you can now enter a new code. Enter your desired 8-digit code using the keypad, then press the '#' or 'START' button to confirm. Test the new code with the door open before closing it.



Image: Detailed view of the Sygonix SY-36ND Digital Safe's keypad and LCD display, showing the numerical buttons and screen.

2. Opening the Safe with Your Code

Enter your 8-digit personal code on the keypad. The LCD display will show the entered digits. After entering the full code, press the '#' or 'START' button. If the code is correct, the display will indicate "OPEN" or a similar message, and you will hear a click. Within a few seconds, turn the handle clockwise to open the safe door.

3. Closing and Locking the Safe

Close the safe door firmly. Turn the handle counter-clockwise until it is fully engaged. The safe is now locked. No code entry is required to lock the safe.

4. Using the Override Key

In case of forgotten code, battery depletion, or electronic malfunction, the safe can be opened using the override key. Remove the keyhole cover on the keypad. Insert the override key and turn it. While holding the key turned, rotate the handle to open the safe door.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the low battery indicator appears on the LCD display. Always replace all batteries at once with new ones of the same type.
- **Key Maintenance:** Keep the override keys clean and dry. Do not lubricate the keyhole.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered; Batteries are low or dead.	Re-enter the code carefully. Replace batteries. Use the override key.
LCD display is blank or dim.	Batteries are low or dead; Batteries are inserted incorrectly.	Replace batteries, ensuring correct polarity.
Safe beeps continuously after code entry.	Incorrect code entered multiple times.	Wait for the lockout period to end (if applicable), then re-enter the correct code. Use the override key if necessary.
Door does not close properly.	Obstruction in the door frame; Locking bolts are not retracting fully.	Check for any obstructions. Ensure the handle is fully turned to retract bolts before closing.

SPECIFICATIONS

Feature	Detail
Model Number	SY-3525976
Lock Type	Digital Lock with Key Override
Code Length	8-digit adjustable code
Display	LC-display
Material	Sheet Steel Housing
Color	Grey
External Dimensions (L x W x H)	35 x 25 x 25 cm (approximately)
Weight	7.5 kg (approximately)
Power Source	Batteries (not included)



Image: The Sygonix SY-36ND Digital Safe with its approximate dimensions (length, width, height) clearly indicated.

WARRANTY AND SUPPORT

Warranty Information

This Sygonix product comes with a minimum warranty period of **2 years** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Sygonix customer support. Refer to the product packaging or the official Sygonix website for the most up-to-date contact information.