

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Electrohome](#) /

› [Electrohome Kingston 7-in-1 Vintage Vinyl Record Player Stereo System \(RR75\) User Manual](#)

Electrohome RR75

Electrohome Kingston 7-in-1 Vintage Vinyl Record Player Stereo System (RR75) User Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Electrohome Kingston 7-in-1 Vintage Vinyl Record Player Stereo System, model RR75. Please read this manual thoroughly before using the product to ensure proper function and longevity.

WHAT'S INCLUDED

Upon unpacking, please ensure all the following items are present:

- Electrohome Kingston 7-in-1 Vinyl Record Player (RR75)
- 45 RPM Record Adaptor
- Remote Control
- Power Cord
- 2 AAA Batteries (for remote control)
- User Manual (this document)
- Quick Start Guide



What's Included



45 Adapter



Remote Control



Power Cable



2x AAA Batteries

Image: The Electrohome Kingston RR75 unit shown with its dimensions and icons representing the included accessories: 45 adapter, remote control, power cable, and 2 AAA batteries.

PRODUCT OVERVIEW

The Electrohome Kingston RR75 is a versatile 7-in-1 stereo system designed to play various audio formats. It features a 3-speed turntable, Bluetooth connectivity, AM/FM radio, CD player, Aux-in port, RCA output, headphone output, and USB playback/recording capabilities.



Image: The Electrohome Kingston RR75 stereo system in a walnut finish, with the turntable lid open, showcasing the control panel and speakers.

SETUP

- Unpacking:** Carefully remove the unit and all accessories from the packaging. Retain packaging for future transport or service.
- Placement:** Place the unit on a stable, level surface away from direct sunlight, heat sources, and excessive dust or moisture.
- Power Connection:** Connect the power cord to the AC inlet on the back of the unit, then plug it into a standard wall outlet.
- Remote Control Batteries:** Open the battery compartment on the remote control and insert the two AAA batteries, observing correct polarity (+/-).

5. **Turntable Protection:** Remove any protective shipping materials from the turntable platter and tonearm. Ensure the tonearm is unlocked from its rest.

OPERATING INSTRUCTIONS

1. Turntable Operation

The turntable supports three playback speeds: 33 1/3, 45, and 78 RPM.

1. Lift the turntable lid.
2. Place a vinyl record on the platter. For 45 RPM singles, use the included 45 RPM adaptor.
3. Select the appropriate speed (33, 45, or 78) using the speed selector switch.
4. Gently lift the tonearm and position the stylus over the desired track on the record.
5. Lower the tonearm slowly onto the record. Playback will begin automatically.
6. To stop playback, lift the tonearm and return it to its rest.



Image: Close-up of the Electrohome Kingston RR75 turntable playing a vinyl record, illustrating the compatibility with 7-inch, 10-inch, and 12-inch records.

2. Bluetooth Playback

Stream audio wirelessly from your Bluetooth-enabled devices.

1. Press the 'Source' button until 'Bluetooth' mode is selected. The display will show 'bt' and flash, indicating pairing mode.
2. On your external device (smartphone, tablet), enable Bluetooth and search for 'Electrohome RR75'.
3. Select 'Electrohome RR75' to pair. Once connected, the 'bt' indicator will stop flashing.
4. Begin playing audio on your device. The sound will be routed through the stereo system.

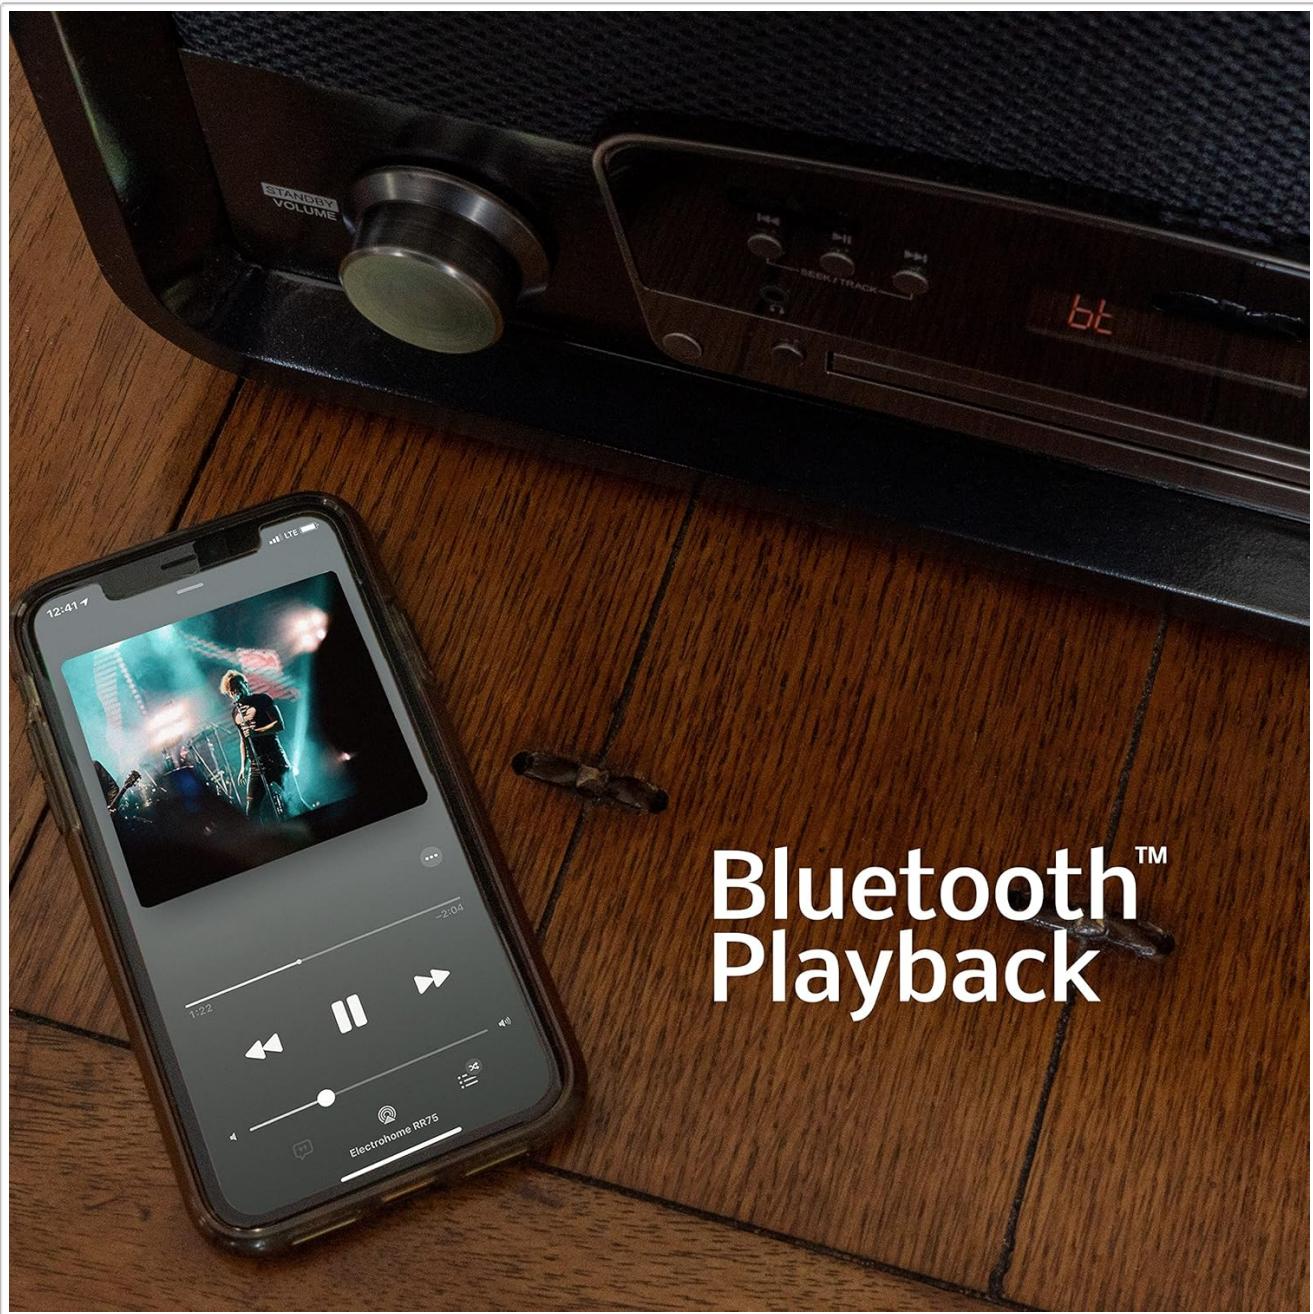


Image: A smartphone displaying a music player interface, positioned near the Electrohome Kingston RR75, indicating active Bluetooth playback.

3. CD Player Operation

1. Press the 'Source' button until 'CD' mode is selected.
2. Press the 'Eject' button to open the CD tray.
3. Place a CD with the label side facing up into the tray.
4. Press the 'Eject' button again to close the tray. The CD will load and begin playback automatically.

5. Use the 'Play/Pause', 'Skip Forward', and 'Skip Backward' buttons to control playback.

4. AM/FM Radio

1. Press the 'Source' button until 'AM' or 'FM' mode is selected.
2. Extend the FM antenna located at the back of the unit for optimal reception.
3. Use the 'Tune' knob or 'Seek' buttons to find desired radio stations.

5. Aux-in Connection

Connect external audio devices using a 3.5mm audio cable.

1. Connect one end of a 3.5mm audio cable (not included) to the 'AUX IN' port on the front of the unit.
2. Connect the other end to the headphone jack or audio output of your external device.
3. Press the 'Source' button until 'AUX' mode is selected.
4. Play audio from your external device.

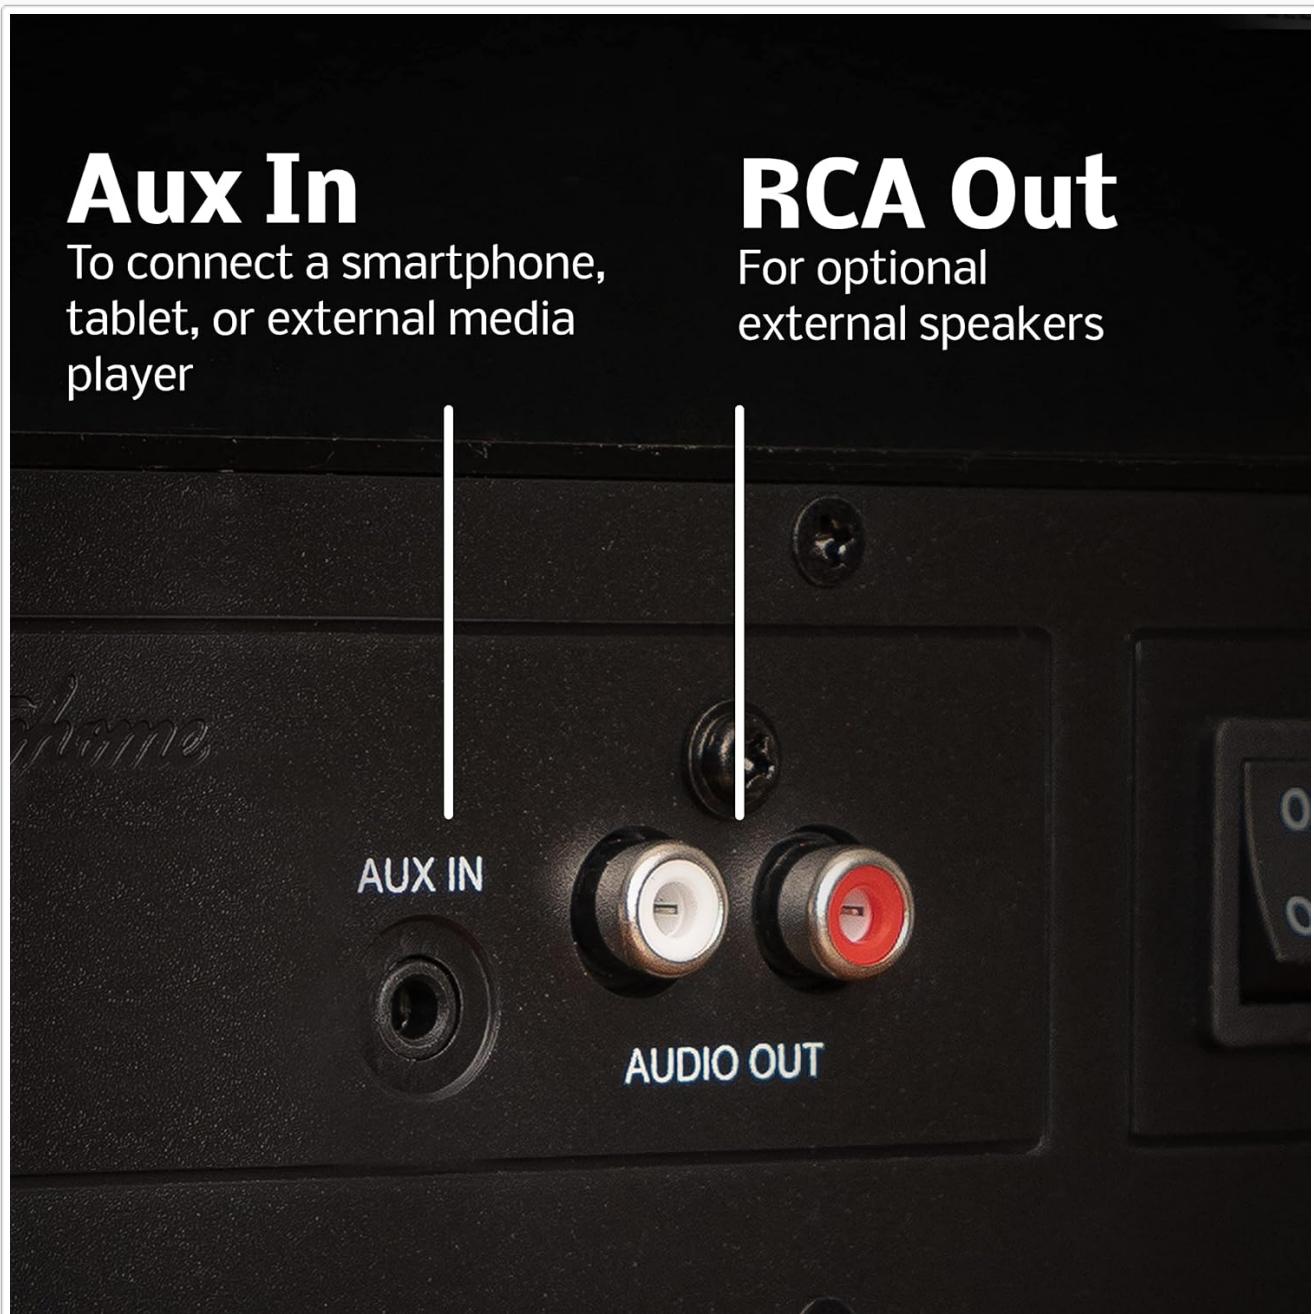


Image: A detailed view of the rear panel of the Electrohome Kingston RR75, highlighting the 'AUX IN' port for connecting smartphones or external media players, and the 'AUDIO OUT' (RCA) ports for optional external speakers.

6. USB Playback and Recording

The USB port allows for MP3 playback and recording of vinyl or CD audio.

1. **USB Playback:** Insert a USB drive containing MP3 files into the USB port. Select 'USB' mode using the 'Source' button. The unit will automatically detect and play MP3 files.
2. **Recording to USB:**
 - Insert a USB drive into the USB port.
 - Select either 'PHONO' (turntable) or 'CD' as the source.
 - Begin playing the vinyl record or CD you wish to record.
 - Press the 'RECORD' button on the unit. The recording indicator will illuminate.
 - To stop recording, press the 'RECORD' button again. The recorded audio will be saved as an MP3 file on the USB drive.



Image: A USB flash drive inserted into the front panel of the Electrohome Kingston RR75, illustrating the Vinyl-to-MP3 recording feature.

7. Remote Control

The included remote control provides convenient access to various functions, including source selection, volume adjustment, and playback controls.



Image: The remote control for the Electrohome Kingston RR75, featuring buttons for power, menu, navigation, EQ settings, and volume, placed on a wooden surface.

MAINTENANCE

- Cleaning the Unit:** Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners or solvents.
- Stylus Care:** The stylus (needle) is a delicate component. Avoid touching it with your fingers. Clean the stylus periodically with a soft brush designed for turntable styli, brushing from back to front. Replace the stylus if you notice a decrease in sound quality or visible damage.
- Record Care:** Keep your vinyl records clean and free of dust. Store them vertically in their sleeves to prevent warping.

- **CD Care:** Handle CDs by their edges. Clean them with a soft, lint-free cloth, wiping from the center outwards.

TROUBLESHOOTING

Problem	Possible Solution
No power	Ensure the power cord is securely connected to both the unit and a working electrical outlet. Press the power button.
No sound	Check the volume level. Ensure the correct source input is selected. For turntable, ensure the tonearm is lowered and stylus is on the record. For Bluetooth, ensure device is paired and volume is up.
Turntable not spinning	Ensure all shipping protection is removed. Check that the belt is properly seated around the motor pulley and platter.
Bluetooth pairing issues	Ensure the unit is in Bluetooth pairing mode ('bt' flashing). Disable and re-enable Bluetooth on your external device. Move closer to the unit.
CD playback issues	Ensure the CD is clean and free of scratches. Try a different CD.

SPECIFICATIONS


- **Model:** RR75
- **Product Dimensions (L x W x H):** 13.5 x 17.3 x 12.25 inches
- **Item Weight:** 23.8 pounds
- **Connectivity Technology:** Wireless (Bluetooth)
- **Speaker Type:** 4 individual speakers
- **Power Source:** AC Power
- **Remote Control Batteries:** 2 x AAA (included)
- **Date First Available:** March 8, 2019

WARRANTY AND SUPPORT

The Electrohome Kingston RR75 comes with a 1-year manufacturer's warranty. Electrohome also provides lifetime customer support.

 
For technical assistance, warranty claims, or further inquiries, please refer to the contact information provided in your Quick Start Guide or visit the official Electrohome support website.

Related Documents - RR75

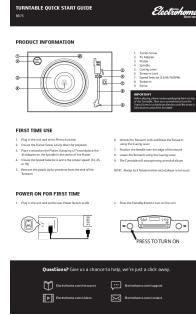	<p>Electrohome RR75 7-in-1 Vinyl Record Player User Manual</p> <p>Comprehensive user manual for the Electrohome RR75 7-in-1 Vinyl Record Player, detailing setup, operation of all features including vinyl playback, CD, USB, Bluetooth, radio, and recording, along with care, maintenance, troubleshooting, and safety information.</p>
	<p>Electrohome RR75 7-in-1 Vinyl Record Player User Manual</p> <p>Comprehensive user manual for the Electrohome RR75 7-in-1 Vinyl Record Player, detailing setup, operation of various sources (vinyl, CD, Bluetooth, USB, Radio, AUX), recording features, maintenance, troubleshooting, specifications, safety instructions, and warranty information.</p>
	<p>Electrohome RR75 7-in-1 Vinyl Record Player User Manual</p> <p>Comprehensive user manual for the Electrohome RR75 7-in-1 Vinyl Record Player. Learn about setup, operation of the turntable, CD player, Bluetooth, radio, USB functions, recording, maintenance, troubleshooting, specifications, and warranty.</p>
	<p>Electrohome RR75 Turntable Quick Start Guide</p> <p>A quick start guide for the Electrohome RR75 turntable, covering product information, first-time use instructions, and power-on procedures.</p>
	<p>Electrohome EB30 McKinley Powered Bookshelf Speakers Quick Start Guide</p> <p>Quick start guide for Electrohome EB30 McKinley Powered Bookshelf Speakers, covering setup, connections, Bluetooth pairing, and specifications.</p>

Electrohome
Since 1907

Huntley Powered Bookshelf Speakers
(Model EB10)



Quick Start Guide v1.0

[Electrohome Huntley Powered Bookshelf Speakers EB10 Quick Start Guide](#)

Quick start guide for Electrohome Huntley Powered Bookshelf Speakers (Model: EB10), covering setup, product information, connections, and safety instructions.