



[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Quick Snap Waterproof 27 Exposures 35mm Camera User Manual

Fujifilm Quick Snap Waterproof

Fujifilm Quick Snap Waterproof 27 Exposures 35mm Camera User Manual

Model: Quick Snap Waterproof | Brand: Fujifilm

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Fujifilm Quick Snap Waterproof 27 Exposures 35mm Camera. This single-use camera is designed for convenience and durability, particularly in wet environments, allowing you to capture memories up to a depth of 17 feet. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

2. PRODUCT OVERVIEW

The Fujifilm Quick Snap Waterproof camera is a pre-loaded, single-use 35mm camera featuring 27 exposures of 800-speed color film. Its robust, waterproof casing makes it suitable for use in various conditions, including underwater photography. A hand strap is included for secure handling.



Figure 2.1: Fujifilm Quick Snap Waterproof Camera in Packaging.



Figure 2.2: Included Quality Photo Microfiber Cloth.

Key Features:

- **Film Format:** 35mm
- **Exposures:** 27 per camera
- **Film Speed:** ISO 800 color film
- **Waterproof Depth:** Up to 17 feet (approximately 5 meters)
- **Included Accessory:** Hand strap for secure carrying.

3. SETUP

1. **Unpacking:** Carefully remove the camera from its packaging. Inspect the camera for any visible damage.
2. **Film Pre-loaded:** The camera comes pre-loaded with 35mm film, ready for immediate use. No film loading is required by the user.
3. **Hand Strap Attachment:** Attach the included hand strap to the designated loop on the camera for secure handling, especially when used near or in water.
4. **No Flash:** This model does not include a built-in flash. Ensure adequate lighting conditions for photography.

4. OPERATING INSTRUCTIONS

4.1 Taking a Picture

1. **Advance Film:** Rotate the thumb wheel (film advance wheel) located on the top right side of the camera until it stops. This cocks the shutter and advances the film to the next frame.
2. **Frame Your Shot:** Look through the viewfinder to compose your photograph.
3. **Press Shutter Button:** Press the shutter button, located on the top left side of the camera, firmly to take the picture.
4. **Repeat:** Continue this process for each exposure until all 27 frames have been used. The film counter on the top of the camera indicates the remaining exposures.

4.2 Underwater Photography

- The camera is waterproof up to 17 feet (5 meters). Ensure the camera casing is intact and free from cracks or damage before submerging.
- For best results underwater, shoot in clear water with ample natural light.
- Hold the camera steady and close to your subject for clearer images.
- After use in saltwater, rinse the camera thoroughly with fresh water and allow it to air dry.

4.3 Film Development

Once all exposures are used, the camera is ready for development. Take the entire camera to a photo lab that processes 35mm film. The lab will extract and develop the film. The camera itself is disposable and should be recycled according to local regulations after film removal.

5. MAINTENANCE AND CARE

- **Cleaning:** Use the provided Quality Photo microfiber cloth to gently clean the camera lens and body. For stubborn marks, a slightly damp cloth can be used, followed by drying with the microfiber cloth.
- **Post-Water Use:** After using the camera in water, especially saltwater, rinse it thoroughly with fresh water to prevent salt buildup and corrosion. Allow it to air dry completely before storage.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the camera or subjecting it to strong impacts, as this can damage the internal mechanisms or compromise the waterproof seal.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Film not advancing	Thumb wheel not fully rotated; all exposures used.	Ensure the thumb wheel is rotated until it stops. Check the exposure counter. If 27 exposures are used, the camera is finished.
Blurry photos	Camera movement during exposure; subject too close/far; insufficient light.	Hold the camera steady. Ensure subjects are within the recommended focus range (typically 3 feet to infinity for disposable cameras). Shoot in well-lit conditions, especially without a flash.
Water inside camera casing	Damage to waterproof seal; exceeding depth limit.	Discontinue use immediately. The camera may be compromised. Ensure the camera was not used beyond its 17-foot depth limit.
Photos too dark	Insufficient lighting; no flash.	This camera does not have a flash. Ensure you are shooting in bright, natural light, especially indoors or underwater.

7. SPECIFICATIONS

- **Model Name:** Fujifilm Quick Snap Waterproof
- **Film Format:** 35mm
- **Exposures:** 27
- **Film Speed:** ISO 800
- **Waterproof Depth:** Up to 17 feet (5 meters)
- **Product Dimensions (L x W x H):** 5.5 x 2 x 3 inches (13.97 x 5.08 x 7.62 cm)
- **Item Weight:** 7.4 ounces (209 grams)
- **UPC:** 718771299713
- **Included Components:** Camera, Hand Strap, Quality Photo Microfiber Cloth
- **Manufacturer:** Fujifilm

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the official Fujifilm website or contact Fujifilm customer service directly. Keep your purchase receipt as proof of purchase.

Fujifilm Official Website: www.fujifilm.com

