

CROMA CRAO0063

Croma 48L OTG Oven Toaster Grill CRAO0063 User Manual

Model: CRAO0063

1. IMPORTANT SAFETY INSTRUCTIONS

Before using your Croma OTG, please read all instructions carefully to ensure safe operation and prevent damage. Keep this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from flammable materials.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot items or parts.
- Do not immerse the cord, plug, or the appliance body in water or other liquids to protect against electrical hazards.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Always ensure proper ventilation around the appliance during operation.

2. PRODUCT OVERVIEW

The Croma 48L Oven Toaster Grill (OTG) is a versatile kitchen appliance designed for baking, grilling, toasting, and roasting. It features a convection mode for even cooking, precise temperature control, and a motorized rotisserie for uniform roasting.

2.1 Appliance Dimensions



Image 1: Front view of the Croma 48L OTG, illustrating its overall dimensions including width, depth, height, and weight.

2.2 Control Panel Features



Image 2: Detailed view of the control panel, highlighting the temperature control knob (100°C to 250°C), power on indicator, multi-stage heat selection, function selector, and 60-minute auto cut-off timer.

2.3 Included Accessories

The following accessories are included with your Croma OTG:

- Baking Tray
- Crumb Tray
- Grill Rack
- Rotisserie Rod
- Rotisserie Handle
- Skewers
- Tray Handle

ACCESSORIES



Image 3: A visual representation of all standard accessories provided with the Croma OTG.

3. SETUP AND FIRST USE

3.1 Unpacking

- Carefully remove the OTG and all accessories from the packaging.
- Remove any protective films, stickers, or packing materials from the appliance.
- Wipe the exterior of the OTG with a damp cloth. Wash all accessories (baking tray, grill rack, etc.) in warm, soapy water, rinse, and dry thoroughly.

3.2 Placement

- Place the OTG on a flat, stable, heat-resistant surface.
- Ensure there is adequate space (at least 10-15 cm) around the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
- Keep the appliance away from water sources, heat sources, and flammable materials.

3.3 Initial Burn-Off

Before cooking food, it is recommended to perform an initial burn-off to eliminate any manufacturing odors or residues.

1. Plug the OTG into a grounded electrical outlet (220-240VAC, 50Hz).
2. Set the temperature knob to 250°C.
3. Set the function selector to the 'Bake' mode (top and bottom heating elements).
4. Set the timer to 15-20 minutes.
5. Allow the oven to operate in a well-ventilated area. A slight odor or smoke may be present; this is normal.
6. Once the timer finishes, turn all knobs to the 'OFF' position and unplug the appliance. Allow it to cool completely.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel (refer to Image 2) before operation.

4.1 Control Knobs

- **Temperature Control Knob:** Adjusts the cooking temperature from 100°C to 250°C.
- **Function Selector Knob:** Selects the heating mode (e.g., top heat, bottom heat, top & bottom heat, convection, rotisserie).
- **Timer Knob:** Sets the cooking time up to 60 minutes. It also has a 'Stay On' function for continuous operation.

4.2 General Operation

1. Place food on the appropriate accessory (baking tray, grill rack) and insert it into the desired rack position inside the oven.
2. Close the oven door securely.
3. Set the **Temperature Control Knob** to the desired cooking temperature.
4. Select the appropriate cooking function using the **Function Selector Knob** (e.g., Bake, Grill, Toast, Convection).
5. Turn the **Timer Knob** to the desired cooking time. The power indicator light will illuminate. For continuous operation, turn the timer past the '60' mark to the 'Stay On' position.
6. When the cooking time is complete, the timer will ring, and the oven will automatically switch off (unless 'Stay On' is selected).
7. Carefully remove the cooked food using the tray handle or oven mitts.

4.3 Using the Convection Function

The convection function circulates hot air inside the oven, ensuring more even and faster cooking. Select the convection mode using the Function Selector Knob for dishes requiring uniform heat distribution, such as cakes or roasted vegetables.

4.4 Using the Rotisserie Function

The motorized rotisserie is ideal for roasting whole chickens or large cuts of meat, ensuring they are evenly cooked and browned on all sides.

1. Secure the food onto the rotisserie rod using the forks.
2. Insert the rotisserie rod into the designated slots inside the oven.
3. Select the rotisserie function using the Function Selector Knob.
4. Set the desired temperature and timer.
5. Once cooking is complete, use the rotisserie handle to carefully remove the hot rotisserie rod and food from the oven.



Image 4: The rotisserie rod with skewered vegetables and paneer rotating inside the oven, demonstrating the grilling capability.

4.5 Example Cooking Applications



Image 5: A pizza baking inside the Croma OTG, illustrating the oven's capacity and suitability for baking.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your Croma OTG and ensure optimal performance.

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive oven cleaner designed for OTGs can be used, following the product instructions. Ensure all cleaner residue is removed.
- **Crumb Tray:** The crumb tray should be removed and cleaned regularly to prevent grease buildup and potential fire hazards. Wash with warm, soapy water, rinse, and dry thoroughly.
- **Accessories:** Wash the baking tray, grill rack, rotisserie rod, and skewers in warm, soapy water. Rinse and dry completely before storing or reusing.
- Do not immerse the main body of the OTG in water.

6. TROUBLESHOOTING

If you encounter any issues with your Croma OTG, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; timer not set.	Ensure the plug is securely in the outlet. Check household fuse/circuit breaker. Set the timer knob to a desired time or 'Stay On'.
Food cooks unevenly.	Incorrect rack position; overcrowding; heating element issue.	Use the recommended rack position for the food type. Avoid overcrowding the oven. Ensure the correct heating function is selected. Try using convection mode.
Smoke or odor during first use.	Residual manufacturing oils/coatings.	This is normal during the initial burn-off. Ensure good ventilation. If it persists after initial use, contact customer support.
Rotisserie not rotating.	Rotisserie not properly engaged; food too heavy; incorrect function selected.	Ensure the rotisserie rod is correctly seated in the drive socket. Do not overload the rotisserie. Select the specific rotisserie function.

If the problem persists after trying these solutions, please contact Croma customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	CROMA
Model	CRAO0063
Capacity	48 Litres
Wattage	2000 Watts
Power Requirement	220-240VAC, 50Hz
Temperature Control	100°C to 250°C
Timer	60 minutes with 'Stay On' function
Control Type	Knob
Special Features	Convection mode, Motorized Rotisserie, Multiple Heating Modes
Door Material	Tempered Glass
Item Weight	9 kg 410 g
Power Cord Length	0.9 M

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Croma 48L OTG (Model CRAO0063) comes with a **2-year serviceable onsite warranty** from the

date of purchase. This warranty covers manufacturing defects and issues arising from normal use. Please retain your purchase receipt for warranty claims.

The warranty does not cover damage caused by misuse, accident, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For any product-related queries, service requests, or warranty claims, please contact Croma customer support. Refer to your warranty card or the Croma official website for the most up-to-date contact information.

When contacting support, please have your product model number (CRAO0063) and purchase details ready.