

Elekpia VSB200

Elekpia VSB200 Sound Bar Remote Control User Manual

INTRODUCTION

Thank you for choosing the Elekpia VSB200 Sound Bar Remote Control. This remote is designed to be 100% compatible with various Vizio sound bar models, including VSB211, VSB201, VSB212, VR8, VSB200, VSB210, VSB210WS, VSB211WS, VSB205, VSB206, and VSB207. It requires no setup or programming, offering a straightforward replacement for your original remote.

PRODUCT OVERVIEW



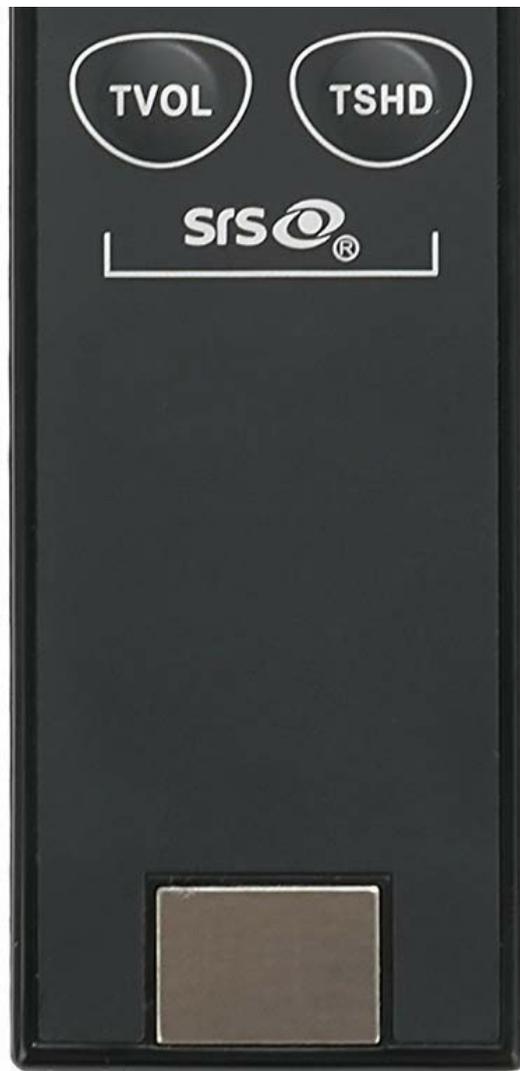


Image: A black remote control with white circular buttons. The buttons are arranged in two columns, featuring Power, Volume Up, Input, Volume Down, Mute, TVOL, and TSHD functions. The SRS logo is visible below the Mute button.

Button Functions:

- **Power ():** Turns the sound bar on or off.
- **Vol+ (Volume Up):** Increases the sound bar's volume.
- **Input:** Cycles through available audio input sources.
- **Vol- (Volume Down):** Decreases the sound bar's volume.
- **Mute:** Silences or restores the sound.
- **TVOL (TruVolume):** Activates or deactivates the TruVolume feature, which maintains consistent volume levels.
- **TSHD (TruSurround HD):** Activates or deactivates the TruSurround HD feature for enhanced virtual surround sound.

SETUP

1. **Insert Batteries:** Open the battery compartment on the back of the remote control. Insert two AAA batteries (not included, unless specified by packaging) according to the polarity indicators (+/-). Close the battery compartment securely.

2. **No Programming Required:** This remote control is pre-programmed and ready to use with compatible Vizio sound bars immediately after battery installation. No additional setup steps are needed.

OPERATING INSTRUCTIONS

To operate your sound bar using the Elekpia VSB200 remote control:

- Ensure there is a clear line of sight between the remote control and the infrared (IR) sensor on your Vizio sound bar.
- Point the remote directly at the sound bar's IR sensor.
- Press the desired function button (e.g., Power, Vol+, Mute) to control your sound bar.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's performance diminishes or it stops responding. Always use new batteries of the specified type (AAA).
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Remote Not Responding:

1. **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity. Replace old or weak batteries with new ones.
2. **Reset the Remote:**
 - Remove the batteries from the remote.
 - Press every button on the remote for approximately 3 seconds each to drain any residual power and check for stuck buttons.
 - Reinsert brand-new batteries.
3. **Reset Your Sound Bar:**
 - Unplug the sound bar from the wall power outlet.
 - Press and hold the power button on the sound bar itself (not the remote) for 15 seconds to clear any residual power.
 - Plug the sound bar back in and turn it on.
4. **Line of Sight:** Ensure there are no obstructions between the remote and the sound bar's IR sensor. The remote uses infrared (IR) technology, requiring a direct line of sight.

SPECIFICATIONS

Feature	Detail
Model Number	Elekpia VSB200

Product Dimensions	5 x 1 x 0.3 inches
Item Weight	0.634 ounces
Compatible Devices	Vizio Sound Bars (VSB211, VSB201, VSB212, VR8, VSB200, VSB210, VSB210WS, VSB211WS, VSB205, VSB206, VSB207)
Special Features	Ergonomic, No Programming Required
Color	Black
Max Number of Supported Devices	1

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your purchase receipt for any warranty claims.