

- Manuals.plus /
- > [IKEA](#) /
 - > IKEA Eket Cabinet with 2 Drawers, White

IKEA 003.339.47

IKEA Eket Cabinet with 2 Drawers, White - Instruction Manual

Brand: IKEA | Model: 003.339.47

PRODUCT OVERVIEW

The IKEA Eket Cabinet with 2 Drawers in White is a versatile storage unit designed to adapt to various living spaces and evolving storage needs. Its compact design makes it suitable for limited spaces, while its modular nature allows it to serve as a foundation for larger storage solutions.

This cabinet features two drawers equipped with integrated push-openers, eliminating the need for external knobs or handles and providing a clean, minimalist aesthetic. The drawers open with a simple light push.



Image: Front view of the IKEA Eket Cabinet with two drawers in white, showcasing its clean design.

SETUP AND ASSEMBLY

Assembly of the IKEA Eket Cabinet is required. Please follow the detailed instructions provided in the packaging for proper construction. Ensure all components are present before beginning assembly.



Image: Close-up of two hands connecting cabinet panels using a dowel and cam lock system, illustrating a typical assembly step.

Placement Options

The Eket cabinet offers flexible placement options:

- **Floor Placement:** The cabinet can be placed directly on the floor as a standalone unit.
- **Wall Mounting:** To free up floor space, the cabinet can be mounted on the wall. If choosing this option, it is **essential** to purchase the EKET Suspension rail separately. This frame requires one 27½" long suspension rail.



Image: The white IKEA Eket cabinet mounted on a wall above a bed, functioning as a bedside table with decorative items on top.

OPERATING INSTRUCTIONS

Drawer Operation

The drawers of the Eket cabinet are designed with integrated push-openers for ease of use and a sleek appearance. To open a drawer, simply apply a light push to the center of the drawer front. The drawer will spring open slightly, allowing you to pull it out fully. To close, gently push the drawer back until it clicks into place.



Image: The top drawer of the IKEA Eket cabinet is partially open, revealing a notebook and pen inside, demonstrating its storage capacity.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your IKEA Eket Cabinet, follow these care guidelines:

- **Cleaning:** Wipe clean with a damp cloth and a mild cleaner. Then wipe dry with a clean cloth.
- **Dusting:** Regularly dust the surfaces with a soft, dry cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong solvents, or polishes that may damage the finish.
- **Protect from Moisture:** Avoid prolonged exposure to moisture or direct sunlight, which can cause warping or discoloration.
- **Check Fasteners:** Periodically check and retighten any assembly fasteners to maintain stability.



Image: A close-up view of the corner joint of the IKEA Eket cabinet, showing the smooth finish and precise construction.

TROUBLESHOOTING

If you encounter any issues with your Eket Cabinet, consider the following common solutions:

- **Drawers not opening/closing smoothly:**
 - Ensure the drawer runners are clean and free of debris.
 - Verify that the drawer is correctly aligned on its runners.
 - Check if the push-opener mechanism is obstructed or damaged.
- **Cabinet wobbles/unstable:**
 - Confirm that all assembly screws and fasteners are securely tightened.
 - Ensure the cabinet is placed on a flat, level surface. For floor placement, use furniture pads if necessary to level.
 - If wall-mounted, verify the suspension rail is securely fastened to the wall studs and the cabinet is properly

hooked onto the rail.

- **Missing parts during assembly:**
 - Double-check all packaging materials.
 - Contact IKEA customer service with your product model number and details of the missing part.

PRODUCT SPECIFICATIONS

Attribute	Detail
Brand	IKEA
Model Number	003.339.47
Color	White
Product Dimensions (D x W x H)	13.7"D x 27.5"W x 13.7"H (35 cm D x 70 cm W x 35 cm H)
Item Weight	32.6 pounds (14.8 kg)
Material	Particleboard, Honeycomb structure paper filling, Fiberboard, Paper foil, Plastic edging. Drawer bottom: Printed acrylic paint.
Number of Compartments	2 (drawers)
Mounting Type	Floor Mount / Wall Mount (requires separate suspension rail)
Assembly Required	Yes
Special Feature	Storage, Integrated push-openers

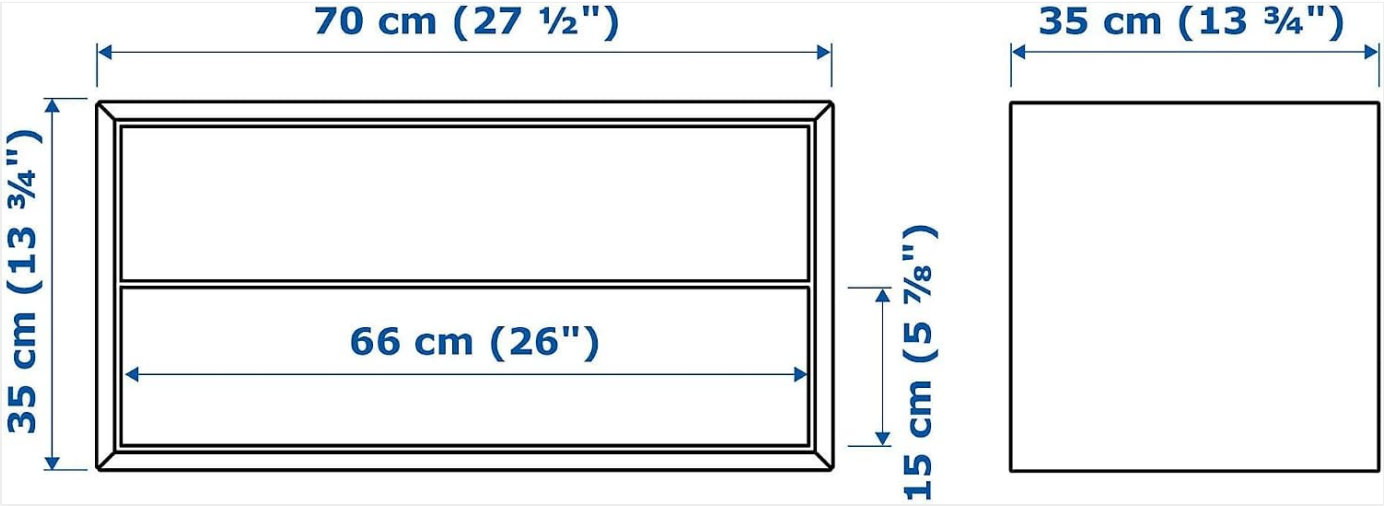


Image: Technical diagram showing the dimensions of the IKEA Eket Cabinet: 70 cm (27½") width, 35 cm (13¾") height, and 35 cm (13¾") depth, with internal drawer dimensions.

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official IKEA website. For further assistance, missing parts, or specific product inquiries, please contact IKEA customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question