

Well MB08

Well MB08 Airsoft Sniper Rifle Instruction Manual

Model: MB08

1. INTRODUCTION

Thank you for purchasing the Well MB08 Airsoft Sniper Rifle. This manual provides essential information for the safe and proper assembly, operation, maintenance, and troubleshooting of your airsoft rifle. Please read this manual thoroughly before using the product to ensure optimal performance and safety.

2. SAFETY INFORMATION

Airsoft rifles are not toys and should be handled with extreme caution. Always follow these safety guidelines:

- **Eye Protection:** Always wear ANSI Z87.1 rated eye protection when handling or operating the airsoft rifle.
- **Responsible Use:** Never point the airsoft rifle at people or animals. Treat every airsoft rifle as if it were loaded.
- **Storage:** Store the airsoft rifle unloaded, uncocked, and in a secure location away from children and unauthorized users.
- **Transportation:** Transport the airsoft rifle in a case, unloaded, and with the magazine removed.
- **Ammunition:** Use only high-quality 6mm plastic BBs specifically designed for airsoft rifles. Never use metal BBs or other projectiles.
- **Age Restriction:** This product is intended for users 18 years of age or older.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Well MB08 Airsoft Sniper Rifle
- Magazine (24rd Capacity)
- 3-9x40 Rifle Scope with Rings
- Bipod

4. SETUP

4.1 Attaching the Bipod

Locate the bipod attachment point on the underside of the rifle's handguard. Secure the bipod by aligning its mount with the attachment point and tightening the locking mechanism. Ensure it is firmly attached before use.

4.2 Mounting the Scope

Attach the scope rings to the rifle's top rail. Place the 3-9x40 scope into the rings, ensuring proper eye relief and level alignment. Tighten the scope ring screws evenly to secure the scope without overtightening.



Image: The Well MB08 Airsoft Sniper Rifle fully assembled with the scope and bipod attached, showcasing its complete configuration.

4.3 Loading the Magazine

1. Press the magazine release button and remove the magazine from the rifle.
2. Locate the BB loading port on the magazine.
3. Using a speed loader (not included) or by hand, carefully insert 6mm airsoft BBs into the magazine until it reaches its 24-round capacity. Do not overfill.
4. Insert the loaded magazine firmly back into the rifle until it clicks into place.

5. OPERATING INSTRUCTIONS

5.1 Cocking the Rifle (Bolt Action)

To prepare the rifle for firing, grasp the bolt handle and pull it fully to the rear until it locks. Then, push the bolt handle fully forward until it locks into place. This action chambers a BB and cocks the spring mechanism.

5.2 Firing

1. Ensure you are in a safe firing area and wearing appropriate eye protection.
2. Aim the rifle at your target.
3. Disengage the safety mechanism (if engaged).
4. Gently pull the trigger to fire a single BB.
5. To fire again, repeat the cocking process (Section 5.1).

5.3 Adjusting the Scope

The 3-9x40 scope allows for magnification adjustment (3x to 9x) and windage/elevation adjustments. Use the adjustment turrets on the scope to zero it to your desired range and correct for windage and elevation. Refer to the scope's specific manual for detailed adjustment procedures.

5.4 Hop-Up Adjustment

The hop-up system applies backspin to the BB, increasing its range and accuracy. The MB08 model may feature an adjustable hop-up. Consult the rifle's specific design for the location and method of adjustment, typically a small dial or lever near the breach or magazine well. Adjust incrementally and test to find the optimal setting for your BB weight.

6. MAINTENANCE

6.1 Cleaning

- **Barrel Cleaning:** Use a cleaning rod with a small piece of cloth or paper towel lightly dampened with silicone oil. Gently push it through the barrel from the breach end to remove any residue.
- **Exterior Cleaning:** Wipe down the exterior of the rifle with a clean, dry cloth. Avoid using harsh chemicals that may damage the finish.
- **Lubrication:** Apply a small amount of silicone oil to moving parts such as the bolt mechanism to ensure smooth operation. Do not use petroleum-based lubricants.

6.2 Storage

Store the rifle in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the rifle is unloaded, the magazine is removed, and the safety is engaged before storage. A rifle bag or case is recommended for protection.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
BBs not firing or rolling out of barrel	Magazine empty or improperly seated; BBs jammed; Hop-up set too high.	Reload or reseal magazine; Clear barrel obstruction with cleaning rod; Adjust hop-up setting.
Bolt difficult to cock	Lack of lubrication; Internal obstruction.	Apply silicone oil to bolt mechanism; Inspect for foreign objects.
Inaccurate shots	Incorrect hop-up setting; Dirty barrel; Low quality BBs; Scope not zeroed.	Adjust hop-up; Clean barrel; Use high-quality BBs; Zero the scope.

8. SPECIFICATIONS

Feature	Detail
Operation	Bolt Action
Build Material	Aluminum Outer Barrel, Fiber Polymer Handguard, Plastic Frame
Firing Modes	Single Shot
Muzzle Velocity	470 - 480 FPS (with 0.20g BBs)

Feature	Detail
Magazine Capacity	24 Rounds
Weight	8.5 lbs
Overall Length	37 inches (Retracted) / 45 inches (Extended)
Included Scope	3-9x40 Rifle Scope with Rings
Included Bipod	Yes, fits all MB Series
Color	Tan
UPC	193939102294

9. WARRANTY AND SUPPORT

This Well MB08 Airsoft Sniper Rifle comes with a **30 Day Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims. For technical support or warranty inquiries, please contact your retailer or the manufacturer directly. Provide your model number (MB08) and a detailed description of the issue when seeking assistance.