

Mugast Mugast1xwc40zgdq

Mugast Home Digital Doorbell: Electronic HD Smart Video Door Peephole Viewer Instruction Manual

Model: Mugast1xwc40zgdq

1. INTRODUCTION

Thank you for choosing the Mugast Home Digital Doorbell. This Electronic HD Smart Video Door Peephole Viewer is designed to enhance your home security by providing a clear view of visitors at your door. Featuring a 3.5-inch LCD color screen and a 120-degree wide-angle camera, it offers 24-hour monitoring capabilities. Please read this manual carefully to ensure proper installation and operation of your device.

2. PRODUCT OVERVIEW

2.1 Package Contents

- 1 x Outdoor Unit (Peephole Camera)
- 1 x Indoor Unit (Display Screen)
- 1 x Bag of Screws
- 1 x Metal Bracket



Figure 2.1: All components included in the package.

2.2 Key Features

- **3.5-inch LCD Screen:** Digital photo visual monitoring with a 3.5 HD LCD color screen for clear viewing.
- **High Definition Sensor:** Equipped with a 2 Mega CMOS Sensor for high-quality color images.
- **120° Wide Angle View:** The electronic cat eye camera provides a 120-degree actual viewing angle, reducing blind spots.
- **24 Hours Monitoring:** Designed for continuous monitoring to enhance home security.
- **Energy Saving:** Features energy-saving functions for extended battery life.
- **Low Power Alert:** Notifies you when batteries are running low.

3.5-inch LCD color screen.



Figure 2.2: The 3.5-inch LCD color screen displaying a live view.

24 hours monitoring.

120 degree actual viewing angle.



Figure 2.3: Illustration of the 120-degree wide-angle view.

3. SPECIFICATIONS

Feature	Specification
Type	Digital Doorbell / Security Camera
Material	Zinc Alloy
LCD Screen Size	3.5 inch
Sensor	2 Mega CMOS Sensor
Real View Angle	120 degrees
Power Supply	4pcs AAA batteries (not included)

Door Hole Range	14-28mm
Door Thickness Range	35-100mm
Indoor Device Size	120x62x20 mm
Outdoor Camera Diameter	30 mm
Net Weight	197g

Note: This product does not support night vision.

4. SETUP AND INSTALLATION

Follow these steps to install your Mugast Home Digital Doorbell:

- 1. Prepare the Door:** Ensure your door has a peephole hole within the specified range of 14-28mm and a thickness between 35-100mm. If replacing an existing peephole, remove it carefully.
- 2. Install Outdoor Unit:** Insert the outdoor peephole camera unit through the door hole from the outside. Ensure the camera is facing outwards and is flush with the door surface.
- 3. Attach Metal Bracket:** From the inside of the door, slide the metal bracket over the cable and align it with the outdoor unit's threaded tube. Secure the bracket using the provided screws, tightening them to hold the outdoor unit firmly in place.
- 4. Connect Indoor Unit:** Connect the ribbon cable from the outdoor unit to the corresponding port on the back of the indoor display unit. Ensure the connection is secure.
- 5. Insert Batteries:** Open the battery compartment on the indoor unit and insert 4 AAA batteries (not included), observing the correct polarity.
- 6. Mount Indoor Unit:** Align the indoor display unit with the metal bracket and slide it downwards to secure it. The unit should click into place.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the step-by-step installation process of the digital door viewer, showing how to mount the outdoor camera and connect the indoor display unit.



Easy to install

Easy to learn to install in 3 minutes, no need to install workers, no special tools, saving time and effort and saving money.

Figure 4.1: Rear view of the indoor unit, indicating battery placement and ease of installation.

5. OPERATING INSTRUCTIONS

Once installed and powered on, the Mugast Home Digital Doorbell is ready for use.

5.1 Viewing Visitors

To view who is at your door, simply press the button on the indoor display unit. The 3.5-inch LCD screen will activate and show a live video feed from the outdoor camera. The 120-degree wide-angle lens provides a broad perspective of your doorstep.

5.2 24-Hour Monitoring

The device is designed for 24-hour monitoring. It will automatically activate and record images or video when motion is detected outside your door, providing continuous security surveillance.

Your browser does not support the video tag.

Video 5.1: This video illustrates the electronic monitoring function of the door viewer, showing how it captures activity at the door.

6. MAINTENANCE

To ensure optimal performance and longevity of your digital doorbell, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the indoor display screen and the outdoor camera lens. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** The device operates on 4 AAA batteries. When the low power alert is displayed, replace all batteries with new ones to maintain continuous operation.
- **Environmental Conditions:** Avoid exposing the device to extreme temperatures, direct sunlight for prolonged periods, or high humidity.

7. TROUBLESHOOTING

If you encounter any issues with your Mugast Home Digital Doorbell, refer to the following troubleshooting tips:

- **No Display/Power:**
 - Check if the batteries are correctly inserted with the right polarity.
 - Replace old batteries with new ones.
 - Ensure the ribbon cable connecting the outdoor and indoor units is securely attached.
- **Blurred Image:**
 - Clean the outdoor camera lens with a soft cloth.
 - Ensure the outdoor unit is properly installed and not obstructed.
- **No Monitoring/Recording:**
 - Verify that the device is powered on and has sufficient battery life.
 - Check device settings to ensure monitoring features are enabled.

8. WARRANTY AND SUPPORT

The Mugast Home Digital Doorbell comes with a **1-year warranty**. For any questions, technical assistance, or warranty claims, please contact Mugast customer support. Our goal is to provide good quality products and satisfied customers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question