

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Stauer](#) /
- › [Stauer Men's 12:03 Hybrid Black Chronograph Watch User Manual](#)

Stauer 12:03 Hybrid

Stauer Men's 12:03 Hybrid Black Chronograph Watch User Manual

Model: 12:03 Hybrid

INTRODUCTION

Thank you for choosing the Stauer Men's 12:03 Hybrid Black Chronograph Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Image: Front view of the Stauer 12:03 Hybrid Black Chronograph Watch, showcasing its analog and digital displays, black case, and leather strap.

SETUP INSTRUCTIONS

1. Initial Inspection

Upon unboxing, inspect your watch for any visible damage. Ensure all protective films are removed from the crystal and case back.

2. Setting Analog Time

1. Pull the crown (located on the right side of the watch case) out to the first position.
2. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the desired time.
3. Once the correct time is set, push the crown back into its original position to start the analog movement.

3. Setting Digital Time and Date

The digital display features Hour, Minute, Second, Month, Date, and Day of the week. Refer to the buttons on the watch case for digital adjustments.



Image: Close-up view of the watch dial, highlighting the digital display and the various indicators for time and day of the week.

1. **Mode Button:** Press the 'Mode' button (usually bottom-left) repeatedly to cycle through different digital display modes: Time, Alarm, Chronograph.
2. **Set Button:** When in Time mode, press and hold the 'Set' button (usually top-left) until the seconds

start flashing.

3. **Adjust Button:** Use the 'Adjust' button (usually top-right) to increase the flashing value (seconds, minutes, hours, month, date, day).
4. **Mode Button (to advance):** Press the 'Mode' button to move to the next setting (e.g., from seconds to minutes, then hours, etc.).
5. Repeat steps 3 and 4 until all desired time and date parameters are set.
6. Press the 'Set' button again to exit the setting mode.

OPERATING INSTRUCTIONS

1. Chronograph Function (Stopwatch)

Your watch features a 1/100 second chronograph with split functions.

1. Press the 'Mode' button until "CHRONO" or "STOPWATCH" appears on the digital display.
2. Press the 'Start/Stop' button (usually bottom-right) to begin timing.
3. Press 'Start/Stop' again to pause the timing.
4. To record a split time, press the 'Split/Reset' button (usually top-right) while the chronograph is running. The display will show the split time while the internal timer continues. Press 'Split/Reset' again to return to the running time.
5. To reset the chronograph, ensure it is stopped, then press the 'Split/Reset' button.

2. Daily Alarm and Hourly Chime

The watch can be set for a daily alarm and an hourly chime.

- **Setting Alarm:** In Alarm mode (accessed via 'Mode' button), use the 'Set' and 'Adjust' buttons similar to setting the time to set the desired alarm time.
- **Activating/Deactivating Alarm:** In Alarm mode, press the 'Adjust' button to toggle the alarm ON/OFF. An alarm icon will appear when active.
- **Hourly Chime:** In Time mode, press the 'Adjust' button to toggle the hourly chime ON/OFF. A chime icon will appear when active.

3. EL Backlight

For visibility in low-light conditions, press the 'Light' button (usually top-left or bottom-left, depending on model) to illuminate the digital display.

4. 12/24 Hour Display

In Time mode, press the 'Adjust' button to switch between 12-hour (with AM/PM indicator) and 24-hour formats for the digital display.

MAINTENANCE

1. Cleaning Your Watch

Regular cleaning helps maintain the appearance of your watch. Use a soft, dry cloth to wipe the case and crystal. For the leather strap, wipe with a slightly damp cloth and allow it to air dry completely. Avoid harsh chemicals or abrasive materials.

2. Battery Replacement

When the digital display dims or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

3. Water Resistance

This watch is designed with a certain level of water resistance. However, it is not suitable for swimming or diving. Avoid exposing the watch to hot water, steam, or direct high-pressure water streams. Ensure the crown is fully pushed in before any contact with water.

4. Strap Care



Image: Close-up view of the dark charcoal grey leather strap with light grey stitching, showing its texture and attachment to the watch case.

The leather strap is durable but can be affected by moisture, sweat, and direct sunlight. To prolong its life, avoid prolonged exposure to water and direct sunlight. If the strap gets wet, dry it thoroughly with a soft cloth. Periodically, you may use a leather conditioner suitable for watch straps.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Analog hands not moving	Crown is pulled out; battery depleted	Push crown in; replace battery
Digital display is blank or dim	Battery depleted	Replace battery
Incorrect time/date displayed	Not set correctly; accidental button press	Refer to "Setting Analog Time" and "Setting Digital Time and Date" sections
Watch fogging up internally	Loss of water resistance; extreme temperature change	Avoid further water exposure; seek professional inspection

SPECIFICATIONS



Image: Angled view of the Stauer 12:03 Hybrid Watch, showing the robust case design and the interplay of analog and digital elements.

- **Model:** Stauer 12:03 Hybrid

- **Movement:** Digital and Analog Quartz
- **Case Material:** Alloy case with Stainless steel crown and caseback
- **Strap Material:** Dark charcoal grey leather strap with light grey stitching
- **Strap Fit:** Fits wrists 6 3/4" to 8 1/2"
- **Display:** LCD Display for Hour, Minute, Second, Month, Date, Day of the week
- **Functions:** Daily alarm, Hourly chime, 12/24 hour display, EL backlight, 1/100 second chronograph with split functions
- **Water Resistance:** General splash resistance (not suitable for swimming or diving)
- **Package Dimensions:** 11.43 x 6.86 x 6.6 cm
- **Weight:** 136 g

WARRANTY INFORMATION

For specific warranty details regarding your Stauer 12:03 Hybrid Watch, please refer to the warranty card included with your purchase or visit the official Stauer website. Typically, watches come with a limited warranty covering manufacturing defects from the date of purchase.

CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Stauer customer support. Contact information can usually be found on the official Stauer website or on your purchase documentation.

For online resources, visit: www.stauer.com