



Manuals.plus /

› **Lenovo** /

› Lenovo Tab E 10 10.1-inch Android Tablet (Model ZA470006US) User Manual

## Lenovo ZA470006US

# Lenovo Tab E 10 10.1-inch Android Tablet User Manual

Model: ZA470006US

## INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Lenovo Tab E 10 10.1-inch Android Tablet. Please read this guide thoroughly to ensure proper use and to maximize your device's performance and longevity.

The Lenovo Tab E 10 is designed for general use, offering an HD display and dual front speakers for a multimedia experience. It operates on Android Oreo (Go Edition), optimized for efficient resource use.

## 1. SETUP

### 1.1 Unboxing and Package Contents

Upon opening the package, verify that all components are present:

- Lenovo Tab E 10 Tablet
- Power Adapter
- USB Cable (for charging and data transfer)
- Quick Start Guide (if included)

If any items are missing or damaged, contact your retailer or Lenovo support.



Image: The Lenovo Tab E 10 tablet, showcasing its front display with the Android home screen and a partial view of its rear casing.

## 1.2 Charging the Device

Before initial use, fully charge the tablet. Connect the USB cable to the tablet's charging port and the power adapter. Plug the adapter into a wall outlet. The charging indicator will illuminate. A full charge typically takes several hours.

## 1.3 Initial Power On and Configuration

1. Press and hold the power button (located on the side) until the Lenovo logo appears.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account. A Google account is required to download apps from the Google Play Store.
3. Review and accept the terms and conditions.

## 1.4 Inserting a microSD Card (Optional)

The tablet supports microSD cards for expandable storage. Locate the microSD card slot on the side of the device. Gently insert the card until it clicks into place. Ensure the tablet is powered off before inserting or removing the card.



## Tab E 10

10.1"  
family entertainment  
tablet

[Learn more](#)



Lenovo

Image: A close-up side view of the Lenovo Tab E 10, highlighting the micro USB port, volume rocker, power button, and a blue accent strip, indicating the location of various controls and ports.

## 2. OPERATING THE TABLET

---

### 2.1 Basic Navigation

The Lenovo Tab E 10 uses a touch-based interface. Common gestures include:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

### 2.2 Display and Audio Features

The tablet features a 10.1-inch HD (1280 x 800 pixels) IPS display, providing clear visuals from various viewing angles. Dual front speakers with Dolby Atmos technology enhance the audio experience, delivering immersive sound for media consumption.



Image: The Lenovo Tab E 10 tablet displaying a vibrant video of a person mountain biking on a rocky terrain, illustrating its multimedia capabilities.

## 2.3 Connecting to Wi-Fi

1. Go to **Settings** > **Network & internet** > **Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

## 2.4 Managing User Profiles

The Lenovo Tab E 10 supports multiple user profiles, allowing each user to have their own personalized space, apps, and settings. This feature is useful for families sharing a single device.

1. Go to **Settings** > **System** > **Multiple users**.
2. Tap **Add user** or **Add guest** to create new profiles.
3. Follow the on-screen instructions to set up each profile.
4. To switch users, swipe down from the top of the screen to open the Quick Settings panel, then tap the user icon.

## 3. MAINTENANCE

### 3.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.

## 3.2 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not leave the tablet fully charged or fully discharged for extended periods.
- Use only the provided charger or a certified compatible charger.

## 3.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements.

1. Go to **Settings > System > About tablet > System update**.
2. Follow the on-screen instructions to check for and install updates.

## 3.4 Storage Management

To optimize performance, periodically manage your tablet's storage:

- Uninstall unused apps.
- Clear cached data for apps.
- Transfer large files (photos, videos) to cloud storage or a microSD card.

# 4. TROUBLESHOOTING

---

## 4.1 Common Issues and Solutions

- **Tablet is slow or unresponsive:** Close unused apps, clear app caches, restart the tablet.
- **Wi-Fi connection issues:** Restart your router, forget and reconnect to the Wi-Fi network on the tablet, ensure the tablet is within range.
- **Apps crashing:** Update the app, clear the app's cache and data (Settings > Apps & notifications > App info > [App Name] > Storage & cache), or reinstall the app.
- **Battery drains quickly:** Reduce screen brightness, disable unnecessary features (Bluetooth, GPS), close background apps.

## 4.2 Factory Reset

A factory reset will erase all data from your tablet and restore it to its original factory settings. This should be considered a last resort for persistent software issues.

1. **Backup your data:** Ensure all important data is backed up before proceeding.
2. Go to **Settings > System > Reset options > Erase all data (factory reset)**.
3. Confirm your decision and follow the on-screen prompts.

# 5. SPECIFICATIONS

---

The following table outlines the key technical specifications for the Lenovo Tab E 10 (Model ZA470006US):

Feature	Specification
Model Number	ZA470006US
Display Size	10.1 Inches
Screen Resolution	1280 x 800 pixels (HD)
Processor	1.3 GHz
RAM	2 GB (Flash Memory Size)
Operating System	Android 7.0 Nougat (Android Oreo Go Edition for 2GB RAM variant)
Storage	16 GB (Internal)
Wireless Type	802.11b/g/n
Average Battery Life	8 Hours
Item Weight	1.85 pounds
Product Dimensions	9.7 x 0.35 x 6.7 inches
Color	Black
Rear Webcam Resolution	5 MP

## 6. WARRANTY AND SUPPORT

---

### 6.1 Product Warranty

Your Lenovo Tab E 10 is covered by a limited warranty. The specific terms and duration of the warranty may vary by region and purchase location. Please refer to the warranty card included with your product or visit the official Lenovo support website for detailed warranty information.

### 6.2 Customer Support

For technical assistance, service, or additional information, please visit the official Lenovo support website or contact their customer service. You may need your product's serial number, which can typically be found on the device's packaging or in the tablet's settings under 'About tablet'.

**Lenovo Support Website:** [support.lenovo.com](http://support.lenovo.com)