

[Manuals.plus](#) /

› [WowWee](#) /

› [Pixie Belles - Interactive Enchanted Animal Toy Instruction Manual](#)

WowWee 3927

Pixie Belles - Interactive Enchanted Animal Toy

Model: 3927 | Brand: WowWee

ABOUT YOUR PIXIE BELLE

The Pixie Belle is an interactive animal toy designed to bring companionship and fun. Each Pixie Belle features a unique personality and responds to touch, motion, and sound. They are equipped with a light-up horn that indicates their mood and a magnetic power pod for wearable play. The interchangeable tail can also be worn as a bracelet, keychain, or hair accessory.



Image: A Pixie Belle toy, Rosie (Pink), showcasing its vibrant colors and fluffy tail. This interactive toy is designed for engaging play.

SETUP AND FIRST USE

Battery Installation

Your Pixie Belle requires 4 LR44 batteries, which are included. To install or replace batteries:

1. Locate the battery compartment on the underside of your Pixie Belle.
2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert the 4 LR44 batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

Important: Always use new batteries of the specified type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy will not be used for an extended period.

OPERATING YOUR PIXIE BELLE

Your Pixie Belle offers multiple interactive modes and features:

1. Nurture Mode

In Nurture Mode, your Pixie Belle responds to your touch and affection. Pet its head, back, or belly to hear different sounds and see its horn light up, indicating its mood. The longer you interact, the more responsive it becomes.

2. Pixie Power Dance Mode

To activate Dance Mode, gently shake your Pixie Belle. It will begin to play music and perform one of its 6 unique dances. You can join in the fun by dancing along!

3. Spin Mode

Talk out loud or clap your hands near your Pixie Belle to make it spin around. Experiment with different sounds and claps to see how it reacts.

Kiss Tech

Bring your Pixie Belle close to your cheek, and it will detect your presence and give you a kiss! The longer you hold it to your cheek, the longer the kiss will last.

Color-Changing Horn

The horn on your Pixie Belle lights up in different colors to indicate its mood. Observe the colors to understand how your Pixie Belle is feeling.

Magnetic Power Pods and Wearable Tails

Each Pixie Belle comes with a unique magnetic power pod that allows you to attach it to your clothing, keeping your companion close. The soft, fluffy tail is interchangeable with other Pixie Belles and can also be worn as a stylish accessory, such as a bracelet, keychain, or hair accessory.





Image: A child demonstrating how to wear the Pixie Belle on clothing using its magnetic power pod, highlighting its portability.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the surface of your Pixie Belle with a damp cloth. Do not submerge the toy in water.
- **Storage:** Store your Pixie Belle in a cool, dry place away from direct sunlight when not in use.
- **Tail Care:** The fluffy tail can be gently brushed to maintain its appearance.
- **Hair Entanglement:** Keep long hair away from the spinning mechanism of the Pixie Belle to prevent entanglement.

TROUBLESHOOTING

Problem	Solution
Pixie Belle is not responding.	Check battery installation. Ensure batteries are new and correctly inserted. Replace batteries if necessary.
Spin Mode is not working.	Ensure you are speaking clearly or clapping loudly enough near the toy. Check for any obstructions around the spinning base.
Kiss Tech is not activating.	Ensure the Pixie Belle's sensor (located near its mouth) is in direct contact with your cheek.

SPECIFICATIONS

- **Product Dimensions:** 2.76 x 2.95 x 5.51 inches
- **Item Weight:** 10.2 ounces
- **Model Number:** 3927
- **Recommended Age:** 5 - 15 years
- **Batteries:** 4 x LR44 (included)
- **Manufacturer:** WowWee

SAFETY INFORMATION

- Not suitable for children under 3 years due to small parts.
- Adult supervision is recommended during play.
- Do not attempt to disassemble or modify the toy.
- Dispose of batteries properly according to local regulations.

WARRANTY AND SUPPORT

For warranty information or technical support, please visit the official WowWee website or contact their customer service department. Keep your purchase receipt as proof of purchase.
You can find more information and contact details on the [WowWee Store Page](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question