

[Manuals.plus](#) /

› [Epson](#) /

› Epson EcoTank ET-3760 Wireless Color All-in-One Printer User Manual

Epson ET-3760

Epson EcoTank ET-3760 Wireless Color All-in-One Printer User Manual

Model: ET-3760 | Brand: Epson

PRODUCT OVERVIEW

The Epson EcoTank ET-3760 is a versatile wireless color all-in-one printer designed for efficiency and cost savings. It features cartridge-free printing with high-capacity, easily refillable ink tanks, significantly reducing the need for frequent ink replacements. This supertank printer offers fast printing, scanning, and copying capabilities, along with robust paper handling and modern connectivity options, making it ideal for home and small office environments.



Figure 1: Epson EcoTank ET-3760 Wireless Color All-in-One Printer with included ink bottles.

WHAT'S IN THE BOX

- EcoTank ET-3760 all-in-one printer
- User manual
- CD-ROM for product setup
- Power cord
- 1 bottle of 502 Black ink (127 mL)
- 1 bottle each of 502 Cyan, Magenta, Yellow ink (70 mL)

SETUP

Follow these steps to set up your Epson EcoTank ET-3760 printer. For detailed instructions, refer to the included user manual.

1. **Unpack the Printer:** Carefully remove the printer and all packing materials from the box. Ensure all protective tapes and films are removed from the printer's exterior and interior.
2. **Fill the Ink Tanks:** The EcoTank ET-3760 uses high-capacity ink tanks that are refilled using EcoFit ink bottles.

Uniquely keyed EcoFit™ auto-stop ink bottles



Figure 2: Illustration of filling ink tanks with EcoFit bottles. Each bottle is uniquely keyed to fit only the correct color tank, preventing accidental misfilling.

Open the ink tank unit cover. Uncap the ink bottle and insert it into the corresponding color tank. The bottles are designed to stop filling automatically when the tank is full. Once filled, remove the bottle and securely close the ink tank cap and unit cover.

3. **Load Paper:** Open the paper cassette and load plain paper. Adjust the paper guides to fit the paper size. The printer supports various paper sizes including Letter, Legal, A4, and more.
4. **Connect Power:** Plug the power cord into the printer and then into a power outlet.
5. **Initial Setup:** Turn on the printer. Follow the on-screen instructions on the 2.4" color display to complete the initial setup, including language selection and network connection (Wi-Fi or Ethernet).

OPERATING INSTRUCTIONS

The Epson EcoTank ET-3760 offers a range of functions for your printing, scanning, and copying needs.

Printing

You can print documents and photos from your computer, smartphone, or tablet. The printer supports automatic two-sided printing to save paper.

- **From a Computer:** Install the necessary drivers and software from the included CD-ROM or Epson's official website. Select the ET-3760 as your printer and adjust settings as needed before printing.
- **Wireless Printing:** Connect your device to the same Wi-Fi network as the printer. Use the Epson Smart Panel App for easy printing from mobile devices. Voice-activated printing is also supported.
- **Paper Handling:** The printer features a 150-sheet paper tray and a 30-sheet Automatic Document Feeder (ADF) for efficient multi-page printing and scanning.

EcoTank® ET-3760 All-in-One Cartridge-Free Supertank Printer



***SCROLL DOWN TO "FROM THE MANUFACTURER" TO LEARN MORE.**

Figure 3: Key features of the Epson EcoTank ET-3760, including the 2.4" display, wired/wireless networking, 30-sheet ADF, 150-sheet paper tray, and EcoFit bottles.

Scanning and Copying

The ET-3760 includes a high-resolution flatbed scanner and copier functions.

- **Scanning:** Place your document on the scanner glass or use the ADF for multiple pages. Select "Scan" from the printer's control panel and choose your desired scan destination (e.g., computer, cloud service).

- **Copying:** Place your document on the scanner glass or in the ADF. Select "Copy" from the printer's control panel. You can adjust settings such as number of copies, color/black & white, and paper size before initiating the copy.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Epson EcoTank ET-3760 printer.

- **Ink Refilling:** The EcoTank system is designed for easy and mess-free refilling. Monitor ink levels through the transparent tanks on the front of the printer. When a tank is low, simply open the cover and insert the corresponding EcoFit ink bottle. The unique keying of each bottle prevents misfilling.
- **Print Head Cleaning:** If print quality degrades (e.g., missing lines, faded colors), perform a print head nozzle check and cleaning. This can be done directly from the printer's control panel under the "Maintenance" menu. Regular use helps prevent ink from drying in the print heads.
- **Software Updates:** Periodically check for and install firmware updates for your printer to ensure optimal performance and access to new features.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Epson EcoTank ET-3760 printer.

- **Paper Jams:** If a paper jam occurs, the printer's display will show instructions on how to clear it. Always ensure paper is loaded correctly and the paper guides are adjusted to prevent jams. Avoid using creased or folded paper in the Automatic Document Feeder (ADF).
- **Print Quality Issues:** If prints appear faded, streaky, or have missing lines, perform a print head nozzle check and then a print head cleaning cycle from the printer's maintenance menu. If the issue persists, a power cleaning may be necessary.
- **Connectivity Problems:** Ensure the printer is connected to your network (Wi-Fi or Ethernet). Check your router and printer's network settings. For Wi-Fi, ensure the printer is within range of your router.
- **Ink Levels:** The transparent ink tanks allow you to visually monitor ink levels. Refill tanks before they run completely empty to avoid air entering the system, which can affect print quality.

For more comprehensive troubleshooting, please refer to the full user guide available as a PDF [Epson EcoTank ET-3760 User Guide \(PDF\)](#).

SPECIFICATIONS

Feature	Detail
Product Dimensions	13.7"D x 14.8"W x 9.1"H

Feature	Detail
Controller Type	Android
Maximum Media Size	8.5 x 14 inch
Print Media	Glossy photo paper, Plain Paper
Scanner Type	Sheetfed
Max Input Sheet Capacity	150
Max Copy Speed (Black & White)	15 ppm
Display Type	LCD
Compatible Devices	Smartphones
Sheet Size	3.5" x 5", 4" x 6", 5" x 7", 8" x 10", 8.5" x 11", 8.5" x 14", A4, A6, half letter, executive, user definable
Dual-sided printing	Yes (Automatic)
Hardware Interface	USB, Ethernet
Ink Color	Black, Cyan, Magenta, Yellow
Resolution	4800 x 1200
Additional Printer Functions	Copy, Scan, Fax
Control Method	Voice
Model Series	EcoTank
Specific Uses For Product	Business
Item Weight	4.2 ounces
Connectivity Technology	Wi-Fi, Ethernet
Printing Technology	Inkjet
Special Feature	Zero Cartridge Waste, Auto Document Feeder, Voice-Activation
Color	White
Printer Output	Color
Maximum Print Speed (Color)	8 ppm
Max Printspeed Monochrome	15 ppm

WARRANTY AND SUPPORT

The Epson EcoTank ET-3760 comes with a standard limited warranty. For extended coverage, product registration is required.

- **Standard Limited Warranty:** 12 months or 50,000 plain paper sheets (whichever happens first).
- **Extended Service Plan:** An additional 12-month extended service plan (total of 24 months or 50,000 plain paper sheets, whichever happens first) is available upon product registration and use of Epson genuine ink bottles.

EcoTank® ET-3760 All-in-One Cartridge-Free Supertank Printer



* 12 months of standard limited warranty or 50,000 plain paper sheets (whichever happens first). For an additional 12-month extended service plan (total of 24 months or 50,000 plain paper sheets, whichever happens first), register your product and use Epson® genuine ink bottles. See Limited Warranty for details.

Figure 4: The Epson EcoTank ET-3760 is eligible for up to 2 years of product protection with registration.

For further assistance, technical support, or to view the complete warranty details, please visit the official Epson support website or refer to the comprehensive user guide: [Epson EcoTank ET-3760 User Guide \(PDF\)](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question