

[Manuals.plus](#) /

› [FAMICOZY](#) /

› FAMICOZY Compact Digital Travel Alarm Clock User Manual

FAMICOZY 8541847887

FAMICOZY Compact Digital Travel Alarm Clock User Manual

Model: 8541847887

1. INTRODUCTION

Thank you for choosing the FAMICOZY Compact Digital Travel Alarm Clock. This lightweight and portable alarm clock is designed for convenience and reliability, whether you are at home or traveling. Its compact size and battery operation make it an ideal companion for ensuring you stay on schedule.



Figure 1: Front view of the FAMICOZY Compact Digital Travel Alarm Clock.

Key features include:

- **Compact and Lightweight Design:** Easily fits into luggage with a flip-out stand that doubles as a protective cover for the screen and buttons.
- **Battery Operated:** Requires 2 AAA batteries (not included) for low power consumption and portability.
- **Easy to Set:** Simple button operations for setting time and alarm without complex menus.
- **Clear Display:** Bold, easy-to-read digits on a clear screen.
- **Adjustable Alarm Volume:** High and low volume options, with a gradually increasing alarm sound.
- **Snooze and Backlight Function:** A large top button activates a 5-second backlight and provides a 5-minute snooze.

2. SETUP

2.1 Battery Installation

The clock requires 2 AAA batteries (not included). To install:

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

**hard plastic
quality construction**



Figure 2: The compact size of the clock, with the battery compartment visible on the back.

2.2 Initial Time Setting

Upon battery installation, the display will activate. To set the current time:

1. Press and hold the 'CLOCK' button until the numbers on the display begin to flash.
2. Use the 'HOUR' button to adjust the hour.
3. Use the 'MINUTE' button to adjust the minute.
4. Press the 'CLOCK' button again to confirm and exit time setting mode.

3. OPERATING INSTRUCTIONS

3.1 Setting the Alarm

To set your desired alarm time:

1. Press and hold the 'ALARM' button until the alarm time numbers flash.
2. Use the 'HOUR' button to set the alarm hour.
3. Use the 'MINUTE' button to set the alarm minute.
4. Press the 'ALARM' button again to confirm and exit alarm setting mode.



any of the four buttons can be stop-alarm button

Figure 3: Control buttons for setting time and alarm.

3.2 Alarm On/Off and Volume Adjustment

The clock features a physical switch for easy alarm activation and volume control:

- **Alarm On/Off:** Use the 'ALM ON/OFF' slider switch located on the side of the clock to enable or disable the alarm.
- **Volume Control:** Use the 'VOL HI/LO' slider switch, also on the side, to select between high and low alarm

volume. The alarm starts with a slow beep and gradually increases in speed and volume over 2 minutes.



Figure 4: Side switches for alarm activation and volume.

3.3 Snooze and Backlight Function

The large 'SNOOZE/LIGHT' button on top provides convenient functions:

- **Backlight:** Press the 'SNOOZE/LIGHT' button to illuminate the display for 5 seconds, allowing you to check the time in the dark.
- **Snooze:** When the alarm sounds, press the 'SNOOZE/LIGHT' button to activate the snooze function, which will silence the alarm for 5 minutes before it sounds again.
- **Stop Alarm:** To completely stop the alarm, press any of the four front buttons (CLOCK, ALARM, HOUR, MINUTE).

soft backlight stay for 5 seconds
each time the top button is pressed



Figure 5: Backlight in action, showing clear visibility in low light.

3.4 Product Demonstration Video

Your browser does not support the video tag.

Video 1: Official product demonstration of the FAMICOZY digital travel alarm clock, showcasing its features and functions.

4. MAINTENANCE

To ensure the longevity and optimal performance of your FAMICOZY Compact Digital Travel Alarm Clock:

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or immerse the clock in water.
- **Battery Replacement:** Replace batteries when the display dims or the alarm sound weakens. Always use fresh AAA batteries.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the clock in a cool, dry place. Ensure the flip-out stand is closed to protect the screen and buttons.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries.	Replace with new AAA batteries.
Alarm does not sound.	Alarm is turned off. Alarm time not set correctly. Batteries are low.	Ensure 'ALM ON/OFF' switch is in 'ON' position. Verify alarm time is set. Replace batteries.
Alarm sound is too quiet.	Volume set to low.	Adjust 'VOL HI/LO' switch to 'HI' position.
Buttons are unresponsive.	Batteries are low. Clock may be in a locked state (unlikely for this model).	Replace batteries. If issue persists, contact customer support.
Time is inaccurate.	Batteries are low.	Replace batteries. Reset the time.

6. SPECIFICATIONS

Feature	Detail
Brand	FAMICOZY
Model Number	8541847887
Color	Black
Display Type	Digital
Power Source	2 AAA Batteries (Not Included)
Product Dimensions	2.83"W x 3.42"H
Item Weight	2.24 ounces
Material	Sturdy Plastic
Special Features	Adjustable Volume, Non-Ticking, Silent, Nightlight, Simple Operation, Bold Digits
Indoor/Outdoor Usage	Indoor



Figure 6: Product dimensions for easy reference.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This FAMICOZY Compact Digital Travel Alarm Clock comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

7.2 Customer Support

For any questions, troubleshooting assistance, or warranty claims, please contact FAMICOZY customer support through the retailer where you purchased the product or visit the official FAMICOZY website for contact information.

© 2025 FAMICOZY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I activate the 1-year warranty on my FAMICOZY Compact Digital Travel Alarm Clock (Order #701-0218760-2937057)?

According to the FAMICOZY user manual, the 1-year limited warranty is automatically valid from the date of purchase and covers manufacturing defects and issues arising from normal use. There is no specific mention of...

[Read full answer](#)