

[Manuals.plus](#) /

› [FAMICOZY](#) /

› FAMICOZY Compact Digital Travel Alarm Clock User Manual

FAMICOZY B07NKL4FBW

FAMICOZY Compact Digital Travel Alarm Clock

Model: B07NKL4FBW

INTRODUCTION

Thank you for choosing the FAMICOZY Compact Digital Travel Alarm Clock. This device is designed for portability and ease of use, featuring a clear digital display, adjustable alarm volume, and a convenient backlight. This manual provides detailed instructions for setting up, operating, and maintaining your alarm clock to ensure optimal performance.

PRODUCT OVERVIEW

Familiarize yourself with the components of your FAMICOZY alarm clock.



any of the four buttons can be stop-alarm button

Figure 1: Front Panel Controls. The front of the clock features a large digital display and four circular buttons labeled CLOCK, ALARM, HOUR, and MINUTE. Any of these four buttons can also function as a stop-alarm button when the alarm is sounding.



Figure 2: Side Switches. The side of the clock features two slide switches: one for Alarm On/Off (ALM ON/OFF) and another for Alarm Volume (VOL HI/LO), allowing you to select between high and low alarm volume settings.

big snooze/light button



Figure 3: Top Button. The top of the clock features a prominent button labeled SNOOZE/LIGHT, used for activating the snooze function or illuminating the display backlight.



Figure 4: Compact Design and Dimensions. The clock features a foldable design for easy portability. When folded, it is compact, and when unfolded, it stands upright. Approximate dimensions are 8.70 cm (length) by 7.20 cm (width).

SETUP

Battery Installation

The FAMICOZY alarm clock requires 2 AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the clock.
2. Slide or lift the cover to open the compartment.
3. Insert 2 new AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

The clock display should now activate.

OPERATING INSTRUCTIONS

Setting the Time

1. Press and hold the **CLOCK** button until the hour digits begin to flash.
2. Press the **HOUR** button repeatedly to advance the hour. Observe the AM/PM indicator for correct 12-hour format.
3. Press the **MINUTE** button repeatedly to advance the minute.
4. Once the desired time is set, press the **CLOCK** button again to confirm and exit time setting mode.

Setting the Alarm

1. Press and hold the **ALARM** button until the alarm hour digits begin to flash. An alarm icon (bell symbol) may appear on the display.
2. Press the **HOUR** button repeatedly to set the alarm hour.
3. Press the **MINUTE** button repeatedly to set the alarm minute.

4. Once the desired alarm time is set, press the **ALARM** button again to confirm and exit alarm setting mode.
5. To activate the alarm, slide the **ALM ON/OFF** switch on the side of the clock to the **ON** position. The alarm icon will remain visible on the display.
6. To deactivate the alarm, slide the **ALM ON/OFF** switch to the **OFF** position. The alarm icon will disappear.

Adjusting Alarm Volume

The alarm clock offers two volume settings: High (HI) and Low (LO).

- Slide the **VOL HI/LO** switch on the side of the clock to your preferred volume setting.

Snooze and Backlight Function



Figure 5: Backlight in Use. The soft backlight illuminates the display for 5 seconds each time the top button is pressed, making it easy to read the time in low-light conditions.

- When the alarm sounds, press the large **SNOOZE/LIGHT** button on the top of the clock to activate the snooze function. The alarm will temporarily stop and sound again after approximately 5 minutes.

- To turn off the alarm completely, press any of the four front buttons (**CLOCK**, **ALARM**, **HOURL**, or **MINUTE**) or slide the **ALM ON/OFF** switch to **OFF**.
- To activate the backlight at any time, press the **SNOOZE/LIGHT** button. The backlight will illuminate the display for approximately 5 seconds.

MAINTENANCE

Cleaning

To clean your alarm clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or electronic components.

Battery Replacement

When the display dims or the alarm sound weakens, it is time to replace the batteries. Follow the battery installation steps outlined in the Setup section. Always use new AAA batteries and dispose of old batteries responsibly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are dead or incorrectly inserted.	Replace batteries with new AAA batteries, ensuring correct polarity.
Alarm does not sound.	Alarm is not set or ALM ON/OFF switch is in OFF position.	Ensure alarm time is set and ALM ON/OFF switch is in ON position. Check battery level.
Time or alarm cannot be set.	Buttons are not being held long enough or batteries are low.	Press and hold the CLOCK or ALARM button until digits flash. Replace batteries if necessary.
Backlight does not work.	Batteries are low or dead.	Replace batteries.

SPECIFICATIONS

- **Product Dimensions:** 2.83 x 0.79 x 3.43 inches (7.2 x 2.0 x 8.7 cm)
- **Item Weight:** 2.36 ounces (67 grams)
- **Power Source:** 2 x AAA batteries (not included)
- **Display Type:** Digital LCD
- **Alarm Features:** High/Low volume options, Snooze function
- **Backlight:** Soft backlight, illuminates for 5 seconds per press
- **Construction:** Hard plastic

WARRANTY INFORMATION

FAMICOZY products are manufactured to high-quality standards. This product is covered by a limited warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, refer to the product packaging or contact customer support.

CUSTOMER SUPPORT

If you have any questions, encounter issues, or require assistance with your FAMICOZY Compact Digital Travel Alarm Clock, please contact our customer support team. For the most up-to-date contact information, please refer to the FAMICOZY official website or the product packaging.

© 2023 FAMICOZY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

The correct day does not show on my Famicozy Digital Alarm Clock (Model FG50) even though the date and month are correct. How do I fix this?

Based on the manual for the Famicozy Compact Digital Alarm Clock, the day of the week is typically calculated automatically based on the Year, Month, and Date settings. If the day is incorrect while...

[Read full answer](#)