

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 2-Seat Porch Swing with Stand Instruction Manual

## Outsunny 84A-086

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

[Submit question](#)

# Outsunny 2-Seat Porch Swing with Stand Instruction Manual

Model: 84A-086

## 1. INTRODUCTION

---

Thank you for choosing the Outsunny 2-Seat Porch Swing with Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new porch swing. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

This product is designed to provide a comfortable and relaxing outdoor seating experience for two adults. Its natural wood design and sturdy construction make it a suitable addition to gardens, patios, poolside areas, and backyards.

## 2. SAFETY INFORMATION

---

- Always read and understand all instructions before assembly and use.

- Adult assembly is required.
- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- The maximum weight capacity for this swing is 660 lbs. Do not exceed this limit.
- Keep children and pets away from the assembly area.
- Periodically check all bolts and connections to ensure they remain tight and secure.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

### 3. PACKAGE CONTENTS

---

Your Outsunny 2-Seat Porch Swing with Stand will arrive in two separate boxes. Please ensure you have received both packages and all components before beginning assembly.

- Solid log A-frame components
- Wooden loveseat bench for two
- Metal hooks and hanging chains
- All necessary hardware (bolts, nuts, washers)
- Assembly instructions

## PACKAGE DETAILS

Arrive in **2** Boxes

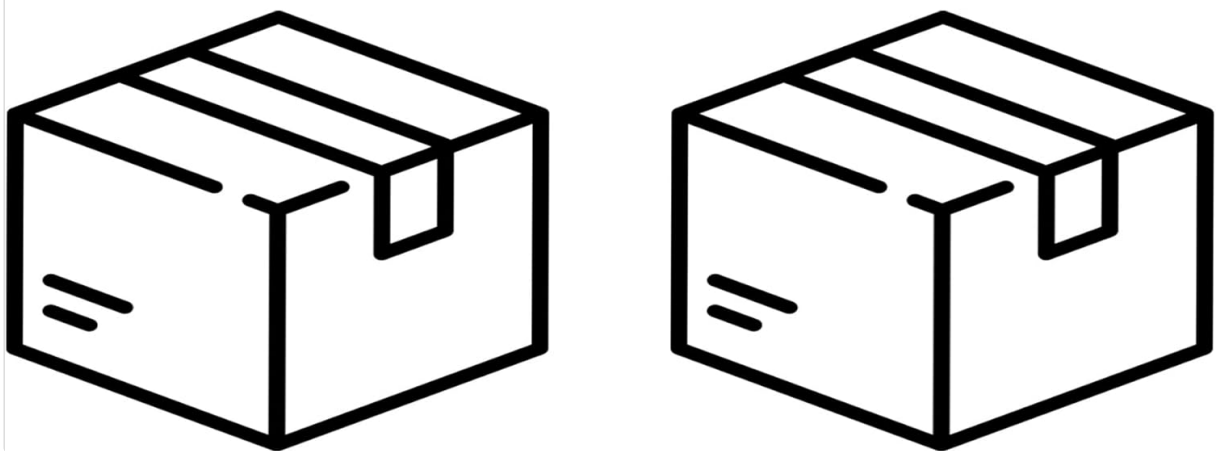


Figure 3.1: Product arrives in two separate boxes.

### 4. SETUP AND ASSEMBLY

---

Assembly of the Outsunny Porch Swing is straightforward, but having a helper is recommended for easier

installation. Please follow the included detailed assembly instructions step-by-step. Ensure all connections are secure before use.

### Key Assembly Points:

1. **Frame Construction:** Begin by assembling the A-frame structure. The robust A-frame provides stability for the swing.



Figure 4.1: The A-frame structure provides robust support.

2. **Swing Seat Assembly:** Assemble the wooden loveseat bench. Note the tilted design and wide slatted seat for comfort.



Figure 4.2: Detail of the sturdy attached armrest and wooden seat bench.

3. **Hanging the Swing:** Attach the metal hooks and chains to the assembled swing seat and then to the A-frame. Ensure the hooks are securely fastened.



Figure 4.3: The strong S-type hook ensures secure hanging.

Once assembled, verify that all connections are tight and the swing moves freely and safely.

## 5. OPERATING INSTRUCTIONS

---

The Outsunny Porch Swing is designed for gentle, relaxing motion. To use, simply sit on the loveseat bench and gently push off the ground with your feet to initiate a smooth swinging motion. The swing is suitable for two adults.

The tilted design and wide slatted seat are engineered for comfort, allowing for extended periods of relaxation outdoors.



Figure 5.1: The porch swing provides a comfortable outdoor seating area.

## 6. MAINTENANCE

---

To ensure the longevity and appearance of your Outsunny Porch Swing, regular maintenance is recommended:

- **Cleaning:** Wipe down the wooden surfaces with a damp cloth to remove dirt and debris. Avoid harsh chemicals that may damage the wood finish.
- **Wood Protection:** The natural fir logs are sealed with varnish for outdoor use. However, exposure to harsh weather conditions over time may require re-application of a wood sealant or clear coat to maintain its protective properties and appearance.



## NATURAL WOOD CONSTRUCTION

Our painted wood resists water and wear to endure the outdoors

Figure 6.1: Natural wood construction with a protective finish.

- **Hardware Check:** Periodically inspect all bolts, screws, and hanging chains for tightness. Tighten any loose fasteners to prevent wobbling or instability.
- **Storage:** During prolonged periods of non-use or extreme weather, consider covering the swing or storing it in a sheltered area to protect it from the elements.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Outsunny Porch Swing, please refer to the following common solutions:

- **Missing or Damaged Parts:** If you find any parts missing or damaged upon delivery, or if the hardware bag is open, please contact customer support immediately. Do not attempt to assemble with incomplete or damaged parts.
- **Difficulty with Assembly:** Ensure you are following the assembly instructions precisely. Sometimes, a fresh look or a second pair of hands can help identify misaligned parts. Verify that you have all components from both boxes.
- **Swing Feels Unstable:** Double-check that all bolts and connections are fully tightened. Ensure the swing is placed on a flat, level surface.
- **Wood Deterioration:** Over time, natural wood exposed to the elements may show signs of wear. As mentioned in the Maintenance section, consider applying an additional coat of wood sealant or polyurethane to protect the wood.

For issues not covered here, or if problems persist, please contact Outsunny customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Number	84A-086
Color	Natural Wood
Product Dimensions (L x W x H)	78" L x 53.25" W x 67" H
Frame Material	Wood (Fir logs)
Finish Type	Lacquered
Seat Depth	18 inches
Weight Capacity	660 lbs
Item Weight	44 pounds
Assembly Required	Yes
UPC	842525132664

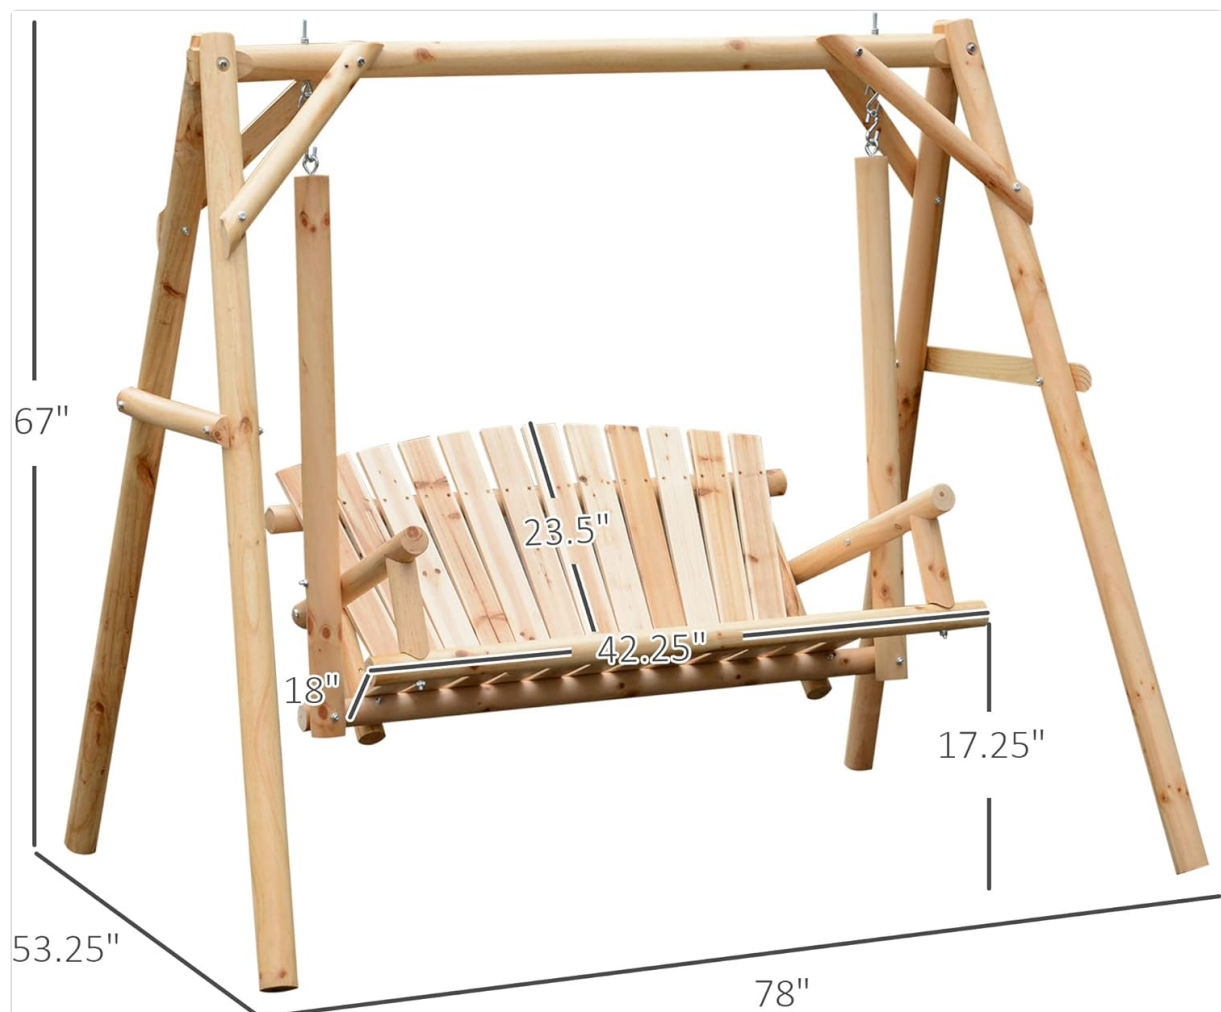


Figure 8.1: Product Dimensions Overview.

## 9. WARRANTY AND SUPPORT

---

For warranty information or customer support, please refer to the documentation provided with your purchase or visit the official Outsunny website. You may also contact the manufacturer, Aosom LLC, for assistance.

For general inquiries or to report issues, please utilize the customer support channels provided by your retailer or the manufacturer.