

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VINABTY](#) /

> [VINABTY BN59-01301A Replacement Remote Control User Manual for Samsung Smart TVs](#)

VINABTY BN59-01301A

VINABTY BN59-01301A Replacement Remote Control User Manual

For Samsung Smart TV Models NU7100, NU6900, NU7300, N5300 Series

1. INTRODUCTION

This manual provides essential information for the setup and operation of your VINABTY BN59-01301A replacement remote control. This remote is designed to function seamlessly with various Samsung Smart TV models, offering a direct replacement experience without the need for complex programming.

2. PRODUCT OVERVIEW

The VINABTY BN59-01301A remote control features a standard layout for intuitive navigation and control of your Samsung Smart TV. It includes dedicated buttons for power, volume, channel selection, source input, and smart TV functions.





Figure 1: Front view of the VINABTY BN59-01301A remote control, showing all buttons including numerical keypad, volume, channel, power, source, and smart TV navigation.



Figure 2: Side and back view of the VINABTY BN59-01301A remote control, illustrating its ergonomic design and the battery compartment.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the release tab (if present) to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators

inside the compartment.

4. Close the battery compartment by sliding the cover back into place until it clicks securely.

No programming is required. The remote is ready for use immediately after battery installation.

4. OPERATING INSTRUCTIONS

The remote control provides full functionality for your compatible Samsung Smart TV. Below are common functions:

- **Power Button ():** Turns the TV on or off.
- **Source Button:** Cycles through available input sources (HDMI, AV, TV, etc.).
- **Number Pad (0-9):** Directly enter channel numbers.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Home Button ():** Accesses the Smart Hub or main menu of your Samsung TV.
- **Directional Pad (Up, Down, Left, Right) and Enter Button:** Navigates menus and selects options.
- **Return Button:** Goes back to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Settings Button:** Opens the TV settings menu.
- **Guide Button:** Displays the electronic program guide.
- **Info Button:** Shows information about the current program or content.
- **Sleep Button:** Sets a sleep timer for the TV.

5. COMPATIBILITY

This replacement remote control is compatible with the following Samsung Smart TV series:

- **N5300 Series:** UN32N5300, UN32M4500, UN43N5300, UN32N5300AFXZA, UN43N5300AFXZA
- **NU7100 Series:** UN40NU7100, UN43NU7100, UN49NU7100, UN50NU7100, UN55NU7100, UN65NU7100, UN75NU7100, UN75NU7100FXZA, UE75NU7100KXXU, UE75NU7170UXZG, UN40NU7100FXZA, UE40NU7120KXXU, UE40NU7190UXZG, UN43NU7100FXZA, UE43NU7120KXXU, UE43NU7190UXZG, UE49NU7100KXXU, UE49NU7170UXZG, UN50NU7100FXZA, UN55NU7100FXZA, UE55NU7100KXXU, UE55NU7170UXZG, UN65NU7100FXZA, UE65NU7100KXXU, UE65NU7170UXZG, UN58NU7100FXZA
- **NU6900 Series:** UN43NU6900, UN50NU6900, UN55NU6900, UN65NU6900, UN75NU6900, UN55NU6900FXZA, UN65NU7100F, UN65NU7100FXZA, UN65NU7300FXZA, UN50NU6900BXZA, UN55NU6900BXZA, UN43NU6900FXZA, UN65NU6900FXZA, UN75NU6900FXZA
- **NU7300 Series:** UE49NU7300, UN55NU7300, UN65NU7300, UE49NU7300KXXU, UE55NU7300KXXU, UE65NU7300KXXU, UN65NU7300FXZA, UN55NU7300FXZA

6. SPECIFICATIONS

| Feature | Detail |
|--------------------|--------------------------|
| Model Number | BN59-01301A (BN5901301A) |
| Product Dimensions | 8 x 2 x 0.5 inches |

| | |
|-------------------------|--------------------------------|
| Item Weight | 3 ounces |
| Batteries Required | 2 AAA batteries (not included) |
| Connectivity Technology | Infrared (IR) |
| Special Feature | Ergonomic design |

7. TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote and the TV's IR receiver.
- Ensure the remote is pointed directly at the TV.

- **Specific buttons not working:**

- Clean the remote control buttons and surface with a soft, dry cloth to remove any dirt or residue.
- If only certain buttons are unresponsive, it might indicate a hardware issue.

- **Interference:**

- Bright lights or other electronic devices can sometimes interfere with the IR signal. Try operating the remote in a different environment.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact VINABTY customer service directly. Keep your purchase receipt for any warranty claims.

