

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Elk Home](#) /

› [Elk Home Emode 87110/LED Outdoor Sconce Instruction Manual](#)

Elk Home 87110/LED

Elk Home Emode 87110/LED Outdoor Sconce Instruction Manual

Model: 87110/LED

IMPORTANT SAFETY INFORMATION

Read all instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or other hazards that could cause injury or property damage.

- **WARNING:** Risk of electric shock. Disconnect power at the circuit breaker or fuse box before installation or servicing.
- All wiring connections must be in accordance with local and national electrical codes (NEC). Consult a qualified electrician if you are unsure about wiring procedures.
- This fixture is designed for outdoor use and is water resistant. Ensure all connections are properly sealed to prevent water intrusion.
- Do not install this fixture near flammable materials or in areas with explosive atmospheres.
- **Proposition 65 Warning:** This product may expose you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- LED Light Fixture (Sconce)
- Mounting Backplate
- Frame
- Seeded Crystal Glass Element
- Hardware Pack (screws, wire nuts, etc.)



Image: The Elk Home Emode 87110/LED outdoor sconce, featuring a matte black finish and a clear seeded crystal glass element.

INSTALLATION INSTRUCTIONS

Tools Required (Not Included):

- Phillips head screwdriver
- Flathead screwdriver
- Wire strippers
- Electrical tape
- Safety glasses

Pre-Installation:

1. Turn off electrical power at the main fuse box or circuit breaker.
2. Carefully unpack the fixture and check for any damage.
3. Ensure all parts listed in the 'Package Contents' section are present.

Mounting the Fixture:

1. Attach the mounting backplate to the junction box using the provided screws. Ensure the backplate is securely fastened to the wall surface.
2. Connect the fixture's ground wire (usually bare copper or green) to the house ground wire using a wire nut. If your junction box has a ground screw, wrap the fixture's ground wire around it.
3. Connect the fixture's neutral wire (usually white) to the house neutral wire (white) using a wire nut.
4. Connect the fixture's hot wire (usually black) to the house hot wire (black) using a wire nut.
5. Carefully tuck all wires into the junction box.
6. Align the fixture body with the mounting backplate and secure it with the provided screws.
7. Install the seeded crystal glass element into the fixture frame according to the specific design.





Image: Side view of the Elk Home Emode outdoor sconce, illustrating its profile and the seeded crystal detail.

OPERATING INSTRUCTIONS

Once the fixture is securely installed and wired, restore power at the circuit breaker.

- The Elk Home Emode 87110/LED Sconce is designed to be controlled via a standard wall switch or a compatible remote control system (remote control not included unless specified separately).
- Flip the wall switch to the 'ON' position to illuminate the fixture.
- Flip the wall switch to the 'OFF' position to turn off the fixture.
- If using a remote control system, refer to the remote control's specific instructions for pairing and operation.



Image: A close-up view of the Elk Home Emode sconce with its integrated LED light illuminated, highlighting the seeded crystal effect.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your outdoor sconce.

- **Cleaning:** To clean the fixture, ensure power is turned off at the circuit breaker. Use a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or crystal.
- **LED Light Source:** This fixture uses an integrated LED light source. There are no replaceable bulbs. If the LED light source fails, the entire fixture may need to be replaced.
- **Inspection:** Periodically inspect the fixture for any signs of wear, damage, or loose connections. Address any issues promptly.

TROUBLESHOOTING

If your Elk Home Emode outdoor sconce is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture.	Check the circuit breaker or fuse. Ensure the wall switch is in the 'ON' position.
Light flickers or is dim.	Loose wiring connection.	Turn off power at the circuit breaker. Check all wire connections for tightness.
Fixture is damaged.	Physical damage during installation or use.	If the fixture is physically damaged, it may need to be replaced. Do not attempt to repair electrical components unless qualified.

If the problem persists after attempting these solutions, consult a qualified electrician or contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	87110/LED
Brand	Elk Home
Dimensions (L x W x H)	2.5" x 4.75" x 14"
Item Weight	4.25 Pounds
Color	Matte Black
Material	Aluminum, Glass (Seeded Crystal)
Light Source Type	Integrated LED

Feature	Detail
Wattage	11 watts
Brightness	460 Lumens
Color Temperature	3000 Kelvin
CRI	80
Voltage	120 Volts
Power Source	Hardwired
Installation Type	Semi Flush Mount
Indoor/Outdoor Usage	Outdoor
Water Resistance Level	Water Resistant
Certifications	UL Listed

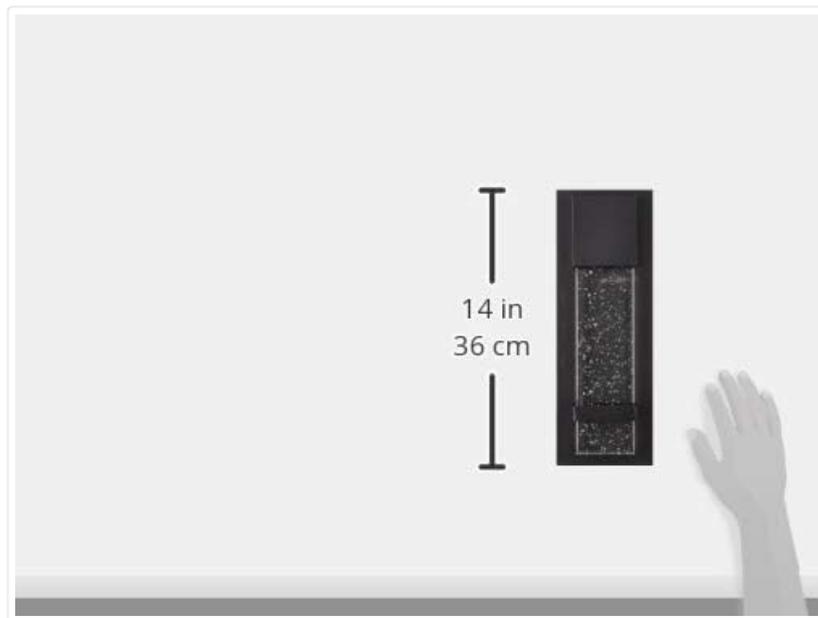


Image: A diagram illustrating the 14-inch (36 cm) height of the Elk Home Emode outdoor sconce.

WARRANTY AND SUPPORT

This Elk Home Emode 87110/LED Outdoor Sconce is covered by a **1-year limited manufacturer's warranty** from the date of purchase.

This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications.

For warranty claims or technical support, please contact Elk Home customer service. Keep your proof of purchase for warranty validation.

Customer Support: For assistance, please visit the official Elk Home website or refer to your purchase documentation for contact information.

