

Anderic RR409UD

Anderic RR409UD Universal TV Remote Control User Manual

Model: RR409UD

1. PRODUCT OVERVIEW

The Anderic RR409UD is a direct replacement remote control designed for various Magnavox and Sanyo television models, including popular Smart TV variants. This remote is pre-programmed for immediate use with supported Magnavox and Philips models, requiring no additional setup. It provides essential functions such as MENU, INPUT, and standard navigation controls. This remote is specifically for televisions and does not operate other device types.





Image 1.1: Front view of the Anderic RR409UD remote control, displaying all buttons and the Anderic logo. This image illustrates the layout and design of the remote.





Image 1.2: Angled view of the Anderic RR409UD remote control, showcasing its ergonomic shape and button placement from a side perspective.

2. SETUP

2.1 Battery Installation

The Anderic RR409UD remote control requires two AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



NOTICE

1. Do not use old battery with new one.
2. Do not use batteries other than the type specified.
3. Be sure the batteries are inserted properly.



For support:
www.Anderic.com
1-855-573-6683

Made in China





Image 2.1: Back view of the Anderic RR409UD remote control, illustrating the location of the battery compartment and regulatory markings.

2.2 Initial Use

The Anderic RR409UD remote is pre-programmed for compatible Magnavox and Philips TV models. Once batteries are installed, it is ready for immediate use. No additional programming or code entry is required. Simply point the remote at your television and begin operating it.

3. OPERATING INSTRUCTIONS

This section outlines the primary functions of the buttons on your Anderic RR409UD remote control.

- **Power Button (U)**: Turns the television on or off.
- **Source Button**: Cycles through available input sources (e.g., HDMI 1, HDMI 2, AV).
- **Number Pad (0-9)**: Directly enters channel numbers.
- **VOL +/-**: Adjusts the television's volume level.
- **CH +/-**: Changes the television channel up or down.
- **Mute Button (X)**: Mutes or unmutes the television audio.
- **MENU Button**: Accesses the television's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK)**: Used to navigate menus and confirm selections.
- **BACK Button**: Returns to the previous menu or screen.
- **App Buttons (e.g., Netflix, YouTube, Vudu)**: Provides direct access to specified streaming applications.
- **INFO Button**: Displays information about the current program or input.
- **SLEEP Button**: Sets a timer for the television to turn off automatically.
- **P.SIZE (Picture Size)**: Adjusts the aspect ratio or picture size.

For specific functions not listed, refer to your television's original user manual, as button functionality can vary slightly between TV models.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed and not depleted. Replace if necessary.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Point the remote directly at the TV.
- **Limited range:**
 - Ensure fresh batteries are used.
 - Verify there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the infrared signal.
- **Specific buttons not working:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris that might be causing sticking.
 - If only certain buttons are unresponsive, the remote may be damaged. Consider contacting support.
- **Remote does not control other devices:**
 - The Anderic RR409UD is designed exclusively for televisions and is not a universal remote for other devices like soundbars, DVD players, or cable boxes.

6. SPECIFICATIONS

Product Dimensions	8.5 x 2 x 1 inches
Item Weight	3.2 ounces
Batteries Required	2 AAA batteries
Compatible Devices	Television (Magnavox, Sanyo, Philips)
Connectivity Technology	Infrared

7. SUPPORT & WARRANTY

7.1 Customer Support


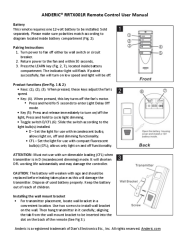

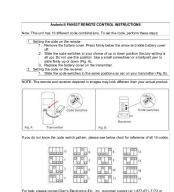
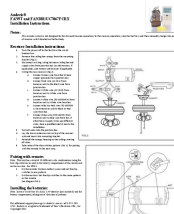

For further assistance, technical support, or inquiries regarding your Anderic RR409UD remote control, please contact Anderic directly:

- **Website:** www.anderic.com
- **Phone:** 1-855-573-6683

7.2 Warranty Information

Anderic products are manufactured by Dan's Electronics Etc., Inc. For detailed warranty information, please refer to the official Anderic website or contact their customer support. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.



	<p>Anderic RRU401.5 Universal Remote Control Operating Manual</p> <p>Comprehensive guide to programming and using the Anderic RRU401.5 universal remote control, covering setup, features like macros and learning, and extensive code lists for various devices.</p>
	<p>ANDERIC® RRTX001R Remote Control User Manual</p> <p>User manual for the ANDERIC® RRTX001R Remote Control, detailing battery installation, pairing instructions, product functions, and wall mount bracket installation.</p>
	<p>Anderic RRUR01 Universal Remote Control Programming Manual</p> <p>This manual provides detailed instructions for programming and operating the Anderic RRUR01 universal remote control. It covers code input, auto search, one-button search methods, device lock, punch-through features, learning functions, backlight adjustments, and includes a comprehensive code list for various brands and device types.</p>
	<p>Anderic FAN53T Remote Control Instructions and Code Settings</p> <p>Comprehensive instructions for setting up and using the Anderic FAN53T remote control, including detailed steps for code configuration and a reference chart for all 16 code combinations.</p>
	<p>Anderic FAN9T and FAN28R/UC7067FCRX Installation Instructions</p> <p>Detailed installation guide for the Anderic FAN9T and FAN28R/UC7067FCRX ceiling fan remote control system, including receiver wiring, remote pairing, and battery installation.</p>
	<p>Anderic RRU401.3 Universal Remote Control Manual</p> <p>Comprehensive guide to programming and using the Anderic RRU401.3 universal remote control, including code input, auto-search, and advanced features like macros and punch-through.</p>