

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Whirlpool](#) /

› [Whirlpool MWP 103 B Countertop Grill Microwave User Manual](#)

Whirlpool MWP 103 B

Whirlpool MWP 103 B Countertop Grill Microwave User Manual

Model: MWP 103 B

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe and efficient operation of your Whirlpool MWP 103 B Countertop Grill Microwave. Please read it thoroughly before using the appliance and retain it for future reference.

Important Safety Instructions

- Always ensure the microwave is placed on a stable, level surface.
- Do not operate the microwave if the door is damaged, or if the seals are worn.
- Never heat sealed containers, baby bottles with narrow necks, or whole eggs in the microwave, as they may explode.
- Use only microwave-safe cookware. Metal containers are not suitable for microwave cooking, but the provided grill rack is designed for grill function.
- Supervise children when they are near the appliance.
- Do not attempt to service or repair the microwave yourself. Contact qualified service personnel.
- Ensure adequate ventilation around the appliance.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Whirlpool MWP 103 B microwave.



Figure 2.1: Front view of the Whirlpool MWP 103 B microwave, showing the door, control panel with two rotary knobs, and the Whirlpool logo.

Main Components:

- **Control Panel:** Features two rotary knobs for power/function selection and time setting.
- **Door:** Equipped with a handle for opening and closing. Ensure it is securely closed before operation.
- **Turntable:** A glass plate that rotates during operation to ensure even cooking.
- **Turntable Support:** A ring with rollers that supports the turntable.
- **Grill Rack:** A metal rack provided for use during the grill function.
- **Oven Window:** Allows viewing of food during cooking.



Figure 2.2: Interior view of the Whirlpool MWP 103 B microwave, showing a dish on the glass turntable, ready for cooking.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials from the microwave oven and its accessories. Check for any damage during transit. If any damage is observed, do not operate the appliance and contact your retailer.

3.2 Placement

- Place the microwave on a flat, stable, heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of space at the back and sides, and 30 cm (12 inches) above the oven for proper ventilation. Do not block any ventilation openings.
- Keep the microwave away from heat sources, such as ovens or radiators, and strong magnetic fields.
- Do not install the microwave in a damp environment or near water.

3.3 Turntable Assembly

1. Place the turntable support ring in the center of the microwave cavity.
2. Position the glass turntable securely on top of the support ring, ensuring it sits correctly in the center hub.

3.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance (230 Volts).

4. OPERATING INSTRUCTIONS

Your Whirlpool MWP 103 B microwave features two rotary knobs for easy control.

4.1 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Turn the upper knob (Power/Function Selector) to select the desired microwave power level (e.g., 250W, 400W, 500W, MAX 700W).
4. Turn the lower knob (Timer) to set the cooking time. The microwave will start automatically.
5. When the set time expires, the microwave will beep and stop. Carefully remove the food.

4.2 Grill Function

The grill function is ideal for browning and crisping food.

1. Place food on the provided grill rack, which should be placed directly on the glass turntable.
2. Close the microwave door securely.
3. Turn the upper knob (Power/Function Selector) to the "Grill" setting.
4. Turn the lower knob (Timer) to set the grilling time.
5. Monitor food closely to prevent over-browning.

4.3 Combination Modes (Combi 1, Combi 2)

Your microwave offers combination modes that combine microwave power with grilling for faster cooking and browning results.

- **Combi 1:** Combines microwave power with grill. Suitable for poultry, fish, and gratin dishes.
 - **Combi 2:** Combines microwave power with grill. Suitable for thicker cuts of meat or dishes requiring more thorough cooking and browning.
1. Place food on the grill rack (if appropriate for the dish) on the glass turntable.
 2. Close the microwave door securely.
 3. Turn the upper knob (Power/Function Selector) to "Combi 1" or "Combi 2".
 4. Turn the lower knob (Timer) to set the cooking time.

Note: Always refer to specific recipe guidelines for optimal power levels and cooking times.

5. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and efficient operation of your microwave.

5.1 Cleaning the Interior

- Always unplug the microwave before cleaning.
- Wipe the interior cavity with a damp cloth after each use to remove food splatters.
- For stubborn stains, place a bowl of water with lemon juice inside and microwave on high for 2-3 minutes. The steam will loosen the stains, making them easier to wipe away.
- Clean the turntable and turntable support ring with warm, soapy water. They are typically dishwasher safe.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid abrasive cleaners, scouring pads, or chemical solvents, as these can damage the finish.
- Clean the door seals and adjacent parts regularly to ensure proper sealing.

5.3 Grill Rack Care

Clean the grill rack with warm, soapy water. Ensure it is completely dry before storing or reusing.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Microwave does not start.	Power cord not plugged in; door not closed properly; fuse blown.	Ensure power cord is securely plugged in. Close the door firmly. Check household fuse/circuit breaker.
Food is not heating.	Incorrect power level or cooking time set; microwave-safe cookware not used.	Adjust power level and cooking time. Use appropriate microwave-safe dishes.
Turntable is not rotating.	Turntable not correctly placed; food too large or heavy.	Ensure turntable and support ring are correctly positioned. Reduce food size or weight.
Unusual noise during operation.	Turntable or support ring not correctly seated; foreign object in cavity.	Re-seat turntable and support ring. Check for and remove any foreign objects.

If the problem persists after attempting these solutions, please contact Whirlpool customer support.

7. TECHNICAL SPECIFICATIONS

Brand	Whirlpool
Model Number	MWP 103 B
Type	Countertop Grill Microwave
Capacity	20 Litres
Microwave Power	700 Watts
Voltage	230 Volts
Material	Glass (interior, turntable)
Color	Black
Included Components	High grill, Turntable
Controller Type	Knob

8. WARRANTY AND CUSTOMER SUPPORT

Your Whirlpool MWP 103 B microwave oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool

Customer Service. Contact details can typically be found on the official Whirlpool website or in your warranty documentation.

When contacting support, please have your model number (MWP 103 B) and serial number ready.