

[Manuals.plus](#) /

› [Mugast](#) /

› MUGAST MP4 Player User Manual - Model Mugastg9d1bna5g8-02

Mugast Mugastg9d1bna5g8-02

MUGAST MP4 Player User Manual

Model: Mugastg9d1bna5g8-02

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your MUGAST Ultra-Thin Portable MP4 Player. Please read this manual thoroughly before using the device to ensure proper function and longevity.



Image: The MUGAST MP4 Player in white, showing a music playback screen with a circular progress bar and artist information. The device features a matte finish and a round control button layout.

SETUP

1. Package Contents

Verify that all items are present in the package:

- 1 x MUGAST MP4 Player
- 1 x Charging Cable (USB)
- 1 x Earphones
- 1 x User Manual (this document)



Image: The MUGAST MP4 Player laid out with its included accessories: a white USB charging cable and white earphones.

2. Charging the Device

Before first use, fully charge the MP4 player. Connect the provided USB charging cable to the device's USB port and the other end to a computer's USB port or a compatible USB wall adapter (not included).

- A full charge typically takes approximately 2-3 hours.
- The battery indicator on the screen will show charging status.
- The device has a built-in 180mAh polymer lithium battery, providing 6-8 hours of continuous playback on a full charge.

Last Longer

Built-in 180mAh polymer lithium battery for 6-8 hours of continuous playback



Image: The MUGAST MP4 Player screen displaying a battery icon with a charging animation, indicating the device is being charged.

3. Inserting a TF Card

The MP4 player does not have internal memory. It requires a TF (MicroSD) card for storing media files. The device supports TF cards up to 32GB.

1. Locate the TF card slot on the side of the player.
2. Insert the TF card gently into the slot until it clicks into place.
3. To remove, push the card in slightly until it springs out.



Image: A visual representation of the MUGAST MP4 Player alongside a TF card, illustrating the card's insertion into the device's dedicated slot.

4. Connecting to a Computer

To transfer music, video, or e-book files to your TF card:

1. Ensure a TF card is inserted into the player.
2. Connect the MP4 player to your computer using the USB cable.
3. The player will appear as a removable disk drive on your computer.
4. Drag and drop your desired files into the appropriate folders on the TF card.
5. Safely eject the device from your computer before disconnecting the USB cable.



Plug & Play

Comes with a card slot, support MP3 music format and AMV video format

Image: The MUGAST MP4 Player shown next to a laptop, with earphones connected, illustrating the "Plug & Play" functionality for file transfer.

OPERATING INSTRUCTIONS

1. Device Controls

The player features a round control button layout and two additional buttons:

- **Center Button:** Play/Pause, Confirm selection.
- **Left/Right Buttons:** Previous/Next track, Navigate menu.
- **Up/Down Buttons:** Volume Up/Down, Navigate menu.
- **'M' Button:** Menu/Mode selection, Return to main menu.
- **Return Button (Curved Arrow):** Back, Exit current function.

2. Power On/Off

- **Power On:** Press and hold the Play/Pause button for a few seconds.

- **Power Off:** Press and hold the Play/Pause button for a few seconds until the screen turns off.

3. Main Menu Navigation

From the main screen, use the Left/Right/Up/Down buttons to navigate between icons. Press the Center button to select an option.



Image: The main menu screen of the MUGAST MP4 Player, displaying icons for Music, Video, Radio, PIC (Pictures), REC (Recording), EBook, Voice, Tools, and Set (Settings).

Multiple Play Modes

Support music, radio, recording, video, e-book, built-in stopwatch function



Image: An illustration highlighting the various playback modes supported by the MUGAST MP4 Player, including music, radio, recording, video, e-book, and stopwatch functions.

4. Functions Overview

- **Music:** Play MP3 audio files. Navigate through folders and select tracks.
- **Video:** Play AMV video files. Ensure videos are in the correct format for playback.
- **Radio:** Access the built-in FM radio. Scan for stations and save favorites.
- **REC (Recording):** Use the integrated microphone to record audio.
- **EBook:** Read text files.
- **Tools:** May include functions like Stopwatch.
- **Set (Settings):** Adjust device settings such as language, display brightness, and time. The default language is English, with 13 built-in languages available.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Software Updates:** Information regarding software updates is not available.

TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the battery is charged. Connect to a power source and try again.
No sound from earphones.	Check if earphones are properly plugged in. Adjust volume settings. Test with different earphones.
Cannot transfer files to the device.	Ensure a TF card is inserted. Verify the USB cable connection. Try a different USB port or cable. Ensure the device is recognized as a removable disk.
Video files do not play.	Ensure video files are in AMV format. Convert files if necessary.
Screen is unresponsive or frozen.	Press and hold the power button to force a restart. If the issue persists, allow the battery to fully discharge and then recharge.

SPECIFICATIONS

Feature	Detail
Brand	Mugast
Model Number	Mugastg9d1bna5g8-02
Screen Size	1.8 inches
Screen Type	Color screen (LCD)
Memory Card Type	TF Card (MicroSD)
Max Memory Support	32GB
Interface	USB 2.0
Audio Format Support	MP3
Video Format Support	AMV
Battery	Built-in 180mAh Polymer Lithium Battery
Playback Time	6-8 hours (continuous)

Feature	Detail
Special Features	Ultra-thin design, matte body, multiple playback modes (music, radio, recording, video, e-book, stopwatch)
Dimensions	Approx. 7 x 5 x 0.8 cm (2.8 x 2 x 0.3 inches)
Weight	Approx. 73g
Default Language	English (13 languages supported)
Country of Origin	China

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided within this manual. For warranty details, technical support, or inquiries regarding spare parts, please contact the retailer or the manufacturer directly.
Information regarding software updates and spare parts availability is not available.

© 2023 MUGAST. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

