

[Manuals.plus](#) /

> [Siemens](#) /

> Siemens EQ.6 plus s700 TE657M03DE Automatic Coffee Machine Instruction Manual

Siemens TE657M03DE

Siemens EQ.6 plus s700 Automatic Coffee Machine

Model: TE657M03DE - Instruction Manual

1. INTRODUCTION

Welcome to the world of premium coffee enjoyment with your new Siemens EQ.6 plus s700 automatic coffee machine. This manual provides essential information for the safe and efficient operation, setup, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

2. IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions to prevent personal injury or damage to the appliance:

- This appliance is intended for domestic use only.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the rating plate matches your mains voltage.
- Keep children away from the appliance, especially when it is in operation or cooling down. Hot surfaces and steam can cause burns.
- Never operate the appliance with a damaged cord or plug. Contact customer service for repairs.
- Only use original spare parts and accessories.
- Unplug the appliance before cleaning and when not in use for extended periods.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Siemens EQ.6 plus s700 coffee machine.



Image 3.1: Front view of the Siemens EQ.6 plus s700 coffee machine with external milk container.

Key Components:

- **coffeeSelect Display:** Intuitive color LCD touchscreen for beverage selection and machine settings.
- **Bean Container:** Located at the top, for whole coffee beans.
- **Water Tank:** Removable, located on the side, for fresh water.
- **Milk Frother/System:** Integrated or external for preparing milk-based beverages.
- **Coffee Spout:** Height-adjustable for various cup sizes.
- **Drip Tray and Coffee Grounds Container:** Collects excess water and used coffee grounds.
- **Removable Brewing Unit:** Accessible from the side for cleaning.

4. SETUP AND INITIAL USE

4.1 Unpacking and Placement

1. Carefully remove all packaging materials.
2. Place the machine on a stable, level, and water-resistant surface. Ensure adequate ventilation around the appliance.
3. Connect the power plug to a grounded wall socket.

4.2 First Use Preparation

1. **Fill Water Tank:** Remove the water tank, rinse it, and fill it with fresh, cold water up to the 'max' mark. Reinsert it securely.
2. **Fill Bean Container:** Open the lid of the bean container and fill it with fresh coffee beans. Close the lid.
3. **Initial Rinse:** Switch on the machine. The display will guide you through an initial rinsing process. Place a cup under the coffee spout.
4. **Install Water Filter (Optional):** If using a Brita water filter, follow the filter's instructions for installation and activation in the machine's settings menu.

5. OPERATING THE COFFEE MACHINE

Your EQ.6 plus s700 features an intuitive coffeeSelect display for easy operation.



Image 5.1: Close-up of the coffeeSelect display showing beverage options.

5.1 Preparing Coffee and Espresso

1. Place one or two cups under the coffee spout.
2. On the coffeeSelect display, touch the icon for your desired beverage (e.g., Espresso, Coffee).
3. You can adjust coffee strength and cup volume via the display before brewing.
4. Press the start button to begin brewing.

5.2 Preparing Milk Beverages (e.g., Cappuccino, Latte Macchiato)

1. Ensure the milk system is correctly connected and filled with fresh milk.
2. Place a cup under the coffee spout.
3. Select your desired milk beverage from the coffeeSelect display.
4. Adjust settings if desired.
5. Press the start button. The machine will automatically prepare the milk foam and coffee.

5.3 OneTouch DoubleCup Function

This feature allows you to prepare two cups of any coffee or milk specialty simultaneously.

- Place two cups under the coffee spout.

- Select your desired beverage. The machine will automatically detect the double cup setting or you can select it on the display.
- Press the start button.

5.4 Storing Favorite Beverages

The machine can store up to 4 of your personalized beverage settings.

- Prepare a beverage with your preferred settings (strength, volume, milk ratio).
- Follow the on-screen instructions to save it as a favorite.
- Access your saved favorites directly from the display for quick preparation.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your coffee machine.

6.1 Daily Cleaning

- **Drip Tray and Coffee Grounds Container:** Empty and rinse daily.
- **AutoMilk Clean:** The machine automatically performs a steam cleaning of the milk system after each milk beverage. Ensure this process completes.
- **Milk System Components:** Disassemble and rinse the milk frother components thoroughly with warm water after each use.

6.2 Weekly/Regular Cleaning

- **Removable Brewing Unit:** Switch off the machine and remove the brewing unit. Rinse it under running water. Allow it to air dry before reinserting.
- **Water Tank:** Clean the water tank with a mild detergent and rinse thoroughly.
- **Bean Container:** Wipe the inside of the bean container with a dry cloth to remove any coffee oil residue.

6.3 Descaling and Cleaning Programs

The machine will prompt you when descaling or cleaning is required. Follow the on-screen instructions precisely.

- **Descaling Program:** Uses a descaling tablet to remove limescale buildup.
- **Cleaning Program:** Uses a cleaning tablet to remove coffee oil residue from the brewing unit.

7. TROUBLESHOOTING

This section addresses common issues you might encounter. For problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty; brewing unit blocked; coffee beans empty.	Fill water tank; clean brewing unit; fill bean container.
Coffee is too weak/strong.	Incorrect grind setting; incorrect strength setting.	Adjust grind setting (finer for stronger, coarser for weaker); adjust coffee strength on display.

Problem	Possible Cause	Solution
Milk is not frothing correctly.	Milk system dirty; milk too warm/cold; wrong type of milk.	Clean milk system thoroughly; use cold milk (approx. 4-8°C); try different milk types.
Error message on display.	Specific issue indicated by message.	Follow instructions on the display. If persistent, restart machine or contact support.

8. TECHNICAL SPECIFICATIONS

Detailed technical data for your Siemens EQ.6 plus s700 TE657M03DE.

Feature	Specification
Model Number	TE657M03DE
Brand	Siemens
Power	1500 Watts
Voltage	230V
Water Tank Capacity	1.7 Liters
Dimensions (L x W x H)	10 x 48 x 50 cm
Weight	10.5 Kilograms
Material	Stainless Steel
Noise Level	44 dB
Grinder Type	Ceramic

9. WARRANTY AND SUPPORT

Your Siemens EQ.6 plus s700 TE657M03DE automatic coffee machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

- **Spare Parts Availability:** Spare parts for this appliance are available for a period of 2 years from the date of purchase.
- **Customer Service:** For technical assistance, repairs, or warranty claims, please contact Siemens customer support. Contact details can typically be found on the Siemens website or in your product documentation.