

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER 90595857-03 Charger & Base Instruction Manual](#)

BLACK+DECKER 90595857-03

BLACK+DECKER 90595857-03 Charger & Base Instruction Manual

Model: 90595857-03 | Brand: BLACK+DECKER

INTRODUCTION

This document provides comprehensive instructions for the BLACK+DECKER 90595857-03 Charger & Base. This is a genuine OEM replacement part designed to charge specific BLACK+DECKER cordless tool battery packs. It is compatible with BLACK+DECKER models **BDH2020FLFH Type 1** and **BDH2020FLFH Type 2**.

SAFETY INFORMATION

Always read and understand all safety warnings and instructions before using this charger. Save these instructions for future reference.

- **Electrical Safety:** Do not expose the charger to rain or wet conditions. Water entering the charger will increase the risk of electric shock.
- **Compatibility:** Use this charger only with the specified BLACK+DECKER battery packs (BDH2020FLFH Type 1, BDH2020FLFH Type 2). Using other battery packs may create a risk of injury and fire.
- **Disconnection:** Unplug the charger from the electrical outlet when not in use or before performing any cleaning or maintenance.
- **Damage Inspection:** Do not operate the charger if its cord or plug is damaged. If the charger has been dropped, hit, or damaged in any way, have it checked by a qualified service person.
- **Ventilation:** Ensure adequate ventilation around the charger during operation. Do not block any ventilation openings.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- 1 x BLACK+DECKER 90595857-03 Charger & Base

SETUP

Follow these steps to set up your charger:

1. **Power Connection:** Ensure the power outlet is easily accessible and the voltage matches the charger's input requirements (240 Volts).
2. **Plug In:** Plug the charger into a standard electrical outlet.
3. **Battery Placement:** Place the compatible BLACK+DECKER battery pack (not included) onto the charger base. Ensure proper alignment of the battery terminals with the charger contacts. The battery should sit firmly or click into place.



Image of the BLACK+DECKER 90595857-03 Charger and Base, showing its compact design and connection points for a battery.

OPERATING INSTRUCTIONS

Once the charger is set up and the battery is correctly placed, the charging process will begin:

1. **Automatic Charging:** The charger will automatically detect the battery and initiate the charging cycle.
2. **Charging Indicators:** Refer to your specific BLACK+DECKER tool's battery manual for details on charging indicators, such as LED lights, which typically show the charging status (e.g., charging, fully charged, fault).
3. **Full Charge:** Allow the battery to fully charge before use for optimal performance and to maximize battery life.
4. **Disconnection:** Once the battery is fully charged, disconnect it from the charger. Unplug the charger from the power outlet when not in use.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your charger.

- **Cleaning:** Always disconnect the charger from the power supply before cleaning. Use a dry, soft cloth to wipe the exterior of the charger. Do not use liquids, solvents, or abrasive cleaners, as these can damage the charger.
- **Storage:** Store the charger in a dry, indoor location away from direct sunlight, moisture, and extreme temperatures. Ensure the charger is unplugged when not in use for extended periods.
- **Inspection:** Periodically inspect the charger cord and plug for any signs of damage. If damage is found, discontinue use and replace the charger.

TROUBLESHOOTING

If you encounter issues with your charger, refer to the following common problems and solutions:

- **Charger Not Working:**
 - Check if the charger is properly plugged into a functional electrical outlet.
 - Ensure the battery pack is correctly seated on the charger base, making full contact with the terminals.
 - Verify that the battery pack is compatible with this specific charger model (BDH2020FLFH Type 1 or Type 2).
- **Battery Not Charging:**
 - Confirm the battery is not excessively hot or cold. Allow it to reach room temperature before attempting to charge.
 - Inspect the battery and charger contacts for any dirt, debris, or damage. Clean contacts with a dry cloth if necessary.
 - If the issue persists after checking the above, the battery pack or the charger itself may be faulty and require replacement.

SPECIFICATIONS

Attribute	Detail
Model Number	90595857-03
Brand	BLACK+DECKER
Manufacturer	Black & Decker

Product Dimensions	6.25 x 1 x 7.25 inches
Item Weight	0.48 ounces
Input Voltage	240 Volts
Output Voltage	18 Volts
Compatible Models	BDH2020FLFH Type 1, BDH2020FLFH Type 2
UPC	686910448813

WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your original BLACK+DECKER tool purchase or visit the official BLACK+DECKER website. This replacement part's warranty may be subject to the terms and conditions of the original product or the retailer.

For further assistance or to inquire about replacement parts, you may contact BLACK+DECKER customer support directly or visit the [BLACK+DECKER Store on Amazon](#).