



[Manuals.plus](#) /

› [Megachef](#) /

› MegaChef Portable 1400W Single Induction Cooktop User Manual

Megachef 930110967M

MegaChef Portable 1400W Single Induction Cooktop User Manual

Model: 930110967M

INTRODUCTION

Thank you for choosing the MegaChef Portable 1400W Single Induction Cooktop. This appliance is designed for efficient and safe cooking, offering portability and advanced induction technology. Please read this manual thoroughly before operation to ensure proper use, maintenance, and to maximize the lifespan of your cooktop.

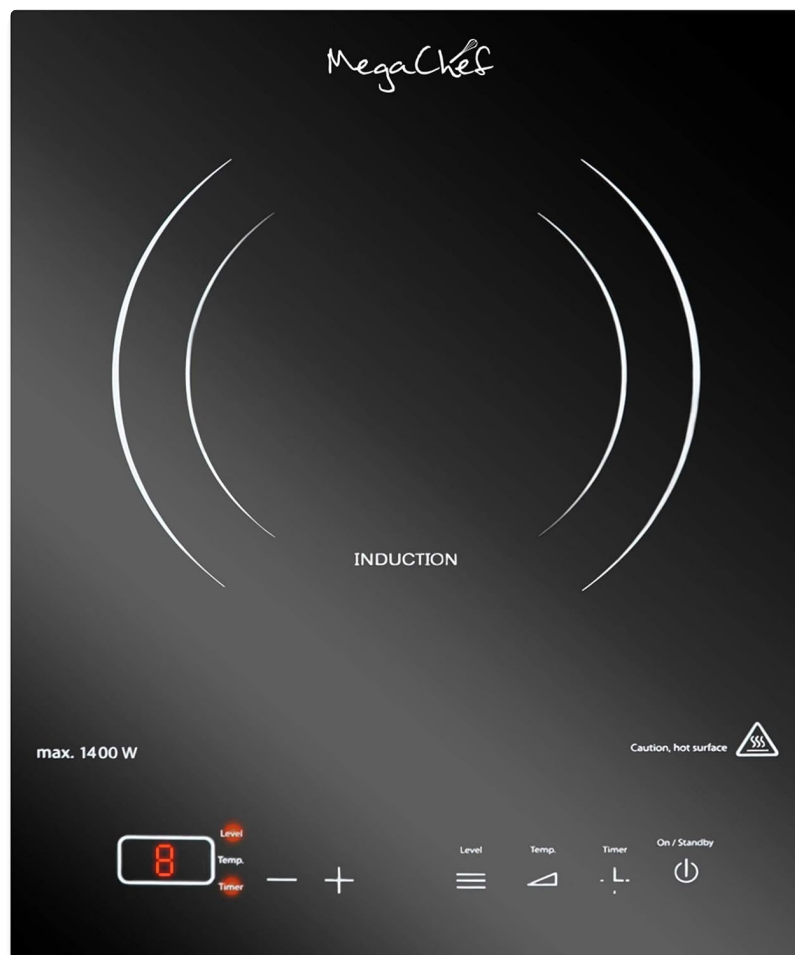


Image: The MegaChef Portable 1400W Single Induction Cooktop, highlighting its sleek black ceramic glass surface and intuitive digital control panel.

IMPORTANT SAFETY INFORMATION

To prevent injury or damage to the appliance, always observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other damage to persons or property.

- The magnetic fields generated during operation may lead to adverse effects. Pacemakers, or other similar implanted devices may be affected. Consult your doctor before use if you have such devices.
- Only use induction-compatible cookware.

PRODUCT OVERVIEW & COMPONENTS

Familiarize yourself with the main parts of your MegaChef Induction Cooktop:



Image: Key components and compatible cookware types of the MegaChef Induction Cooktop.

- **Ceramic Glass Surface:** The smooth, durable cooking surface where cookware is placed. Easy to clean.
- **Digital LED Display:** Shows power level, temperature, and timer settings.
- **Touchscreen Control Panel:** Intuitive controls for power, temperature, and timer functions.
- **Induction Coil:** Located beneath the ceramic surface, generates electromagnetic fields to heat compatible cookware.

SETUP

Follow these steps for initial setup:

1. **Unpacking:** Carefully remove the cooktop from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the cooktop on a stable, flat, heat-resistant surface. Ensure there is adequate ventilation around the unit (at least 4 inches of clear space on all sides). Do not place on metal surfaces.
3. **Power Connection:** Plug the power cord into a standard 220V electrical outlet. Ensure the outlet is properly grounded.

OPERATING INSTRUCTIONS

Operating your MegaChef Induction Cooktop is simple:

Powering On/Off

- Place induction-compatible cookware with contents on the center of the ceramic glass surface.
- Press the **On/Standby** button (*power symbol*) to turn on the cooktop. The display will illuminate.
- To turn off, press the **On/Standby** button again.

Adjusting Power/Temperature

- After powering on, the cooktop will default to a power level.
- Use the "-" and "+" buttons to adjust the power level (1-12) or temperature (140°F to 430°F).
- Press the **Temp.** button to switch between power level and temperature modes.

Timer Function

- Press the **Timer** button. The display will show a default time.
- Use the "-" and "+" buttons to set the desired cooking time.
- The cooktop will automatically shut off once the timer expires.

Compatible Cookware

Induction cooktops require cookware with a magnetic base. Compatible materials include:

- Cast iron
- Enamel on steel
- Stainless steel with a magnetic base
- Carbon steel

To test if your cookware is compatible, place a magnet on the bottom. If it sticks, it is compatible.



Image: Visual representation of induction heating, where the cooktop itself does not heat up directly, but transfers heat to the cookware.



Image: The MegaChef Induction Cooktop actively cooking, showcasing its use in a kitchen setting.

MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your cooktop:

- Always unplug the cooktop and allow it to cool completely before cleaning.
- Wipe the ceramic glass surface with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive ceramic

cooktop cleaner.

- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
- Wipe the control panel with a soft, damp cloth. Ensure no liquid enters the control area.
- Do not immerse the cooktop in water or any other liquid.
- Keep the ventilation openings clear of dust and debris to ensure proper airflow.

TROUBLESHOOTING

If you encounter issues, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Cooktop not plugged in; Power button not pressed.	Check power outlet and plug connection; Press the On/Standby button.
Cooktop turns on but does not heat.	Cookware is not induction-compatible; Cookware is too small or too large; No cookware on surface.	Use induction-compatible cookware; Ensure cookware base covers the induction zone; Place cookware on the surface.
Display shows "E0" or other error code.	No cookware detected; Overheating; Internal malfunction.	Place compatible cookware on surface; Allow unit to cool down; If error persists, contact customer support.
Fan noise during operation.	Normal operation.	The internal cooling fan operates to prevent overheating. This is normal.
Cooktop cycles on and off at lower settings.	Normal operation for maintaining low temperatures.	This is typical for induction cooktops to maintain precise low heat.

SPECIFICATIONS

Technical details for the MegaChef Portable 1400W Single Induction Cooktop:

Feature	Detail
Model Number	930110967M
Wattage	1400 watts
Voltage	220 Volts
Controls Type	Touch
Heating Elements	1
Material	Ceramic Glass
Color	Black
Temperature Range	140°F to 430°F

Feature	Detail
Item Weight	7.13 pounds
Package Dimensions	17.91 x 13.35 x 4.09 inches
Cord Length	45 inches



Image: Dimensions of the MegaChef Portable Induction Cooktop.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Megachef website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Megachef customer service through their official channels. Please have your model number (930110967M) and purchase date ready when contacting support.

