

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

› [Wonlink](#) /

› Wonlink 10x20 ft Instant Pop-Up Canopy Instruction Manual

## Wonlink 10x20 ft Instant Pop up Canopy

# Wonlink 10x20 ft Instant Pop-Up Canopy Instruction Manual

Model: 10x20 ft Instant Pop up Canopy

## 1. SAFETY INFORMATION

---

Please read and understand all safety information before setting up or using this canopy. Failure to follow these instructions may result in injury or damage to the product.

- **Weather Conditions:** Do not use this canopy in heavy rain, strong winds, or other severe weather conditions. This product is not designed for permanent installation and should be taken down during adverse weather to prevent damage or collapse.
- **Anchoring:** Always secure the canopy with the provided ground nails and ropes to prevent it from lifting or moving due to wind. Additional weights (not included) are recommended for increased stability.
- **Assembly:** Assembly requires at least 2 people. Attempting to set up the canopy alone may lead to injury or damage to the frame and fabric.
- **Clearance:** Ensure adequate clearance from power lines, trees, and other structures during setup and use.
- **Fire Safety:** Keep all flame and heat sources away from the canopy fabric. The fabric is not fireproof.
- **Supervision:** Do not leave children or pets unattended under the canopy.

## 2. PACKAGE CONTENTS

---

Verify that all components listed below are present in your package before beginning assembly.

- 1 x Steel Frame Stand (Pre-assembled)
- 1 x Top Cover (210D Oxford Fabric)
- 4 x Side Walls (with transparent windows)
- 1 x Wheeled Carrying Bag
- 6 x Ropes
- 12 x Ground Nails



Figure 2.1: All components included in the package.



Figure 2.2: Wheeled carrying bag for easy transport.

### 3. SETUP INSTRUCTIONS

---

Follow these steps for quick and easy setup. A minimum of 2 people is recommended for efficient and safe assembly.

1. **Step 1: Unpack and Position Frame.** Take the fully assembled steel frame out of the wheeled carrying bag. Place the frame in the desired setup location and partially pull it apart, ensuring all legs are on the ground.
2. **Step 2: Attach Top Cover.** Carefully place the top cover over the partially extended frame. Ensure the corners of the fabric align with the frame's corners. Secure the top cover to the frame using the hook and loop fasteners.
3. **Step 3: Extend Legs and Adjust Height.** With one person at each end, slowly pull the frame outwards until it is fully extended. Push the buttons on the 6 legs to adjust the tent to your desired height position. Ensure all legs are locked into place.
4. **Step 4: Attach Side Walls (Optional).** If desired, attach the 4 side walls to the canopy frame using the hook and loop fasteners. The side walls are detachable and can be installed or removed as needed.
5. **Step 5: Secure the Canopy.** Use the provided 12 ground nails to anchor the canopy legs to the ground. Attach the 6 ropes to the canopy frame and stake them into the ground at an angle to provide additional stability.



Figure 3.1: Visual guide for canopy setup steps.

**☀️ BLOCK 99% UV**

**💧 WATERPROOF**

It is not recommended to use it in strong wind and heavy rain

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Adjusting Height

The canopy features three adjustable height settings. To adjust the height:

1. Ensure the canopy is not under tension from strong winds.
2. Locate the push buttons on each of the 6 legs.
3. Simultaneously press the buttons and slide the inner leg section up or down to the desired height.
4. Ensure the button clicks into place, securing the leg at the chosen height. Verify all legs are set to the same height for stability.

### 4.2. Using Removable Side Walls

The canopy includes four removable side walls with transparent windows, offering versatility for different weather conditions and privacy needs.

- **Installation:** Attach the side walls to the canopy frame using the integrated hook and loop fasteners along the top and sides.
- **Removal:** Simply detach the hook and loop fasteners to remove the side walls. This allows for increased ventilation and an open-air feel during warmer weather.
- **Weather Protection:** When installed, the side walls provide additional protection from sun, light rain, and wind.



Figure 4.1: Canopy dimensions and adjustable height settings.

## 5. MAINTENANCE

---

Proper maintenance will extend the life of your canopy.

### 5.1. Cleaning

- **Fabric:** Clean the top cover and side walls with mild soap and water. Do not use harsh detergents, bleach, or abrasive cleaners, as these can damage the fabric's UV coating and waterproofing. Rinse thoroughly and allow to air dry completely before storage.
- **Frame:** Wipe the steel frame with a damp cloth to remove dirt and debris. Dry thoroughly to prevent rust.

### 5.2. Storage

- Ensure all fabric components are completely dry before folding and storing to prevent mold and mildew.
- Fold the top cover and side walls neatly.
- Collapse the frame according to the reverse of the setup instructions.
- Store all components in the wheeled carrying bag in a cool, dry place, away from direct sunlight and extreme

temperatures.



Figure 5.1: Waterproof fabric detail.

## 6. TROUBLESHOOTING

---

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Fabric tears during setup	Top cover not centered or fully spread before extending frame; excessive force during extension.	Ensure the top cover is perfectly centered and loosely draped over the frame before fully extending. Extend the frame slowly and evenly with multiple people. Avoid forcing the frame.
Canopy unstable in light wind	Insufficient anchoring; legs not fully locked.	Always use all provided ground nails and ropes. Ensure all leg height adjustment buttons are securely locked. Consider using additional weight bags or stakes for extra stability.
Water pooling on top cover	Improper setup or uneven ground causing sagging.	Ensure the frame is fully extended and all legs are at the same height. Set up on level ground. If pooling persists, gently push up from underneath to clear water.
Frame difficult to extend/retract	Joints are stiff or dirty; frame is bent.	Clean joints and apply a silicone-based lubricant if necessary. Ensure no parts are bent or obstructed. Always use multiple people for extension/retraction.

## 7. SPECIFICATIONS

---

Key specifications for your Wonlink 10x20 ft Instant Pop-Up Canopy.

- **Dimensions (L x W):** 20 ft x 10 ft (6.1 m x 3.05 m)
- **Shade Area:** 200 sq ft
- **Adjustable Height Settings:** 10.8 ft, 10.5 ft, 10.2 ft (approx. 3.29 m, 3.20 m, 3.11 m)
- **Frame Material:** Alloy Steel
- **Top Cover Material:** 210D Oxford Premium Polyester Fabric
- **Water Resistance Level:** Water Resistant
- **UV Protection:** Blocks 99% of UV rays

- **Item Weight:** 74.8 pounds (33.9 kg)
- **Packed Dimensions:** 66.14"L x 14.56"W x 8.66"H (approx. 168 cm x 37 cm x 22 cm)
- **Color:** White



Figure 7.1: Product details and key features.

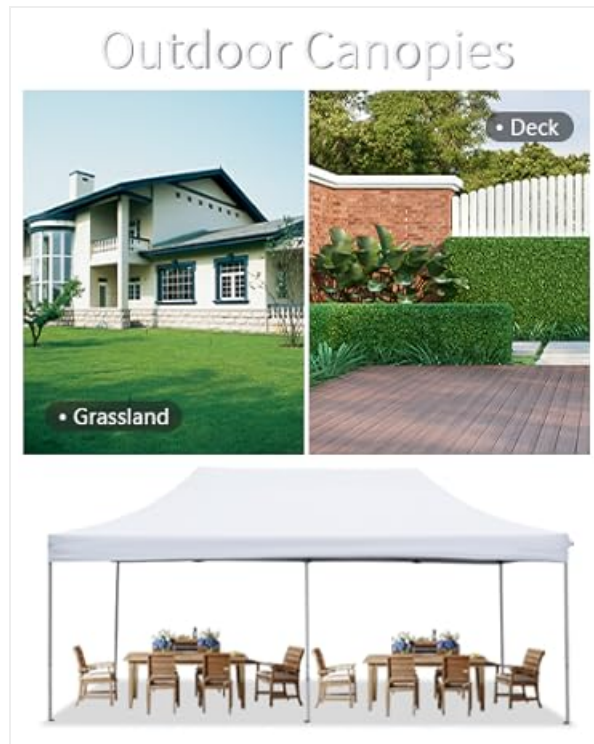


Figure 7.2: Enhanced design features for durability and stability.

## 8. WARRANTY AND SUPPORT

Your Wonlink 10x20 ft Instant Pop-Up Canopy is designed for quality and durability. For any questions or concerns, please refer to the following information:

- **Returns:** This product is eligible for a 30-day easy return policy. Please refer to your purchase platform for specific return procedures.
- **Customer Support:** For assistance with product issues, missing parts, or general inquiries, please contact Wonlink customer service through the retailer where the product was purchased.