

[Manuals.plus](#) /

› [ORKA](#) /

› ORKA Talking Madi Digital Alarm Clock Instruction Manual

ORKA PERVIN

ORKA Talking Madi Digital Alarm Clock

INSTRUCTION MANUAL

About Your ORKA Talking Madi Clock

The ORKA Talking Madi Digital Alarm Clock is designed to assist individuals, particularly seniors and those with visual or hearing impairments, with daily timekeeping and medication reminders. It features a large display, clear voice announcements, and personalized voice recording capabilities to enhance independence and provide peace of mind.



The ORKA Talking Madi Digital Alarm Clock with its large, clear display.

Product Overview

The ORKA Talking Madi clock offers a range of features to support daily routines:

- **Large, Clear Digital Display:** Shows the full day of the week, time (AM/PM), and includes a sun or moon icon for day/night indication.
- **Voice Announcement:** Verbally announces the current time, day, and date.
- **Customizable Alarms:** Up to 8 independent alarms with options for tone, bell, or personalized voice messages.
- **Voice Recording:** Record your own messages for medication or activity reminders.
- **Adjustable Volume:** Up to 90 decibels, suitable for individuals with hearing impairments.
- **Adjustable Brightness:** Control the display intensity for optimal visibility.
- **Multi-language Support:** Speaks in English (US & UK), Spanish, German, French, and Italian.
- **USB Charging Port:** Conveniently charge external devices.
- **External Speaker Jack:** Connect an external speaker for enhanced audio output.
- **Power & Backup:** AC powered with an included CR2 battery for settings retention during power outages.

Setup

1. Power Connection

Connect the provided AC adapter to the clock's power input and then to a standard electrical outlet. The clock requires continuous AC power for operation. The included CR2 battery serves as a backup to retain your settings in case of a power interruption.

Note:

Not battery operated.
Power cord is required.



The ORKA Talking Madi clock with its power adapter and manual.

2. Setting Time and Date

1. Locate the **MODE** switch on the back of the clock.
2. Slide the **MODE** switch to the "Time" position.
3. Use the **UP** (▲) and **DOWN** (▼) arrow buttons on the back to adjust the hour and minute.
4. Slide the **MODE** switch to the "Prog" (Program) position to set the date (month, day, year). Use the **UP** (▲) and **DOWN** (▼) arrow buttons to adjust.
5. Once the time and date are set, slide the **MODE** switch back to "Lock" to prevent accidental changes.

3. Language Selection

1. Slide the **MODE** switch on the back to the "Lang" (Language) position.
2. Use the **UP** (▲) and **DOWN** (▼) arrow buttons to cycle through the available languages: English (US), English (UK), Spanish, German, French, and Italian.
3. Select your desired language.

- Slide the **MODE** switch back to "Lock" when finished.



Rear controls for setting time, date, and language.

Operating Instructions

1. Display Information

The large, high-definition display clearly shows the day of the week (e.g., TUESDAY), the current time (e.g., 10:25 AM), and a small icon (sun for day, moon for night) to provide additional context.



Detailed view of the clock's large display and dimensions.

2. Time and Message Playback

- **Announce Current Time:** Press the large "Time ?" button on the top of the clock to hear the current time, day, and date announced verbally.
- **Play Recorded Messages:** Press the "Play Messages" button on the top of the clock to hear any recorded messages associated with active alarms.

3. Alarm Settings

The clock supports up to 8 independent alarms.

1. Setting an Alarm:

- Slide the **MODE** switch on the back to the "Alarm" position.
- Use the **ALARM** selector switch (numbered 1-8) to choose which alarm you wish to set or modify.
- Use the **UP** (▲) and **DOWN** (▼) arrow buttons to set the desired alarm time.

- Slide the **MODE** switch to "Tone" to select the alarm type: tone, bell, or voice message.
- Slide the **MODE** switch back to "Lock" when you are finished setting the alarm.

2. Recording Voice Messages:

- Slide the **MODE** switch to the "Prog" (Program) position.
- Select the desired alarm number (1-8) using the **ALARM** selector switch.
- Press and hold the red "Record" button on the back of the clock while speaking your message. Release the button when you are finished.
- Press the "Play" button to review your recorded message.
- To erase a message, press the "Erase" button.
- Slide the **MODE** switch back to "Lock" after recording.

3. **Stopping an Alarm:** When an alarm sounds, press the large "OK" button on the top of the clock to silence it. Voice messages will loop for 30 minutes until the "OK" button is pressed.





Oversized, easy-to-operate controls





Up to 90 db.
It's LOUD.



Mute, Tune
and Voice options.



Oversized, easy-to-operate controls on the ORKA Talking Madi clock.

Your browser does not support the video tag.

Video demonstrating how to operate the ORKA Talking Madi alarm clock, including setting time and alarms.

4. Additional Controls

- **Volume Adjustment:** Use the vertical slider labeled "VOLUME" on the side of the clock to increase or decrease the loudness of voice announcements and alarms.
- **Brightness Adjustment:** Use the vertical slider labeled "BRIGHTNESS" on the side of the clock to adjust the intensity of the display.
- **USB Charging Port:** A USB port is located on the side of the clock, allowing you to charge compatible external devices.
- **External Speaker Jack:** A 3.5mm audio jack is available on the side to connect an external speaker for increased audio output, if desired.

ORKA
Never Forget Again

All-In-One




*Phone, speaker and cable not included



Charge your Devices



Adjustable Brightness

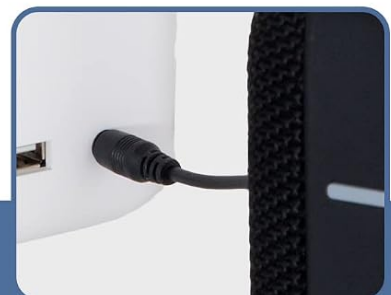

Plug in External Speakers
for Extra Volume

Side features including USB charging, brightness control, and external speaker port.

Maintenance

Care and Cleaning

To maintain your ORKA Talking Madi clock, wipe it regularly with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the display or casing.

Battery Replacement

The clock uses one CR2 battery for backup purposes. If the clock fails to retain its settings during a power outage, the CR2 battery may need to be replaced. Refer to the battery compartment on the underside of the clock for specific replacement instructions.

Troubleshooting

- **Clock Resetting Unexpectedly:** Ensure the AC power adapter is securely plugged into both the clock and the wall outlet. A loose connection can cause the clock to lose power and reset, although the backup battery should preserve settings.
- **No Sound or Low Volume:** Check the volume slider on the side of the clock. Ensure it is not set to the minimum level or muted.
- **Display Not Visible or Too Bright:** Adjust the brightness slider on the side of the clock to your preferred level.
- **Alarm Not Sounding:** Verify that the alarm is correctly set in "Alarm" mode and that the volume is adequate. Confirm that the alarm type (tone, bell, or voice) is selected as desired.
- **Voice Message Not Playing:** Ensure a voice message has been successfully recorded for the selected alarm and that the alarm type is set to "Voice" in the settings.

Specifications

Brand	ORKA
Model Number	PERVIN
Display Type	Digital
Color	White
Product Dimensions	9.63"W x 5.69"H
Power Source	Corded Electric (AC)
Battery Backup	1 CR2 battery (included)
Special Features	Voice Recordable, Adjustable Brightness, Adjustable Volume, Multi-language support
Max Volume	90 decibels
Number of Alarms	Up to 8
Alarm Duration	30-minute loop for voice messages
Languages	English (US & UK), Spanish, German, French, Italian
Mounting Type	Tabletop
Item Weight	2 Pounds

Warranty & Support

Warranty Information

ORKA is committed to product satisfaction. If you are not completely satisfied with your ORKA Talking Madi Digital Alarm Clock, please refer to the

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question